



X13SAZ-F/Q

USER'S MANUAL

Revision 1.1

The information in this user's manual has been carefully reviewed and is believed to be accurate. The manufacturer assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this manual, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this manual, please see our website at [www.supermicro.com](http://www.supermicro.com).**

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this manual at any time and without notice. This product, including software and documentation, is the property of Supermicro and/ or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL Super Micro Computer, Inc. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between manufacturer and customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)".



**WARNING:** This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.

Manual Revision 1.1

Release Date: October 17, 2024

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document. Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2024 by Super Micro Computer, Inc.  
All rights reserved.

**Printed in the United States of America**

# Preface

## About This Manual

This manual is written for system integrators, IT technicians and knowledgeable end users. It provides information for the installation and use of the X13SAZ-F/Q motherboard.

## About This Motherboard

The Supermicro X13SAZ-F/Q supports the Intel® 12<sup>th</sup>/13<sup>th</sup>/14<sup>th</sup> Generation Core i3/i5/i7/i9, Pentium, and Celeron series processor and TDP of up to 125 W in an LGA1700 socket. The motherboard supports PCIe 4.0/5.0 slots, HDMI, DVI-D, and DisplayPort. The X13SAZ-Q supports up to 128 GB of DDR5 Non-ECC UDIMM memory in four slots, with X13SAZ-F adding additional support for ECC memory. The X13SAZ-F/Q is optimized for high-performance, high-end computing platforms that address the needs of high-end computing platforms that address the needs of next generation applications. Please note that this motherboard is intended to be installed and serviced by professional technicians only. For processor/memory updates, please refer to our website at <http://www.supermicro.com/products/>.

## Conventions Used in the Manual

Special attention should be given to the following symbols for proper installation and to prevent damage done to the components or injury to yourself:



**Warning!** Indicates important information given to prevent equipment/property damage or personal injury.



**Warning!** Indicates high voltage may be encountered while performing a procedure.



**Important:** Important information given to ensure proper system installation or to relay safety precautions.



**Note:** Additional Information given to differentiate various models or provides information for proper system setup.

## Contacting Supermicro

### Headquarters

Address: Super Micro Computer, Inc.  
980 Rock Ave.  
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: [Marketing@supermicro.com](mailto:Marketing@supermicro.com) (General Information)  
[Sales-USA@supermicro.com](mailto:Sales-USA@supermicro.com) (Sales Inquiries)  
[Government\\_Sales-USA@supermicro.com](mailto:Government_Sales-USA@supermicro.com) (Gov. Sales Inquiries)  
[Support@supermicro.com](mailto:Support@supermicro.com) (Technical Support)  
[RMA@supermicro.com](mailto:RMA@supermicro.com) (RMA Support)  
[Webmaster@supermicro.com](mailto:Webmaster@supermicro.com) (Webmaster)

Website: [www.supermicro.com](http://www.supermicro.com)

### Europe

Address: Super Micro Computer B.V.  
Het Sterrenbeeld 28, 5215 ML  
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: [Sales\\_Europe@supermicro.com](mailto:Sales_Europe@supermicro.com) (General Information)  
[Support\\_Europe@supermicro.com](mailto:Support_Europe@supermicro.com) (Technical Support)  
[RMA\\_Europe@supermicro.com](mailto:RMA_Europe@supermicro.com) (RMA Support)

Website: [www.supermicro.nl](http://www.supermicro.nl)

### Asia-Pacific

Address: Super Micro Computer, Inc.  
3F, No. 150, Jian 1st Rd.  
Zhonghe Dist., New Taipei City 235  
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3992

Email: [Sales-Asia@supermicro.com.tw](mailto:Sales-Asia@supermicro.com.tw) (Sales Inquiry)  
[Support@supermicro.com.tw](mailto:Support@supermicro.com.tw) (Technical Support)  
[RMA@supermicro.com.tw](mailto:RMA@supermicro.com.tw) (RMA Support)

Website: [www.supermicro.com.tw](http://www.supermicro.com.tw)

# Table of Contents

## **Chapter 1 Introduction**

1.1 Checklist.....	8
Quick Reference .....	11
Quick Reference Table.....	12
Motherboard Features.....	14
1.2 Processor and Chipset Overview.....	17
1.3 Special Features .....	17
Recovery from AC Power Loss.....	17
1.4 System Health Monitoring.....	18
Onboard Voltage Monitors .....	18
Fan Status Monitor with Firmware Control .....	18
Environmental Temperature Control .....	18
System Resource Alert.....	18
1.5 ACPI Features.....	19
1.6 Power Supply .....	19
1.7 Serial Port.....	20

## **Chapter 2 Installation**

2.1 Static-Sensitive Devices.....	21
Precautions .....	21
Unpacking .....	21
2.2 Processor and Heatsink Installation.....	22
Installing the LGA1700 Processor .....	22
Installing a CPU Heatsink.....	25
Removing the Heatsink.....	28
2.3 Motherboard Installation.....	29
Tools Needed .....	29
Location of Mounting Holes .....	29
Installing the Motherboard.....	30
2.4 Memory Support and Installation .....	31
Memory Support.....	31
DIMM Module Population Configuration .....	31

General Guidelines for Optimizing Memory Performance .....	32
DIMM Installation .....	33
DIMM Removal .....	33
2.5 Rear I/O Ports .....	34
2.6 Front Control Panel .....	41
2.7 Connectors .....	46
Power Connections .....	46
Headers .....	49
2.8 Jumper Settings .....	58
How Jumpers Work .....	58
2.9 LED Indicators .....	63
<b>Chapter 3 Troubleshooting</b>	
3.1 Troubleshooting Procedures .....	66
Before Power On .....	66
No Power .....	66
No Video .....	67
System Boot Failure .....	67
Memory Errors .....	67
Losing the System's Setup Configuration .....	68
When the System Becomes Unstable .....	68
3.2 Technical Support Procedures .....	70
3.3 Frequently Asked Questions .....	71
3.4 Battery Removal and Installation .....	72
Battery Removal .....	72
Proper Battery Disposal .....	72
Battery Installation .....	72
3.5 Returning Merchandise for Service .....	73
<b>Chapter 4 UEFI BIOS</b>	
4.1 Introduction .....	74
4.2 Main Setup .....	75
4.3 Advanced .....	77
4.4 Event Logs .....	105
4.5 IPMI .....	107

---

---

4.6 Security.....	110
4.7 Boot.....	114
4.8 Save & Exit.....	116
4.9 MEBx.....	118
<b><i>Appendix A BIOS Codes</i></b>	
A.1 BIOS Error POST (Beep) Codes .....	119
A.2 Additional BIOS POST Codes.....	120
<b><i>Appendix B Software</i></b>	
B.1 Microsoft Windows OS Installation.....	121
B.2 Driver Installation.....	123
B.3 SuperDoctor® 5.....	124
<b><i>Appendix C Standardized Warning Statements</i></b>	
<b><i>Appendix D UEFI BIOS Recovery</i></b>	
D.1 Overview.....	128
D.2 Recovering the UEFI BIOS Image.....	128
D.3 Recovering the BIOS Block with a USB Device .....	129

# Chapter 1

## Introduction

Congratulations on purchasing your computer motherboard from an industry leader. Supermicro motherboards are designed to provide you with the highest standards in quality and performance.

In addition to the motherboard, several important parts that are included in the retail box are listed below. If anything listed is damaged or missing, please contact your retailer.

### 1.1 Checklist

Main Parts List		
Description	Part Number	Quantity
Supermicro Motherboard	X13SAZ-F/Q	1
I/O Shield	MCP-260-00158-0N	1
SATA Cables	CBL-0044L	2
<a href="#">Quick Reference Guide</a>	MNL-2477-QRG	1

### Important Links


For your system to work properly, please follow the links below to download all necessary drivers/utilities and the user's manual for your server.

- Supermicro product manuals: <http://www.supermicro.com/support/manuals/>
- Product drivers and utilities: <https://www.supermicro.com/wdl/driver>
- Product safety info: [http://www.supermicro.com/about/policies/safety\\_information.cfm](http://www.supermicro.com/about/policies/safety_information.cfm)
- A secure data deletion tool designed to fully erase all data from storage devices can be found at our website: [https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9\\_Secure\\_Data\\_Deletion\\_Utility/](https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wdl/utility/Lot9_Secure_Data_Deletion_Utility/)
- If you have any questions, please contact our support team at: [support@supermicro.com](mailto:support@supermicro.com)

This manual may be periodically updated without notice. Please check the Supermicro website for possible updates to the manual revision level.



Figure 1-1. X13SAZ-F/Q Motherboard Image

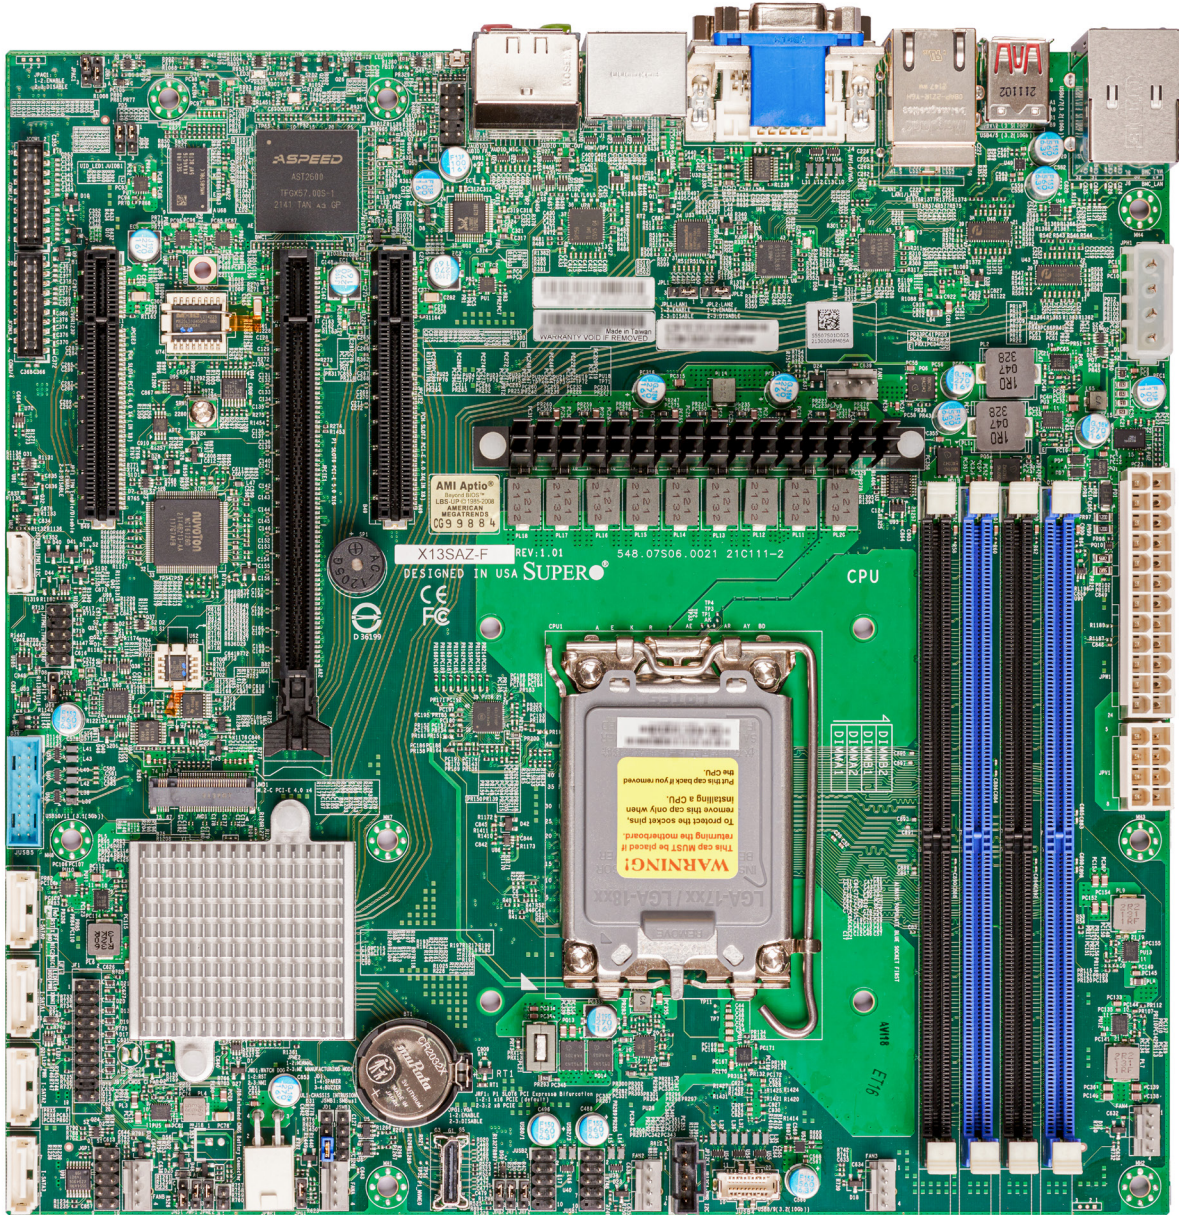


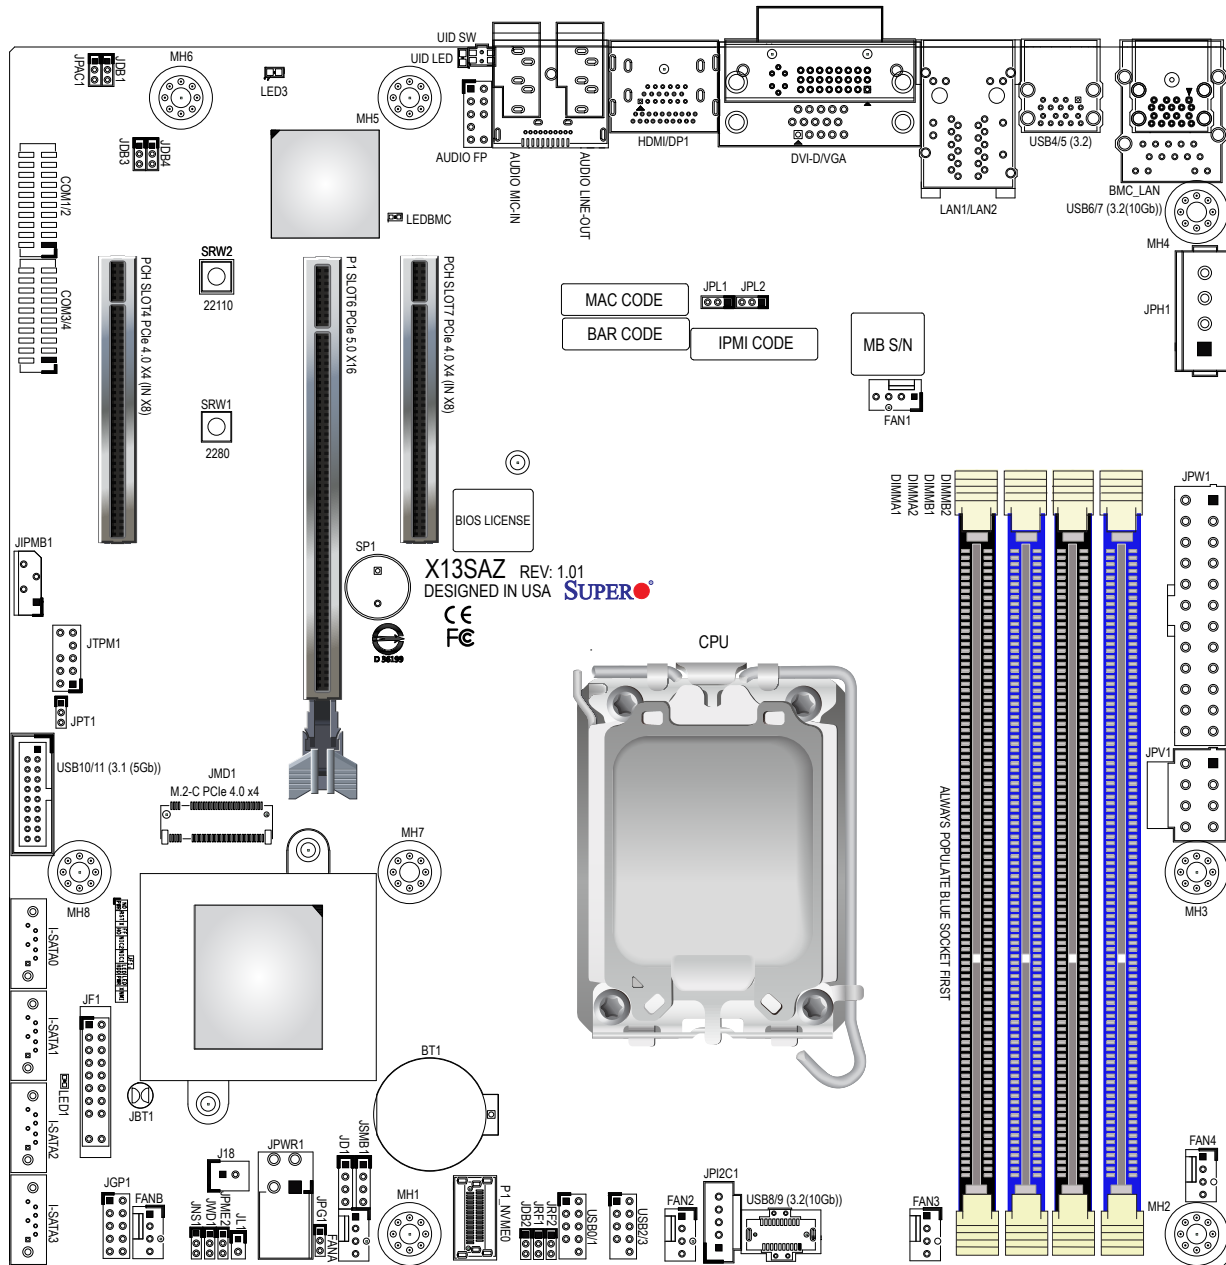
 **Note:** All graphics shown in this manual were based upon the latest PCB revision available at the time of publication of the manual. The motherboard you received may or may not look exactly the same as the graphics shown in this manual.


Figure 1-2. X13SAZ-F/Q Motherboard Layout

(not drawn to scale)



**Note:** Components not documented are for internal testing only.

## Quick Reference

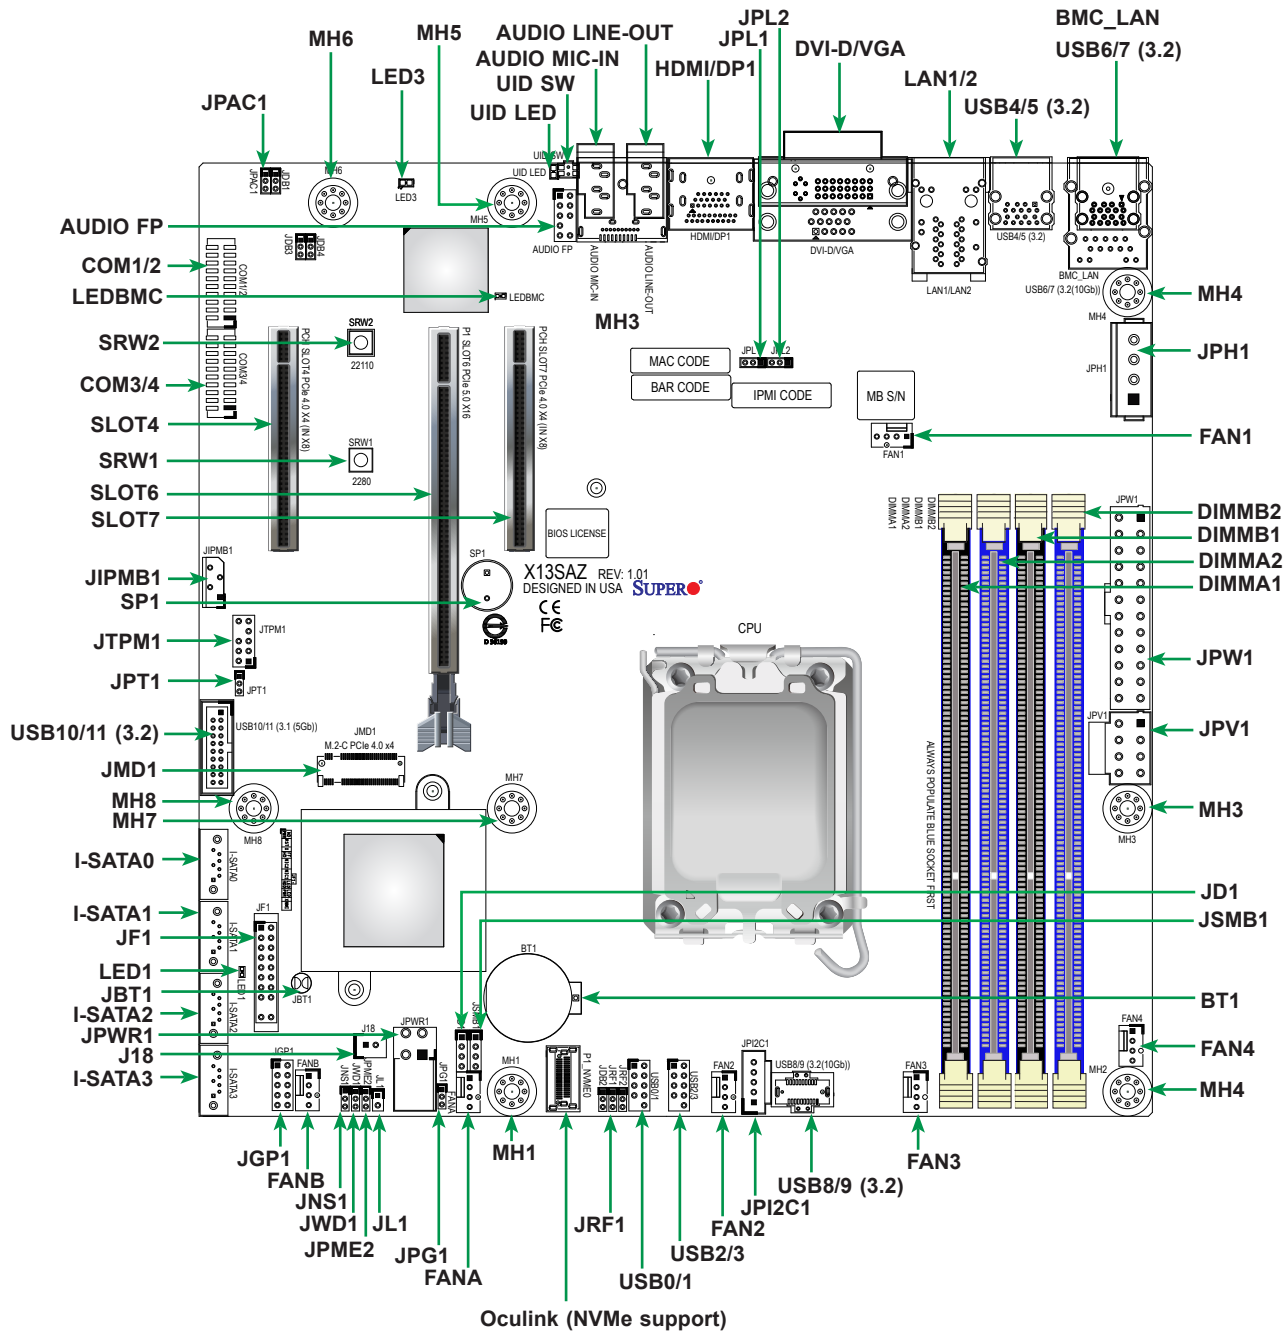

## Notes:

- See [Chapter 2](#) for detailed information on jumpers, I/O ports, and JF1 front panel connections. Jumpers/LED indicators not indicated are used for testing only.
- "■" indicates the location of Pin 1.
- Use only the correct type of onboard CMOS battery as specified by the manufacturer. Do not install the onboard battery upside down to avoid possible explosion.

## Quick Reference Table


Jumper	Description	Default Setting (*)		
JBT1	CMOS Clear	Open (Normal)		
JNS1	NVMe/SATA Mode Select	Pins 1–2: SATA (Customized BIOS Needed) Pins 2–3: NVMe (Default)		
JPAC1	Audio Enable	Pins 1–2 (Enabled)		
JPG1	VGA Enable/Disable	Pins 1–2 (Enabled)		
JPL1	LAN1 Enable/Disable	Pins 1–2 (Enabled)		
JPL2	LAN2 Enable/Disable	Pins 1–2 (Enabled)		
JPME2	ME Manufacturing Mode	Pins 1–2 (Normal)		
JPT1	Onboard TPM Module Enable/Disable	Pins 1–2 (Enabled)		
JRF1	Slot6 PCIe Bifurcation	JRF1 Pins 1–2 Pins 2–3	JRF2 Pins 1–2 Pins 1–2	PEG x16* x8x8
JWD1	Watchdog Timer	Pins 1–2 (Reset)		
LED	Description	Status		
LED1	Power LED	Solid Green: Power On Blinking Green: S3 Status		
LED3	BMC Power/Fan LED	Solid Red: PWR Fail or FAN Fail		
LED BMC	BMC Heartbeat LED	Blinking Green: BMC Normal		
UID LED	Unit Identifier (UID) LED	Solid Blue: Unit Identified		
Connector	Description			
AUDIO FP	Audio Front Panel Connector			
AUDIO LINE-OUT	Back panel Audio Line Out Port			
AUDIO MIC-IN	Back panel Audio Mic In Port			
BT1	Extended CMOS Battery			
BMC_LAN	Dedicated BMC LAN Port			
COM1/2, COM3/4	COM Headers (COM1/2 support RS-232/422/485, COM3/4 support RS-232)			
DVI-D/VGA	Digital Visual Interface/VGA Port (VGA via the BMC)			
FAN1–FAN4, FANA, FANB	Fan Headers			
HDMI/DP1	High Definition Multimedia Interface and DisplayPort			
I-SATA0–3	SATA 3.0 Ports			
J18	Extended CMOS Battery Connector			
JD1	Speaker Header (Pins 1–4: Speaker, Pins 3–4: Buzzer)			
JF1	Front Control Panel Header			
JGP1	General Purpose I/O Header			
JIPMB1	4-pin BMC External I <sup>2</sup> C Header (for an IPMI card)			
JL1	Chassis Intrusion Header			



**Note:** Table is continued on the next page.

<b>Connector</b>	<b>Description</b>
JMD1	M.2 M-Key PCIe 4.0 x4 Slot (2280/22110 form factor)
JPH1	4-pin HDD Power Connector
JPI2C1	Power System Management Bus (SMB) I <sup>2</sup> C Header
JPV1	8-pin 12V DC Power Connector for CPU (Required) or alternative single power for special enclosure when the 24-pin ATX power is not in use
JPW1	24-pin Power Connector
JPWR1	4-pin GPU Power Connector
JSMB1	System Management Bus Header
JTPM1	Trusted Platform Module/Port 80 Connector
LAN1, LAN2	LAN Ports
MH1–MH8	Mounting Holes
P1_NVME0	Oculink (NVMe Support)
SLOT4, SLOT7	PCIe 4.0 x4 (IN x8) Slots
SLOT6	PCIe 5.0 x16 Slot
SP1	Internal Buzzer/Speaker
UID SW	Unit Identifier Switch
USB0/1, USB2/3	Front Accessible USB 2.0 Header
USB4/5, USB6/7	Back Panel USB 3.2 (10 Gb) Ports
USB8/9	Front Accessible USB 3.2 (10 Gb) Header
USB10/11	Front Accessible USB 3.1 (5Gb) Header


## Motherboard Features

Motherboard Features	
<b>CPU</b>	<ul style="list-style-type: none"> <li>Supports an Intel 12<sup>th</sup>/13<sup>th</sup>/14<sup>th</sup> Generation Core i3/i5/i7/i9, Pentium, and Celeron series processor with a TDP of up to 125 W in an LGA1700 socket</li> </ul>
<b>Memory</b>	<ul style="list-style-type: none"> <li>The X13SAZ-F supports up to 128 GB of DDR5 ECC/Non-ECC UDIMM memory with speeds of up to 4400 MT/s with one DIMM, or 4000 MT/s with two DIMMs single rank, or 3600 MT/s with two DIMMs dual rank in four memory slots.</li> <li>The X13SAZ-Q supports up to 128 GB of DDR5 Non-ECC UDIMM with speeds of up to 4400 MT/s with one DIMM, or 4000 MT/s with two DIMMs single rank, or 3600 MT/s with two DIMMs dual rank in four memory slots.</li> </ul>
<b>DIMM Size</b>	<ul style="list-style-type: none"> <li>Up to 32 GB</li> </ul> <p> <b>Note:</b> For the latest CPU/memory updates, please refer to our website at <a href="http://www.supermicro.com/products/motherboard">http://www.supermicro.com/products/motherboard</a>.</p>
<b>Chipset</b>	<ul style="list-style-type: none"> <li>Intel PCH R680E/Q670E Chipset</li> </ul>
<b>Expansion Slots</b>	<ul style="list-style-type: none"> <li>Two PCIe 4.0 x4 (IN x8) slots (SLOT4, SLOT7)</li> <li>One PCIe 5.0 x16 slot (SLOT6)</li> <li>M.2 PCIe 4.0 x4 slot (2280/22110 form factor)</li> </ul>
<b>Network</b>	<ul style="list-style-type: none"> <li>Intel Ethernet Controller I225-LM</li> </ul>
<b>Graphics</b>	<ul style="list-style-type: none"> <li>Intel UHD Graphics</li> </ul>
<b>I/O Devices</b>	<ul style="list-style-type: none"> <li>Two COM Headers (COM1/2, COM3/4)</li> <li>Four SATA 3.0 Headers (I-SATA0–I-SATA3)</li> <li>Four Independent Displays (HDMI, DisplayPort, Digital Visual Interface, VGA port)</li> <li>Audio Mic In and Line Out Port</li> </ul>
<b>Peripheral Devices</b>	<ul style="list-style-type: none"> <li>Two front accessible USB 2.0 headers (USB0/1, USB2/3)</li> <li>Four back panel USB 3.2 (10 Gb) ports (USB4/5, USB6/7)</li> <li>One front accessible USB 3.2 (10 Gb) header (USB8/9)</li> <li>One front accessible USB 3.1 (5 Gb) header (USB10/11)</li> </ul>




**Note:** The table above is continued on the next page.

<b>Motherboard Features</b>	
<b>BIOS</b>	
	<ul style="list-style-type: none"> <li>• 512 Mb AMI BIOS® SPI Flash BIOS</li> <li>• ACPI 6.0, Plug and Play (PnP), SPI dual/quad speed support, and Real Time Clock (RTC) wake up</li> </ul>
<b>Power Management</b>	
	<ul style="list-style-type: none"> <li>• ACPI power management</li> <li>• S4 and S5</li> <li>• Power button override mechanism</li> <li>• Power-on mode for AC power recovery</li> <li>• Power supply monitoring</li> </ul>
<b>System Health Monitoring</b>	
	<ul style="list-style-type: none"> <li>• Onboard voltage monitoring for +12 V, +5 V, +3.3 V, +5 V stdby, +3.3 V stdby, Vcore, CPU temperature, PCH temperature, system temperature, and memory temperature</li> <li>• CPU thermal trip support</li> <li>• Platform Environment Control Interface (PECI)/TSI</li> </ul>
<b>Fan Control</b>	
	<ul style="list-style-type: none"> <li>• Low-noise fan speed control</li> <li>• Six 4-pin fan headers</li> </ul>
<b>System Management</b>	
	<ul style="list-style-type: none"> <li>• Trusted Platform Module (TPM) support</li> <li>• SuperDoctor® 5</li> <li>• System resource alert via SuperDoctor®5</li> <li>• Platform Environment Control Interface (PECI) 3.0 support</li> <li>• Watch Dog, NMI</li> <li>• Chassis intrusion header and detection</li> <li>• Intel Active Management Technology (AMT)</li> </ul>
<b>LED Indicators</b>	
	<ul style="list-style-type: none"> <li>• CPU/System Overheat LED</li> <li>• Power indicator LED</li> <li>• Fan Fail LED</li> <li>• HDD Activity LED</li> <li>• LAN Activity LED</li> </ul>
<b>Dimensions</b>	
	<ul style="list-style-type: none"> <li>• 9.6" (W) x 9.6" (L) (243.84 mm x 243.84 mm)</li> </ul>

 **Note 1:** The CPU maximum thermal design power (TDP) is subject to chassis and heatsink cooling restrictions. For proper thermal management, check the chassis and heatsink specifications for proper CPU TDP sizing.

**Figure 1-3.**  
**System Block Diagram**

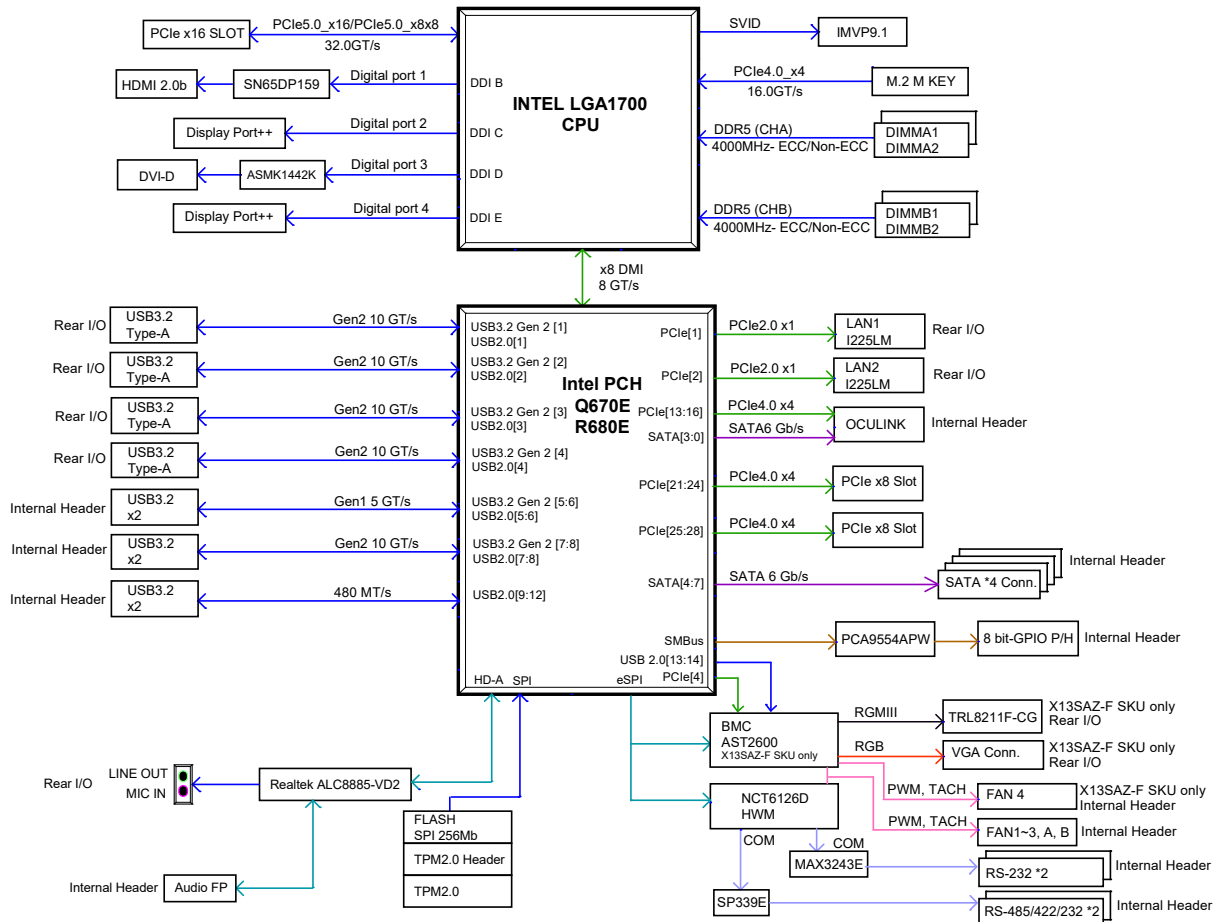

**Note 1:** This is a general block diagram and may not exactly represent the features on your motherboard. See the previous pages for the actual specifications of your motherboard.

**Note 2:** SATA on OCulink is available with a custom BIOS. The default is PCIe x4.



## 1.2 Processor and Chipset Overview

Built upon the functionality and capability of the Intel 12<sup>th</sup>/13<sup>th</sup>/14<sup>th</sup> Generation Core i3/i5/i7/i9, Pentium, and Celeron series processor and the R680E/Q670E chipset, the X13SAZ-F/Q motherboard provides system performance, power efficiency, and feature sets to address the needs of next-generation computer users.

With the support of the new Intel Microarchitecture 14nm Process Technology, the X13SAZ-F/Q dramatically increases system performance for a multitude of applications.

The Intel PCH R680E/Q670E chipset support the following features:

- Intel vPro, AMT 12.0, and TXT
- Intel Turbo Boost and Rapid Storage Technology
- Increased platform security with Intel Boot Guard for hardware-based boot integrity protection and prevention of buffer overflow class security threads
- Intel Rapid Storage Technology enterprise (Intel RSTe)
- Intel Hyper-Threading, Intel VT-d, and VT-x
- Intel 64 Architecture, Execute Disable Bit, Turbo Boost Technology 2.0, Hyper-Threading Technology (Intel HT Technology)
- PCI Express 4.0/5.0, SATA 3.0, USB 3.2

## 1.3 Special Features

### Recovery from AC Power Loss

The Basic I/O System (BIOS) provides a setting that determines how the system will respond when AC power is lost and then restored to the system. You can choose for the system to remain powered off (in which case you must press the power switch to turn it back on), or for it to automatically return to the power-on state. See the Advanced BIOS Setup section for this setting. The default setting is **Last State**.

## 1.4 System Health Monitoring

This section describes the health monitoring features of the motherboard. The motherboard has an onboard System Hardware Monitoring chip that supports system health monitoring.

### Onboard Voltage Monitors

An onboard voltage monitor will scan the voltages of the onboard chipset, memory, CPU, and battery continuously. Once a voltage becomes unstable, a warning is given, or an error message is sent to the screen. The user can adjust the voltage thresholds to define the sensitivity of the voltage monitor.

### Fan Status Monitor with Firmware Control

PC health monitoring in the BIOS can check the RPM status of the cooling fans. The onboard CPU and chassis fans are controlled by Thermal Management. Refer to the below table for available fan modes to choose the most appropriate one for nominal operation.

### Environmental Temperature Control

The thermal control sensor monitors the CPU temperature in real time and will turn on the thermal control fan whenever the CPU temperature exceeds a user-defined threshold. The overheat circuitry runs independently from the CPU. Once the thermal sensor detects that the CPU temperature is too high, it will automatically turn on the thermal fans to prevent the CPU from overheating. The onboard chassis thermal circuitry can monitor the overall system temperature and alert the user when the chassis temperature is too high.



**Note:** To avoid possible system overheating, provide adequate airflow to your system.

### System Resource Alert

This feature is available when used with SuperDoctor 5® in the Windows OS or in the Linux environment. SuperDoctor is used to notify the user of certain system events. For example, you can configure SuperDoctor to provide you with warnings when the system temperature, CPU temperatures, voltages, and fan speeds go beyond a predefined range.

**Figure 1-4. Fan Speed Modes**

Fan Mode	Description
Quiet	Use this mode to set fan speed for best power efficiency and maximum noise reduction
Stable	Use this mode to set the fan speed for normal system cooling
Full Speed	Use this mode to set fan speed at full speed for maximum system cooling
Customize	Use this mode to manually adjust the desired PWM according to the specified temperature

## 1.5 ACPI Features


The Advanced Configuration and Power Interface (ACPI) specification defines a flexible and abstract hardware interface that provides a standard way to integrate power management features throughout a computer system, including its hardware, operating system and application software. This enables the system to automatically turn on and off peripherals such as CD-ROMs, network cards, hard disk drives and printers.

In addition to enabling operating system-directed power management, ACPI also provides a generic system event mechanism for Plug and Play, and an operating system-independent interface for configuration control. ACPI leverages the Plug and Play BIOS data structures, while providing a processor architecture-independent implementation that is compatible with appropriate Windows operating systems. For detailed information regarding OS support, refer to the Supermicro website.

## 1.6 Power Supply

As with all computer products, a stable power source is necessary for proper and reliable operation. It is even more important for processors that have high CPU clock rates where noisy power transmission is present.

This motherboard accommodates a 24-pin ATX power supply. Although most power supplies generally meet the specifications required by the CPU, some are inadequate. In addition, one 12V 8-pin power connection is also required to ensure adequate power supply to the system.

 **Note 1:** The X13SAZ-F/Q motherboard alternatively supports an 8-pin 12V DC input power supply at JPV1 for embedded applications. It provides up to 360W power input to the motherboard. Keep the onboard power usage within the power limits specified above. Over current power usage may cause damage to the motherboard.

**Note 2:** Connect both the 8-pin DC power at JPV1 and JPW1 to make sure the CPU receives enough power for normal operation when using the ATX power supply

It is strongly recommended that you use a high quality power supply that meets ATX power supply Specification 2.02 or above.

## 1.7 Serial Port

The Super I/O (NCT6126D) provides four serial communication headers (UART), which support serial infrared communication. The UART includes send/receive FIFO, a programmable baud rate generator, complete modem control capability, and a processor interrupt system. The UART provides legacy speed with baud rate of up to 115.2 Kbps as well as an advanced speed with baud rates of 250 K, 500 K, or 1 Mb/s, supporting higher speed modems.

The Super I/O provides functions that comply with ACPI, which includes support of legacy and ACPI power management through a SMI or SCI function pin. It also features auto power management to reduce power consumption.

# Chapter 2

## Installation

### 2.1 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your system board, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

#### Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the board from the antistatic bag.
- Handle the motherboard by its edges only; do not touch its components, peripheral chips, memory modules or gold contacts.
- When handling chips or modules, avoid touching their pins.
- Put the motherboard and peripherals back into their antistatic bags when not in use.
- For grounding purposes, make sure that your computer chassis provides excellent conductivity between the power supply, the case, the mounting fasteners and the motherboard.
- Use only the correct type of onboard CMOS battery. Do not install the onboard battery upside down to avoid possible explosion.

#### Unpacking

The motherboard is shipped in antistatic packaging to avoid static damage. When unpacking the motherboard, make sure that the person handling it is static protected.

## 2.2 Processor and Heatsink Installation

**Warning:** When handling the processor package, avoid placing direct pressure on the label area of the fan.




**Important:**


- Use ESD protection.
- Unplug the AC power cord from all power supplies after shutting down the system.
- Check that the plastic protective cover is on the CPU socket and none of the socket pins are bent. If they are, contact your retailer.
- When handling the processor, avoid touching or placing direct pressure on the LGA lands (gold contacts). Improper installation or socket misalignment can cause serious damage to the processor or CPU socket, which may require manufacturer repairs.
- Thermal grease is pre-applied on a new heatsink. No additional thermal grease is needed.
- Refer to the Supermicro website for updates on processor support.
- All graphics in this manual are for illustrations only. Your components may look different.

### Installing the LGA1700 Processor


1. Remove the plastic protective cover from the load plate.

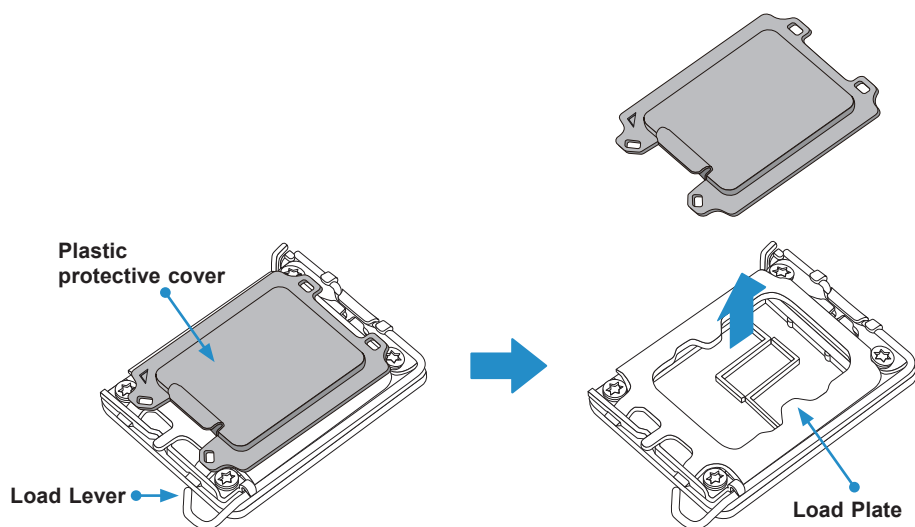

2. Gently push down the load lever to release and lift it, then lift the load plate to open it completely.

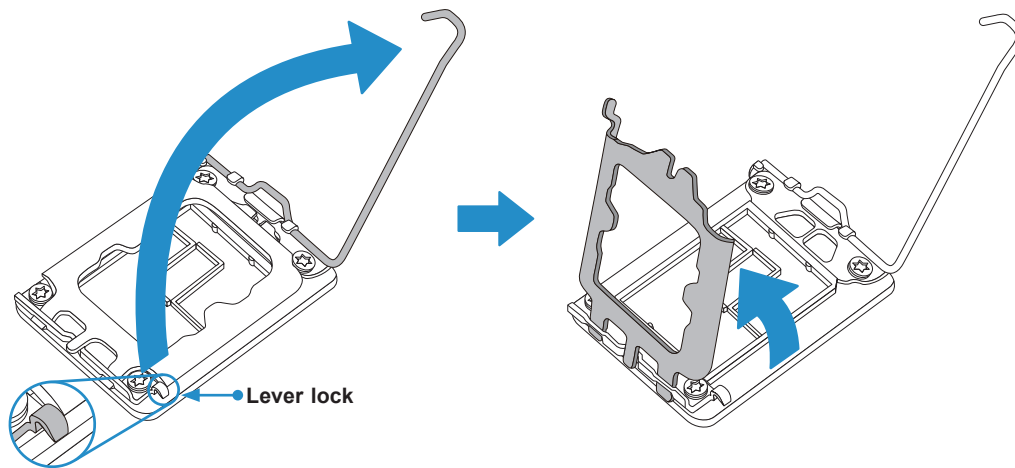



3. Use your thumb and your index finger to hold the CPU. Align the small triangle marker and notches on the CPU to the corresponding triangle marker and notches on the CPU load bracket. Once aligned, carefully lower the CPU straight down into the socket. Do not drop the CPU on the socket, or move it horizontally or vertically.

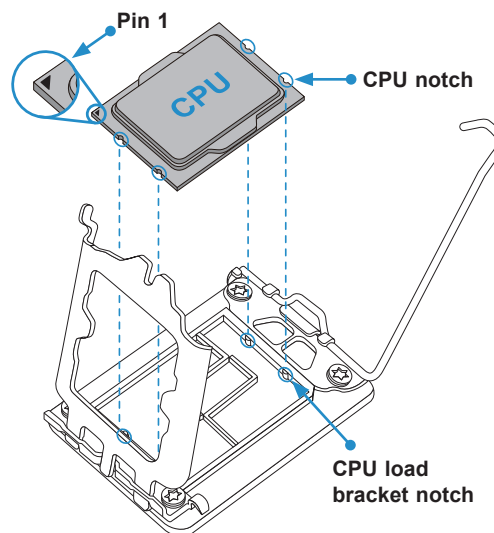

4. Do not rub the CPU against the surface or against any pins of the socket to avoid damaging the CPU or the socket.
5. With the CPU inside the socket, inspect the four corners of the CPU to make sure that the CPU is properly installed.


6. Close the load plate with the CPU inside the socket. Gently push the load lever down to the lever locks.

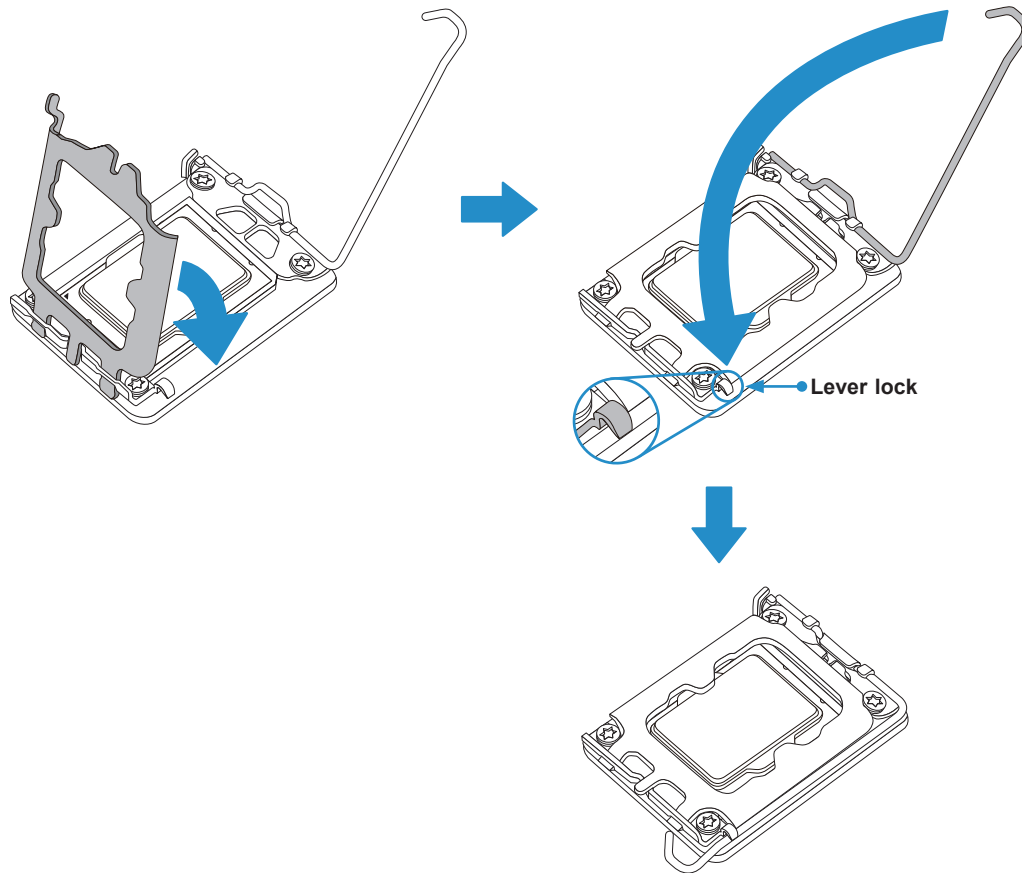


 **Important:** You can only install the CPU inside the socket in one direction. Make sure that it is properly inserted into the CPU socket before closing the load plate. If it doesn't close properly, do not force it as it may damage your CPU. Instead, open the load plate again and double-check that the CPU is aligned properly.




## Installing a CPU Heatsink


 **Note 1:** The installation described in this section is for reference only. The actual installation steps may vary depending on the CPU heatsink model. Please refer to the heatsink instruction for more details.

 **Note 2:** Graphic drawings included in this manual are for reference only. They might look different from the components installed in your system.



1. Loosen four screws to release the backplate. Note that one screw is not shown in the illustration below.

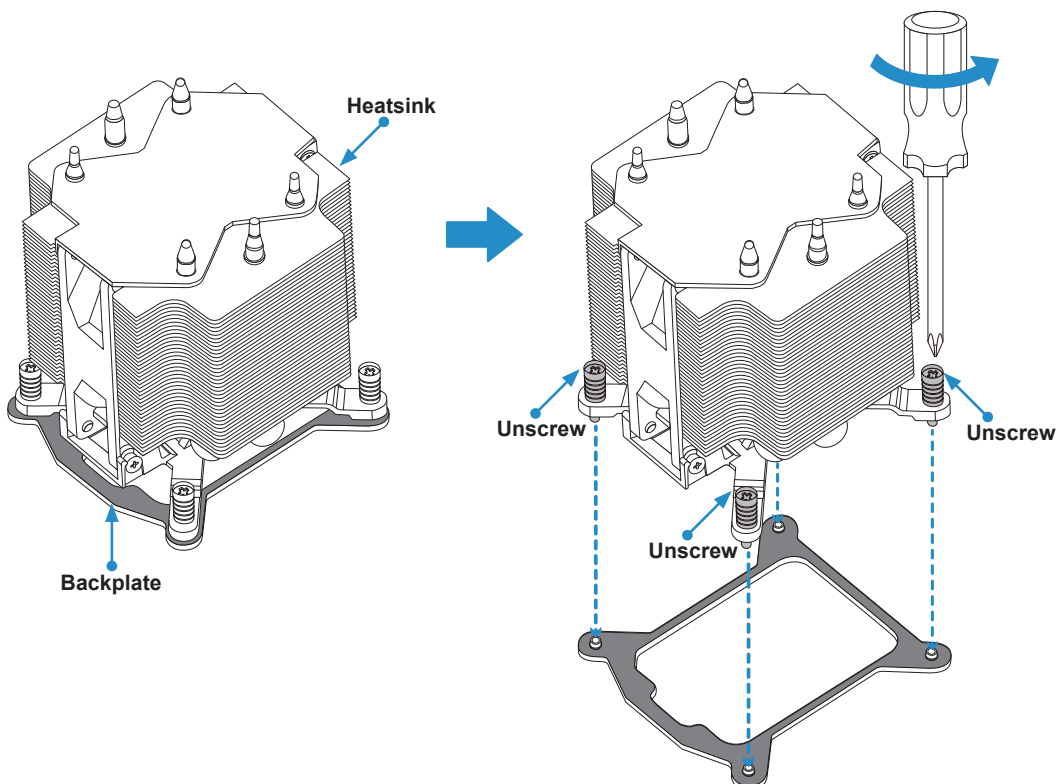


2. If there is a thin layer of protective film on the backplate, please remove it.

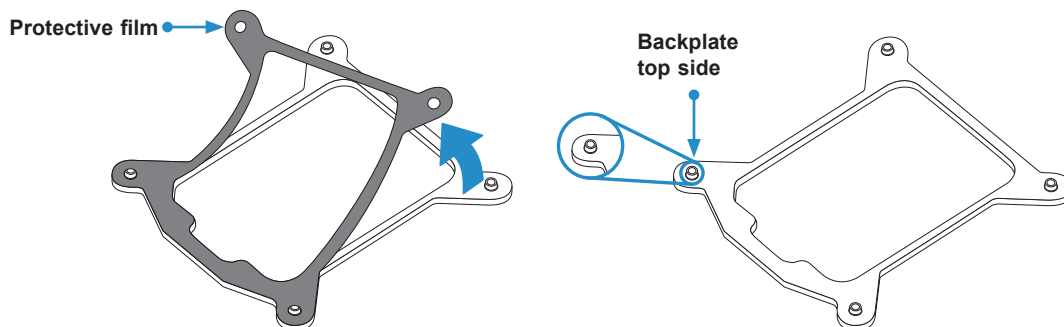


3. Attach the backplate into the mounting holes around the CPU socket on the bottom side of the motherboard.

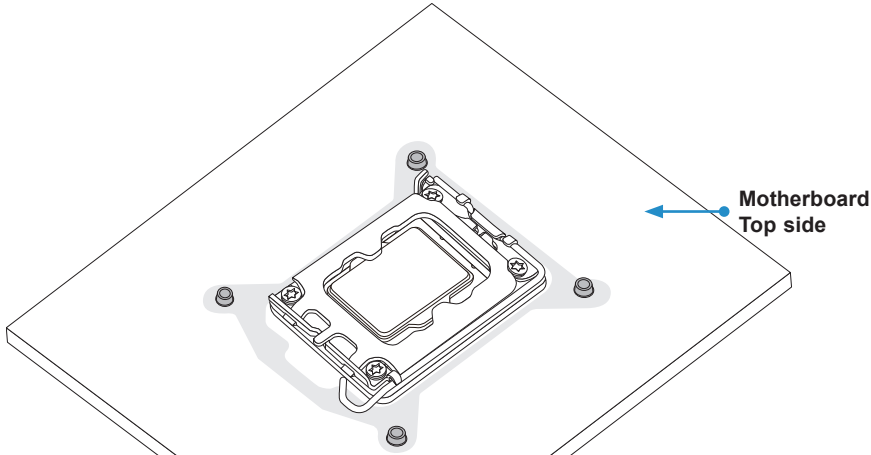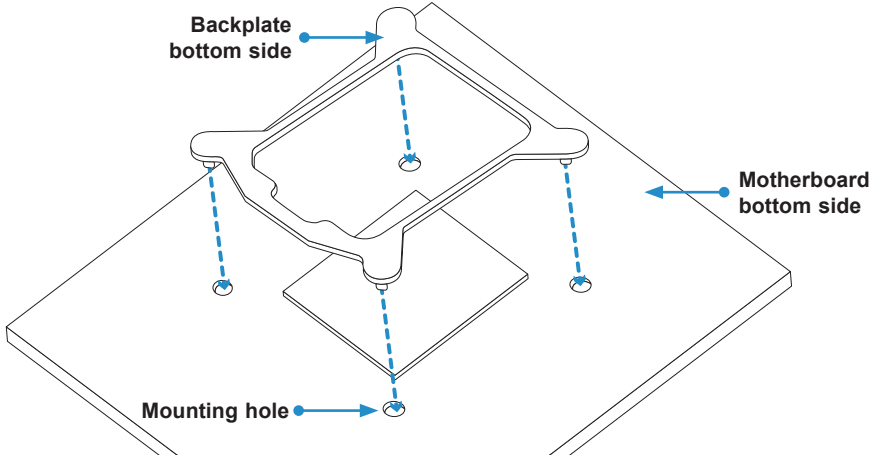

4. Apply the proper amount of thermal grease on the CPU.

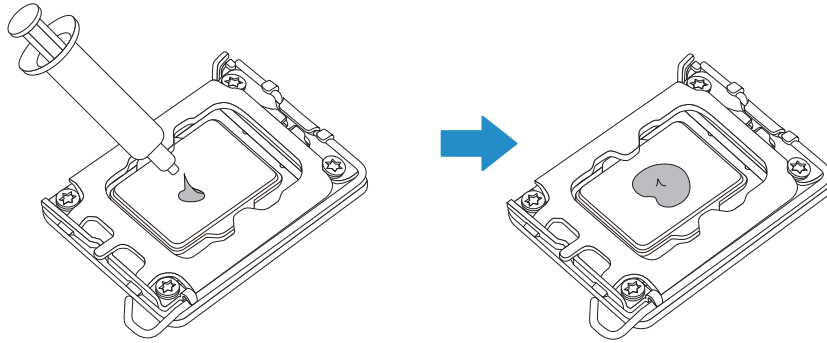


5. Place the heatsink on top of the CPU so that the four mounting holes on the heatsink are aligned with those on the retention mechanism.
6. Tighten the screws.

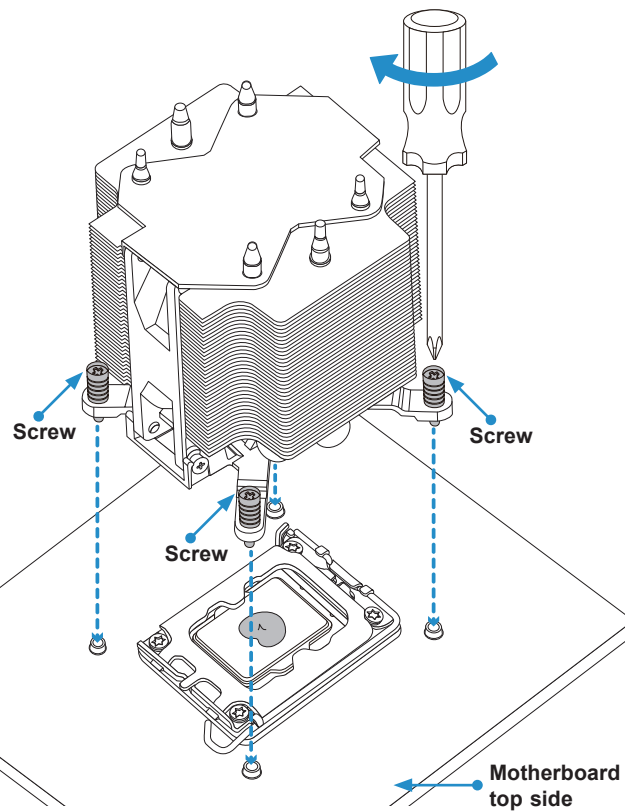

## Removing the Heatsink

**Warning:** We do not recommend that the CPU or heatsink be removed. However, if you do need to remove the heatsink, please follow the instructions below to uninstall it to avoid damaging the CPU or other components.

1. Unplug the power cord from the power supply and power connector of the cooler from the fan header on the motherboard.
2. Loosen the screws as shown below.
3. Gently wiggle the heatsink to loosen it. Do not use excessive force when wiggling the heatsink.

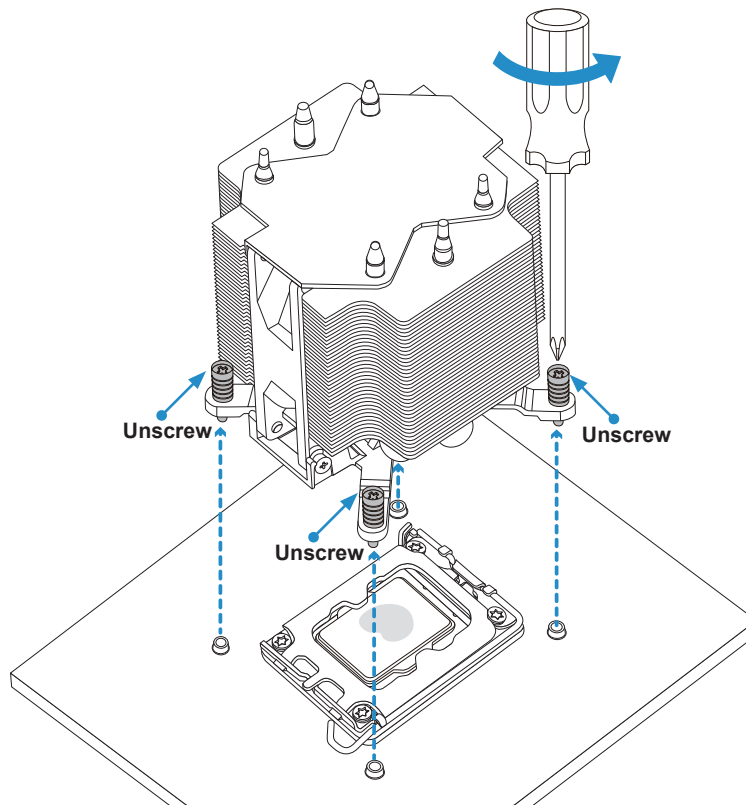


4. Once the heatsink is loosened, remove it from the motherboard.

## 2.3 Motherboard Installation

 All motherboards have standard mounting holes to fit different types of chassis. Make sure that the locations of all the mounting holes for both the motherboard and the chassis match. Although a chassis may have both plastic and metal mounting fasteners, metal ones are highly recommended because they ground the motherboard to the chassis. Make sure that the metal standoffs click in or are screwed in tightly.

### Tools Needed




Phillips  
Screwdriver  
(1)



Phillips Screws  
(8)



Standoffs (8)  
Only if Needed

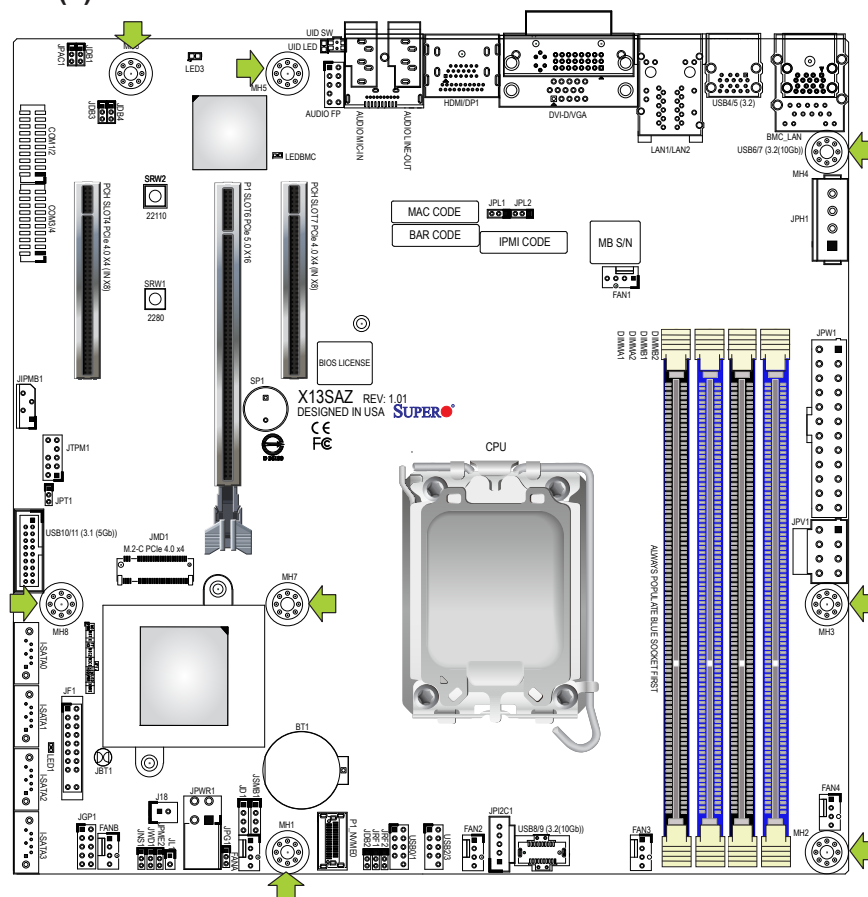


### Location of Mounting Holes




- Notes:** 1) To avoid damaging the motherboard and its components, please do not use a force greater than 8 lbf-in on each mounting screw during motherboard installation.
- 2) Some components are very close to the mounting holes. Please take precautionary measures to avoid damaging these components when installing the motherboard to the chassis.

## Installing the Motherboard


1. Install the I/O shield into the back of the chassis, if applicable.

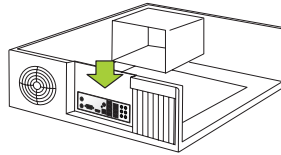


2. Locate the mounting holes on the motherboard. See the previous page for the location.

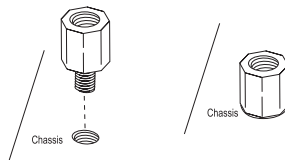

3. Locate the matching mounting holes on the chassis. Align the mounting holes on the motherboard against the mounting holes on the chassis.

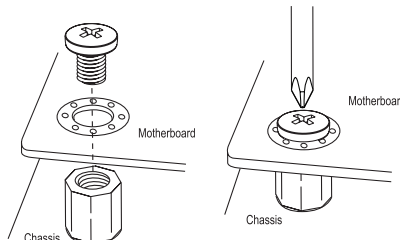

4. Install standoffs in the chassis as needed.
5. Install the motherboard into the chassis carefully to avoid damaging other motherboard components.
6. Using the Phillips screwdriver, insert a pan head #6 screw into a mounting hole on the motherboard and its matching mounting hole on the chassis.
7. Repeat Step 6 to insert #6 screws into all mounting holes.
8. Make sure that the motherboard is securely placed in the chassis.

 **Note:** Images displayed are for illustration only. Your chassis or components might look different from those shown in this manual.

## 2.4 Memory Support and Installation



**Note:** Check the Supermicro website for recommended memory modules.



**Important:** Exercise extreme care when installing or removing DIMM modules to prevent any possible damage.

### Memory Support

The X13SAZ-F supports up to 128 GB of DDR5 ECC/Non-ECC/ECC UDIMM memory with speeds of up to 4400 MT/s with one DIMM, or 4000 MT/s with two DIMMs single rank, or 3600 MT/s with two DIMMs dual rank in four memory slots. The X13SAZ-Q supports up to 128 GB of DDR5 Non-ECC UDIMM memory with speeds of up to 4400 MT/s with one DIMM, or 4000 MT/s with two DIMMs single rank, or 3600 MT/s with two DIMMs dual rank in four memory slots. Refer to the table below for the recommended DIMM population order and additional memory information.


### DIMM Module Population Configuration

For optimal memory performance, follow the table below when populating memory.

Four DIMM Slots	
Number of DIMMs	Memory Population Sequence
1	DIMMA2
2	DIMMA2 / DIMMB2
4	DIMMA2 / DIMMB2 / DIMMA1 / DIMMB1

## General Guidelines for Optimizing Memory Performance





- DIMM slots must be populated in the following order: DIMMA2, DIMMB2 and then DIMMA1, DIMMB1.
- It's recommended to use DDR5 memory of the same type, size, and speed.
- Mixed DIMM speeds can be installed. However, all DIMMs will run at the speed of the slowest DIMM.
- The motherboard will support odd-numbered modules. However, to achieve the best memory performance, a balanced memory population is recommended.

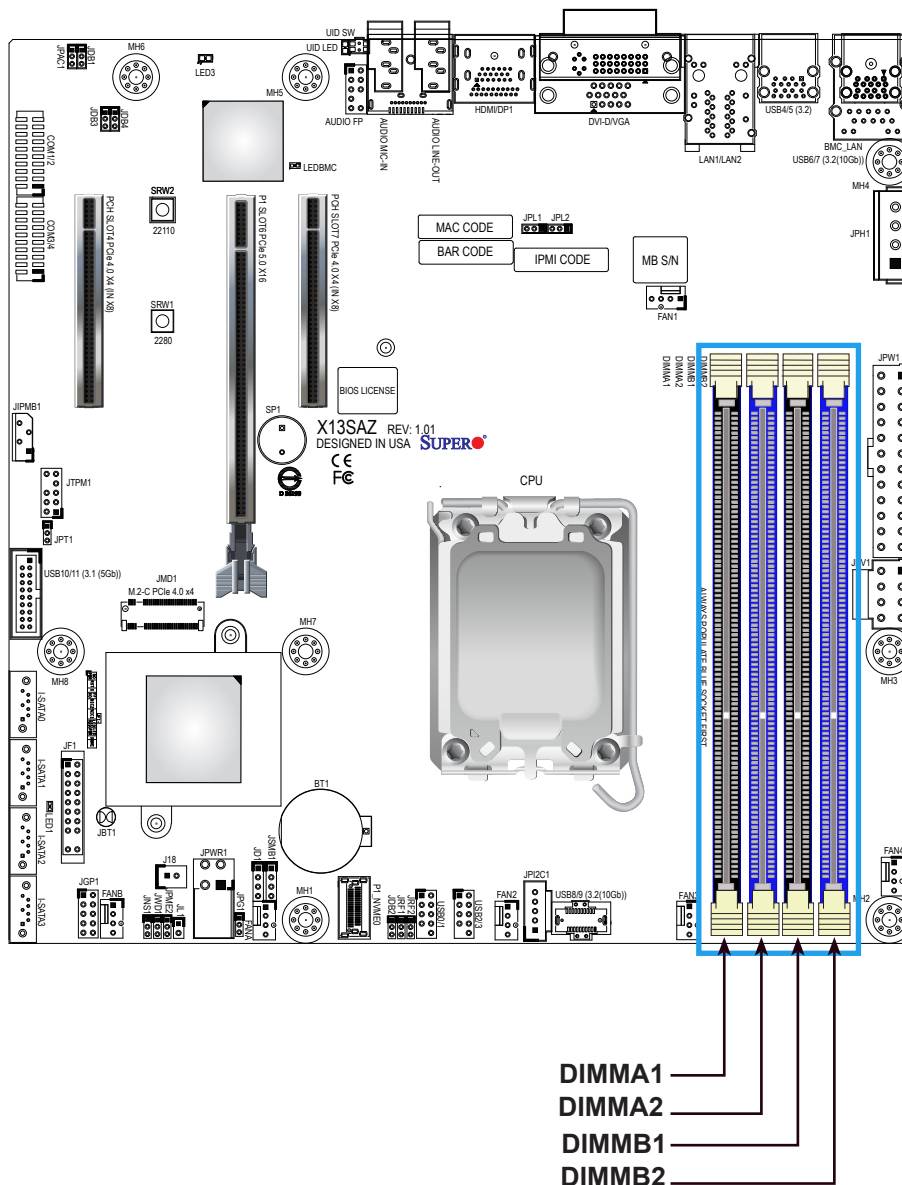



## DIMM Installation

1. Insert DIMM modules in the following order: DIMMA2, DIMMB2 and then DIMMA1, DIMMB1.
2. Push the release tabs outwards on both ends of the DIMM slot to unlock it.
3. Align the key of the DIMM module with the receptive point on the memory slot.
4. Align the notches on both ends of the module against the receptive points on the ends of the slot.
5. Push both ends of the module straight down into the slot until the module snaps into place.
6. Press the release tabs to the lock positions to secure the DIMM module into the slot.

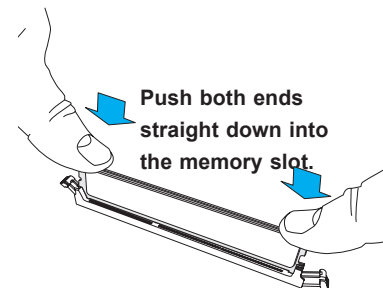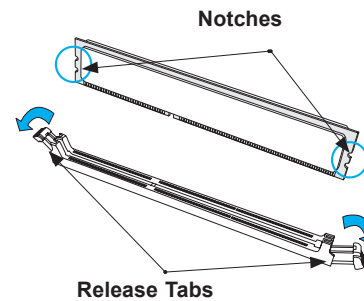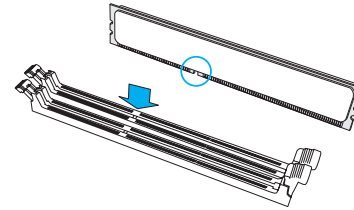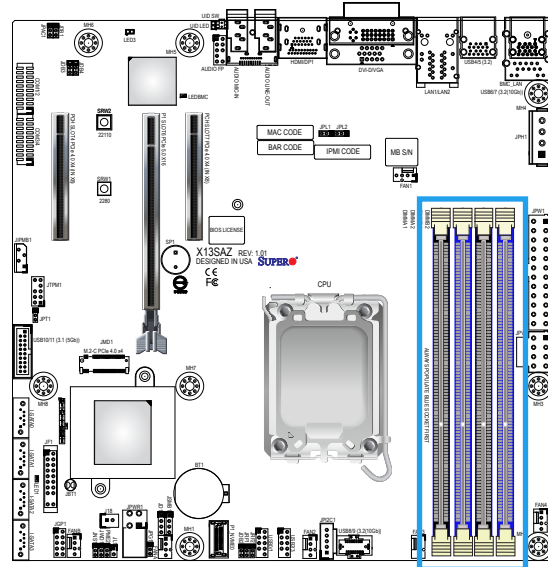

## DIMM Removal

Press both release tabs on the ends of the DIMM module to unlock it. Once the DIMM module is loosened, remove it from the memory slot.

## 2.5 Rear I/O Ports

See Figure 2-1 below for the locations and descriptions of the various I/O ports on the rear of the motherboard.


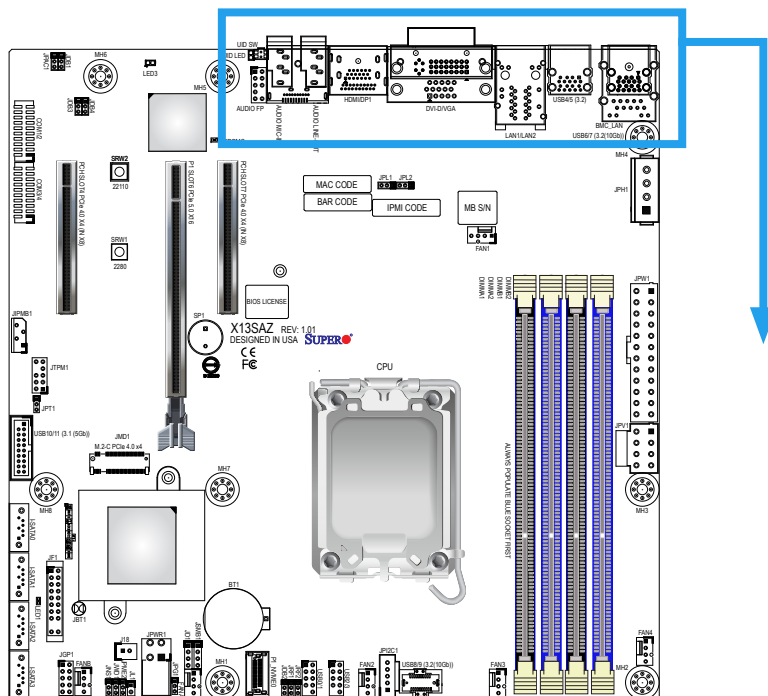


Figure 2-1. I/O Port Locations and Definitions

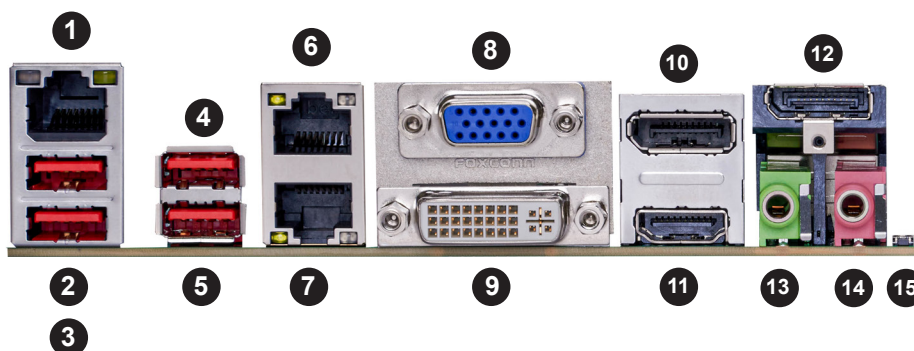


Rear I/O Ports					
#	Description	#	Description	#	Description
1	BMC LAN (F SKU)	6	LAN2	11	HDMI 2.0b
2	USB7 (3.2)	7	LAN1	12	DisplayPort++2
3	USB6 (3.2)	8	VGA	13	LINE_OUT
4	USB5 (3.2)	9	DVI-D	14	MIC_IN
5	USB4 (3.2)	10	DisplayPort++1	15	UID Switch

## DVI-D/VGA

A DVI-D and a VGA port are located next to LAN ports on the I/O back panel. Use these connections for VGA and DVI displays. The VGA port is supported by the BMC controller.

## HDMI/DP1

One HDMI port is on the I/O back panel. This connector is used to display both high definition video and digital sound through an HDMI-capable display, using a single HDMI cable (not included). The motherboard also has a DisplayPort on the I/O back panel. This port delivers a digital display and fast refresh rate. It can connect to virtually any display device using a DisplayPort adapter for devices such as VGA, DVI, or HDMI.

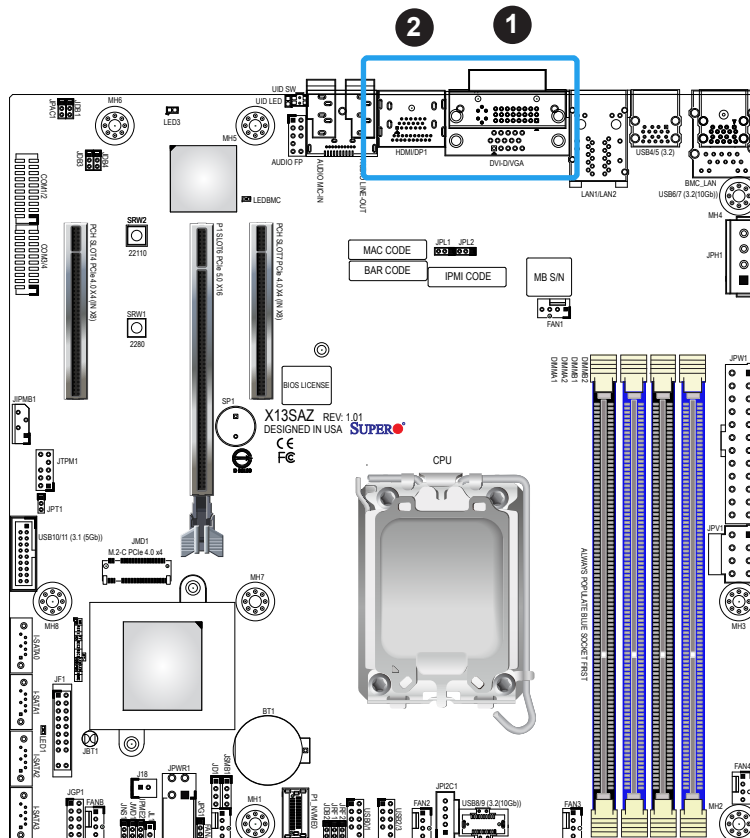


1. DVI-D/VGA
2. HDMI/DP1

## Audio Ports

The green jack on the I/O back panel audio port is the Line Out connection and the pink jack is the Mic In connection.

HD Audio Pin Definitions	
Color	Definition
Green	Line Out
Pink	Mic In

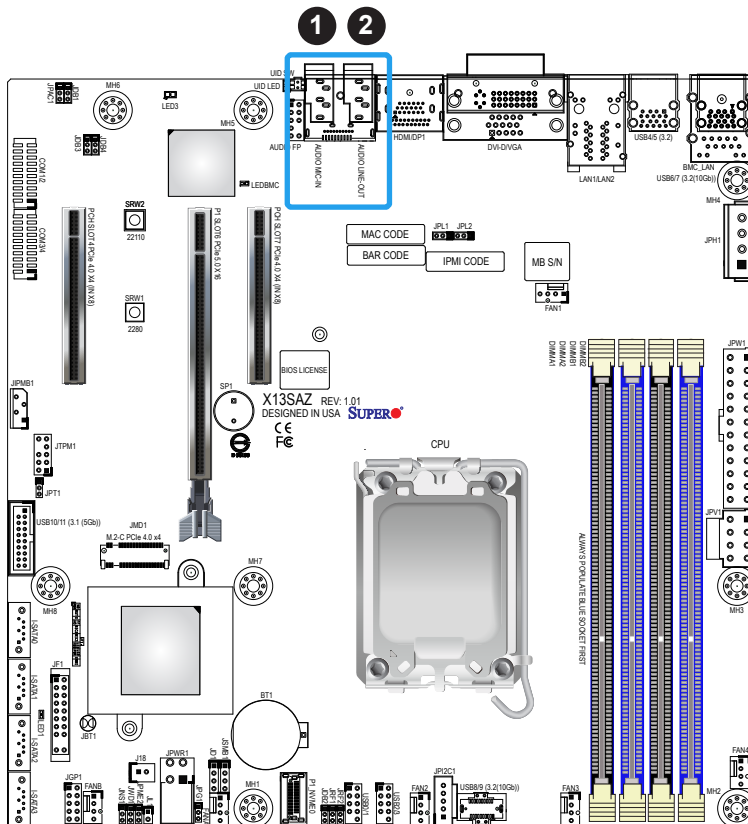


1. Audio Mic In
2. Audio Line Out

## LAN Ports

Two Gigabit Ethernet ports (LAN1, LAN2) are located on the I/O back panel. In addition to the LAN ports, the X13SAZ-F has a dedicated BMC LAN on the back panel. All these ports accept RJ45 cables. Please refer to the LED Indicator section for LAN LED information.

LAN1/LAN2 Pin Definition	
Pin#	Definition
1	TX_D1+
2	TX_D1-
3	RX_D2+
4	BI_D3+
5	BI_D3-
6	RX_D2-
7	BI_D4+
8	BI_D4-

BMC LAN Pin Definition	
Pin#	Definition
1	TX_D1+
2	TX_D1-
3	RX_D2+
4	BI_D3+
5	BI_D3-
6	RX_D2-
7	BI_D4+
8	BI_D4-

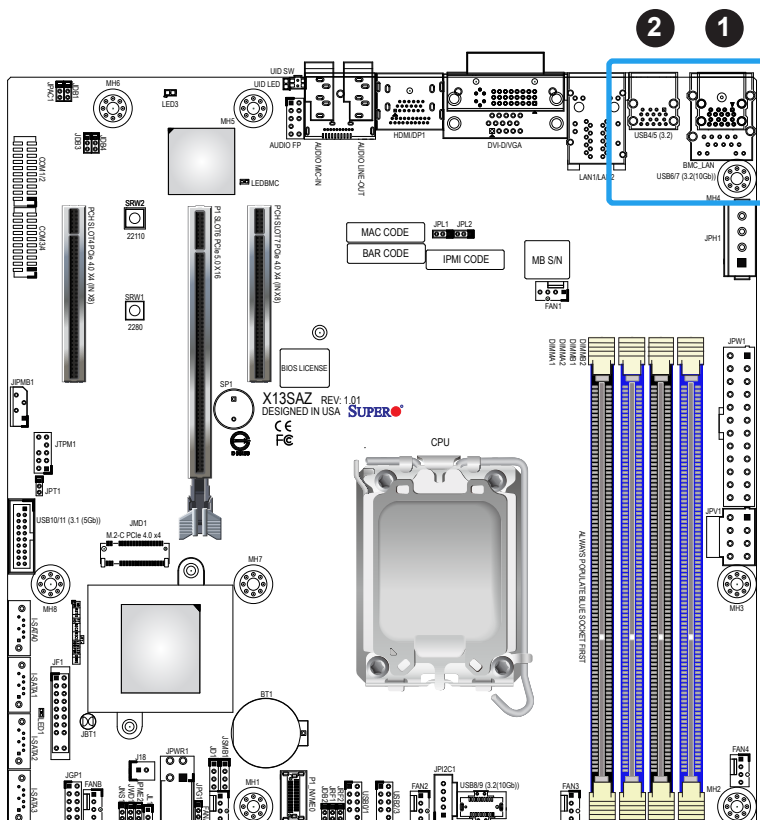




1. BMC LAN Port (F SKU)
2. LAN1/LAN2

### Universal Serial Bus (USB) Ports

There are four USB 3.2 ports (USB4/5 and USB6/7) located on the I/O back panel. The motherboard also has two front access USB 2.0 headers (USB0/1 and USB2/3). There is also one front accessible USB 3.2 Gen 1 (USB8/9) and one front accessible USB 3.1 Gen 1 (USB10/11) port. The pin definition tables for USB8/9 and USB10/11 are on the next page. The onboard headers can be used to provide front side USB access with a cable (not included).

Front Panel USB0/1, USB2/3 (2.0) Pin Definitions			
Pin#	Definition	Pin#	Definition
1	VBUS1	2	VBUS2
3	D1-	4	D2-
5	D1+	6	D2+
7	GND	8	GND
9	NC	10	GND



Back Panel USB4/5, USB6/7 (3.2) Ports Pin Definitions			
Pin#	Definition	Pin#	Definition
1	VBUS	5	Stda_SSRX-
2	D-	6	Stda_SSRX+
3	D+	7	GND
4	GND	8	Stda_SSTX-
		9	Stda_SSTX+

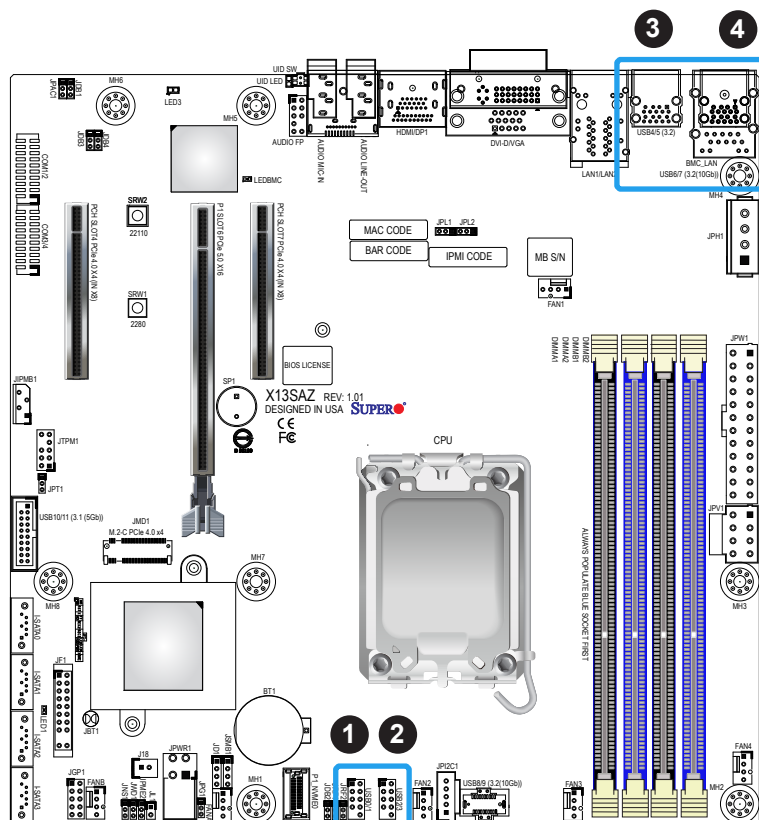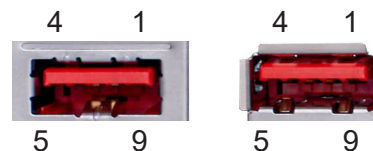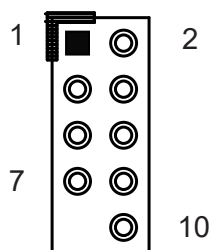


- 1. USB0/1
- 2. USB2/3
- 3. USB4/5
- 4. USB6/7

Front Panel USB8/9 (3.2) Header Pin Definitions			
Pin#	Definition	Pin#	Definition
1	GND	11	GND
2	TX1+	12	TX2-
3	TX1-	13	TX2+
4	GND	14	GND
5	RX1+	15	RX2-
6	RX1-	16	RX2+
7	GND	17	GND
8	D1+	18	D2+
9	D1-	19	D2-
10	VBUS1	20	VBUS2

Front Panel USB10/11 (3.1) Header Pin Definitions			
Pin#	Definition	Pin#	Definition
1	VBS		
2	1RN	19	VBS
3	1RP	18	2RN
4	GND	17	2RP
5	1TN	16	GND
6	1TP	15	2TN
7	GND	14	2TP
8	1DN	13	GND
9	1DP	12	2DN
10	ID	11	2DP

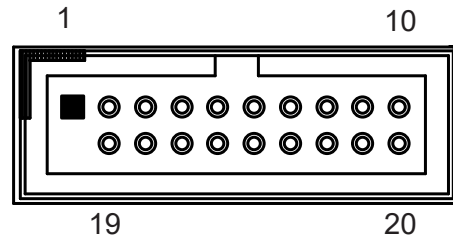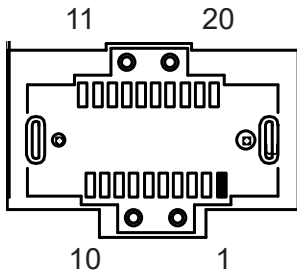


1. USB8/9
2. USB10/11

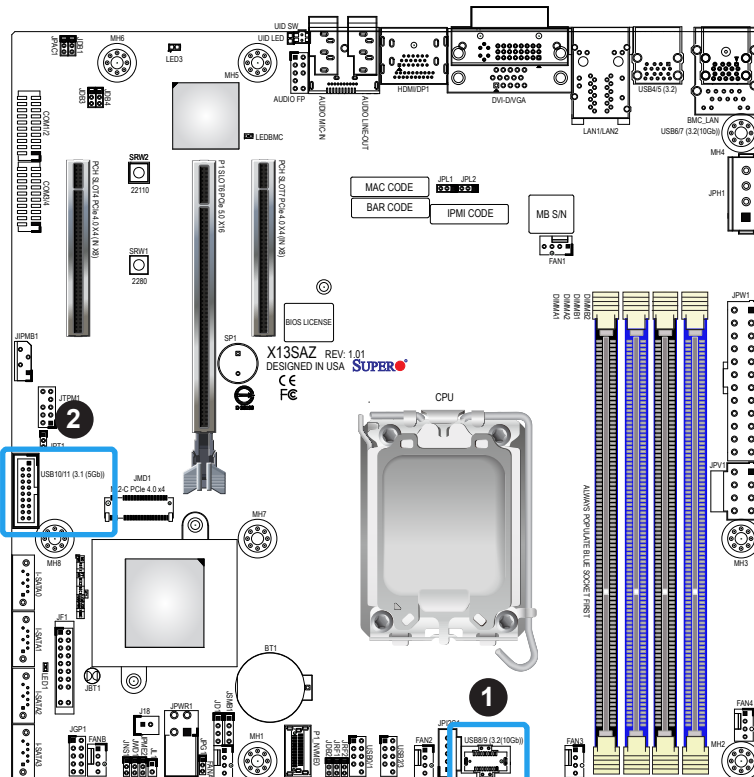


### Unit Identifier Switch/UID LED Indicator

A Unit Identifier (UID) switch and an LED Indicator are located on the motherboard. The UID switch is located at UID SW on the back panel. The UID LED is located next to the UID switch. When you press the UID switch, the UID LED will be turned on. Press the UID switch again to turn off the LED indicator. The UID Indicator provides easy identification of a system unit that may be in need of service.

 **Note:** UID can also be triggered via IPMI on the motherboard. For more information on IPMI, please refer to the IPMI User's Guide posted on our website at <https://www.supermicro.com/support/manuals/>.

UID Switch Pin Definitions	
Pin#	Definition
1	Ground
2	Ground
3	Button In
4	Button In

UID LED Pin Definitions	
Color	Status
Blue: On	Unit Identified

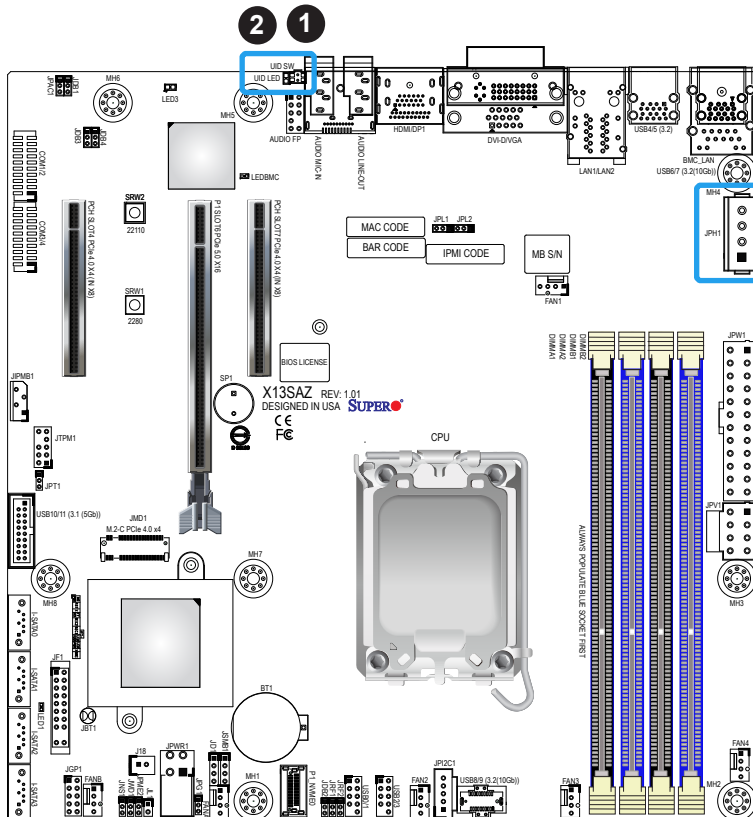


1. UID Switch
2. UID LED



## 2.6 Front Control Panel

JF1 contains header pins for various buttons and indicators that are normally located on a control panel at the front of the chassis. These connectors are designed specifically for use with Supermicro chassis. See the figure below for the descriptions of the front control panel buttons and LED indicators.

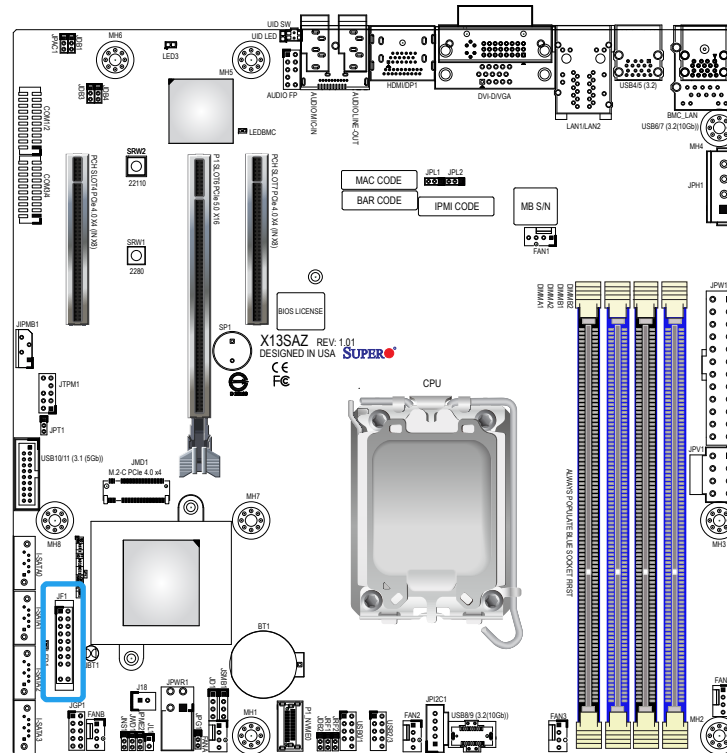

	1	2	
<b>PWR</b> } Power Button	○	○	Ground
<b>Reset</b> } Reset Button	○	○	Ground
	○	○	X
	○	○	OH/Fan Fail LED
	○	○	NIC2 Link LED
	○	○	NIC1 Link LED
	○	○	HDD LED
	○	○	PWR LED
	○	○	X
	○	○	Ground
	19	20	

Figure 2-2. JF1 Header Pins

### Power Button


The Power Button connection is located on pins 1 and 2 of JF1. Momentarily contacting both pins will power on/off the system. This button can also be configured to function as a suspend button (with a setting in the BIOS - see Chapter 4). To turn off the power when the system is in suspend mode, press the button for four seconds or longer. Refer to the table below for pin definitions.

Power Button Pin Definitions	
Pin#	Definition
1	Signal
2	Ground

### Reset Button

The Reset Button connection is located on pins 3 and 4 of JF1. Attach it to a hardware reset switch on the computer case to reset the system. Refer to the table below for pin definitions.

Reset Button Pin Definitions	
Pin#	Definition
3	Reset
4	Ground

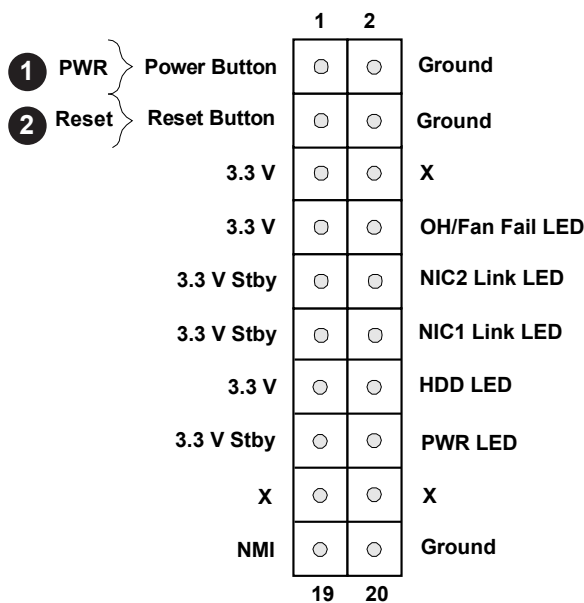

1. PWR Button
2. Reset Button

## Overheat (OH)/Fan Fail

Connect an LED cable to pins 7 and 8 of the Front Control Panel to use the Overheat/Fan Fail LED connections. The LED on pin 8 provides warnings of overheating or fan failure. Refer to the tables below for pin definitions.


OH/Fan Fail Indicator Status	
State	Definition
Off	Normal
On	Overheat
Flashing	Fan Fail

OH/Fan Fail LED Pin Definitions	
Pin#	Definition
7	3.3 V
8	OH/Fan Fail LED

## NIC1/NIC2 (LAN1/LAN2)

The Network Interface Controller (NIC) LED connection for LAN port 1 is located on pins 11 and 12 of JF1, and LAN port 2 is on pins 9 and 10. Attach the NIC LED cables here to display network activity. Refer to the table below for pin definitions.

NIC1/NIC2 LED Pin Definitions	
Pin#	Definition
9	3.3 V Stby
10	NIC 2 Link LED
11	3.3 V Stby
12	NIC 1 Link LED

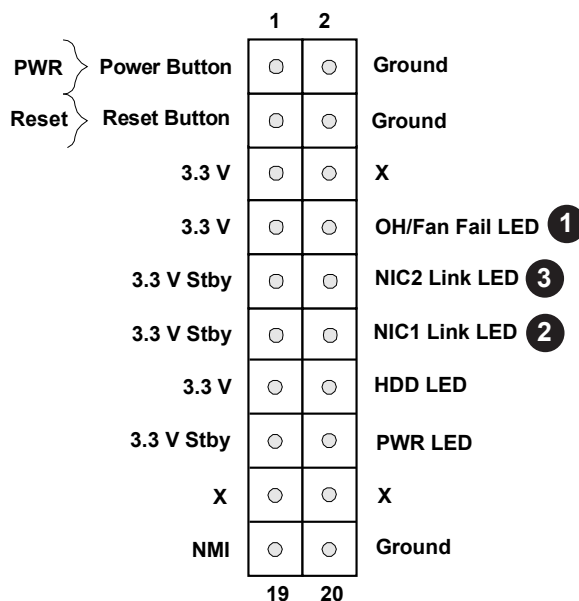

1. OH/Fan Fail LED
2. NIC1 LED
3. NIC2 LED

### HDD LED


The HDD LED connection is located on pins 13 and 14 of JF1. Attach a cable to pin 14 to show hard drive activity status. Refer to the table below for pin definitions.

HDD LED Pin Definitions	
Pins	Definition
13	3.3 V
14	HDD Active

### Power LED

The Power LED connection is located on pins 15 and 16 of JF1. Refer to the table below for pin definitions.

Power LED Pin Definitions	
Pins	Definition
15	3.3 Stby
16	PWR LED

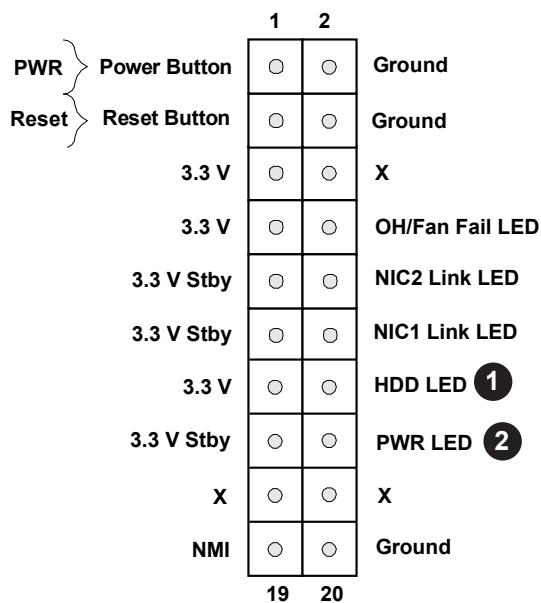


1. HDD LED
2. Power LED

## NMI Button

The non-maskable interrupt (NMI) button header is located on pins 19 and 20 of JF1. Refer to the table below for pin definitions.

NMI Button Pin Definitions	
Pins	Definition
19	Control
20	Ground

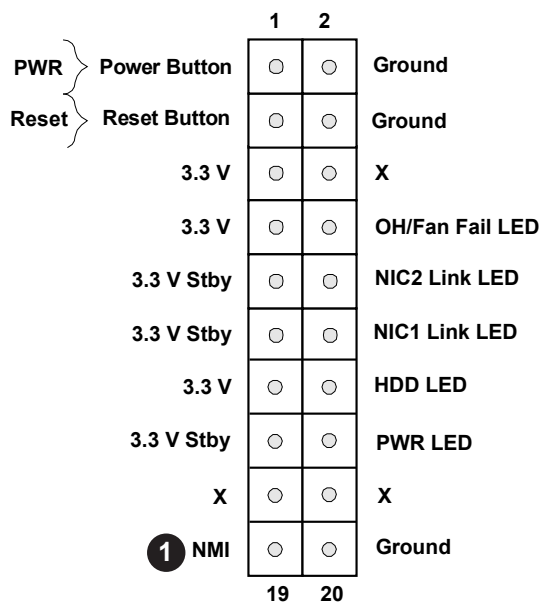

### 1. NMI


## 2.7 Connectors

### Power Connections

#### ATX Power Supply Connector

The 24-pin power supply connector (JPW1) meets the ATX SSI EPS 12V specification. You must also connect the 8-pin (JPV1) processor power connector to the power supply.

ATX Power 24-pin Connector Pin Definitions			
Pin#	Definition	Pin#	Definition
13	+3.3 V	1	+3.3 V
14	-12 V	2	+3.3 V
15	Ground	3	Ground
16	PS_ON	4	+5 V
17	Ground	5	Ground
18	Ground	6	+5 V
19	Ground	7	Ground
20	Res (NC)	8	PWR_OK
21	+5 V	9	5VSB
22	+5 V	10	+12 V
23	+5 V	11	+12 V
24	Ground	12	+3.3 V

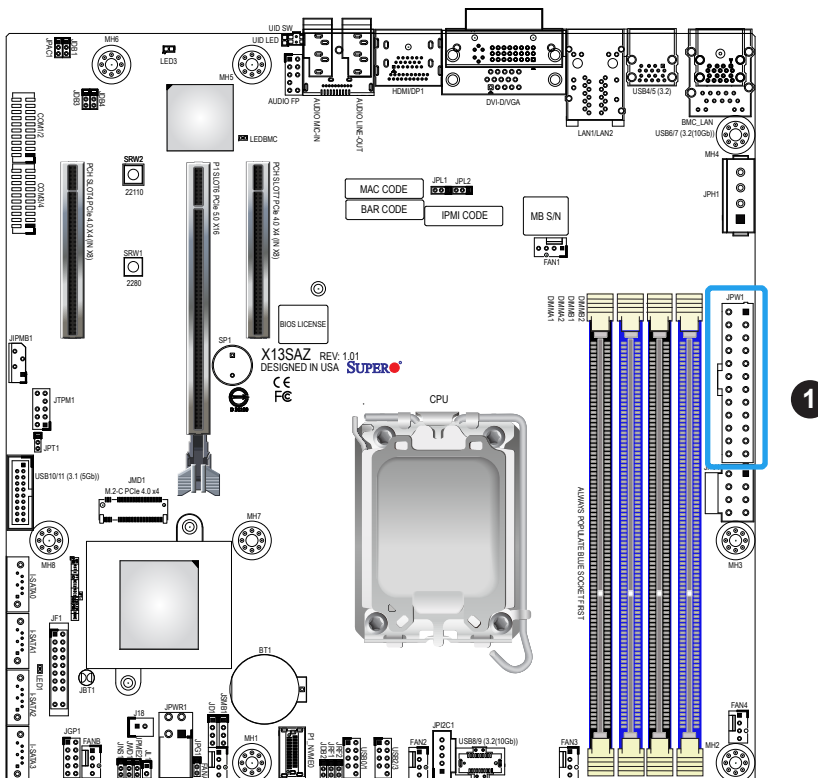

1. ATX Power Connector

## 8-Pin Power Connector

JPV1 is an 8-pin 12V DC power input for CPU or alternative single power source for a special enclosure when the 24-pin ATX power is not in use. Refer to the table below for pin definitions.


8-pin Power Pin Definitions	
Pin#	Definition
1–4	Ground
5–8	P12 V (12 V Power)

### Required Connection

## 4-pin HDD Power Connector

JPH1 is a 4-pin power connector that provides power to onboard HDD devices. Refer to the table below for pin definitions.


4-pin HDD Power Pin Definitions	
Pin#	Definition
1	12 V
2	GND
3	GND
4	5 V

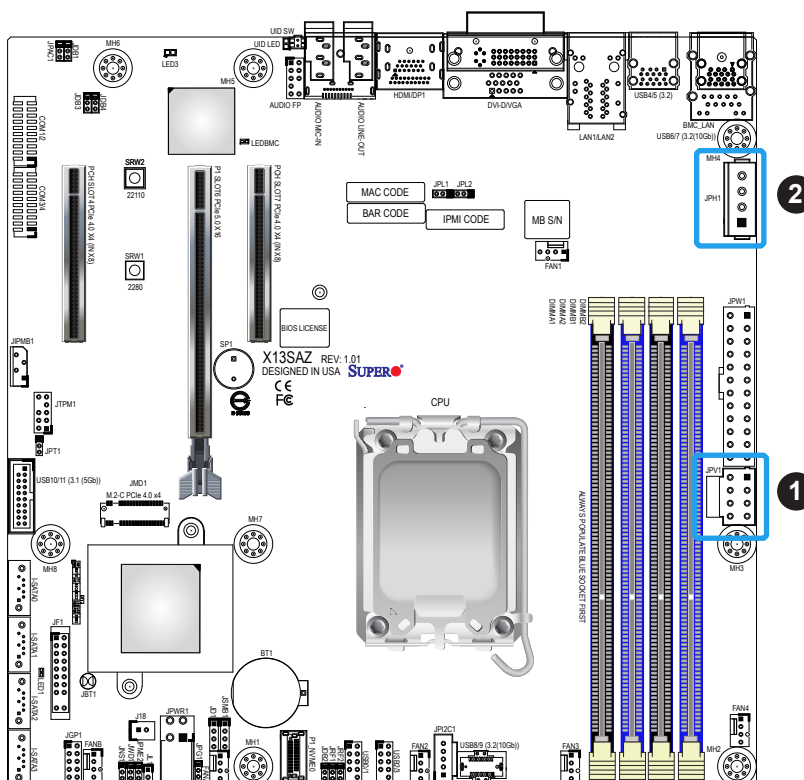


1. 8-pin 12 V DC Power
2. 4-pin 12 V Power

### 4-pin GPU Card Power Connector

JPWR1 is a 4-pin power connector for a GPU card.

-  **Note 1:** Maximum power output is up to 250 W.
- Note 2:** Cable specification AWG #16.

4-pin Power Pin Definitions	
Pin#	Definition
1-2	Ground
3-4	+12 V

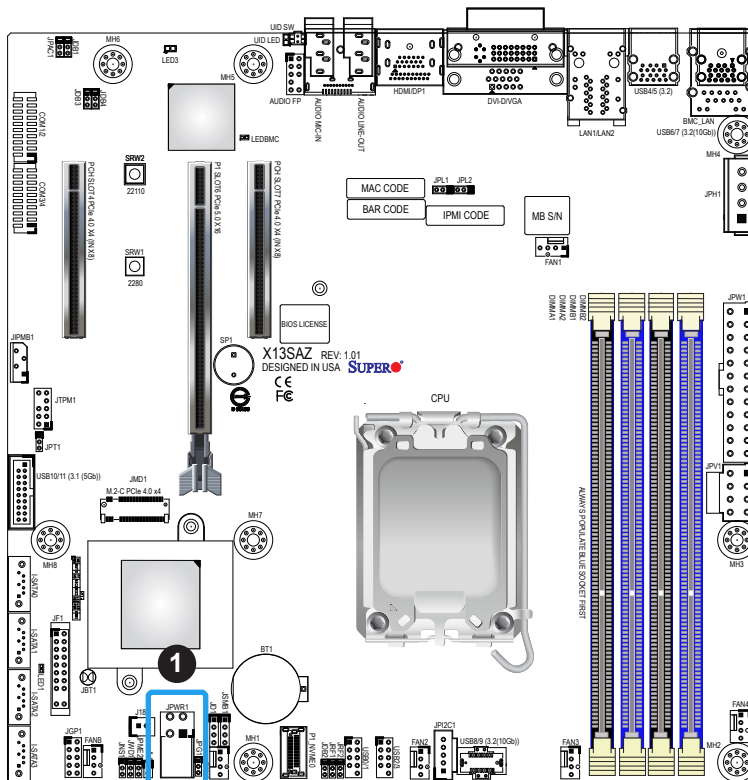

1. 4-pin GPU Power



## Headers

### Fan Headers


There are six 4-pin fan headers on the motherboard. Although pins 1-3 of the fan headers are backward compatible with the traditional 3-pin fans, we recommend you use 4-pin fans to take advantage of the fan speed control via Pulse Width Modulation through the thermal management. This allows the fan speeds to be automatically adjusted based on the motherboard temperature.

Fan Header Pin Definitions	
Pin#	Definition
1	Ground (Black)
2	2.5 A/+12 V (Red)
3	Tachometer
4	PWM_Control

### Chassis Intrusion

A Chassis Intrusion header is located at JL1 on the motherboard. Attach the appropriate cable from the chassis to inform you of a chassis intrusion when the chassis is opened. Refer to the table below for pin definitions.

Chassis Intrusion Pin Definitions	
Pin#	Definition
1	Intrusion Input
2	Ground

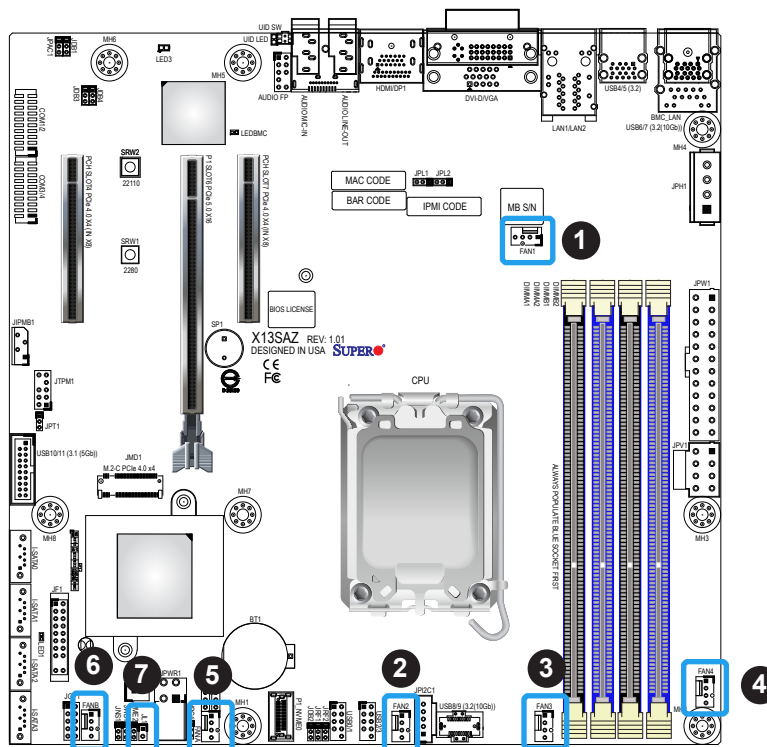


1. FAN1
2. FAN2
3. FAN3
4. FAN4
5. FANA
6. FANB
7. Chassis Intrusion

### General Purpose I/O Header

The General Purpose Input/Output (JGP1) header is a general purpose I/O expander on a pin header via the SMBus. Each pin can be configured to be an input pin or output pin in 2.54 mm pitch. Refer to the table below for pin definitions.

JGP1 Header Pin Definitions	
Pin#	Definition
1	3.3 V
2	Ground
3	GP0
4	GP1
5	GP2
6	GP3
7	GP4
8	GP5
9	GP6
10	GP7

### 1. General Purpose Header

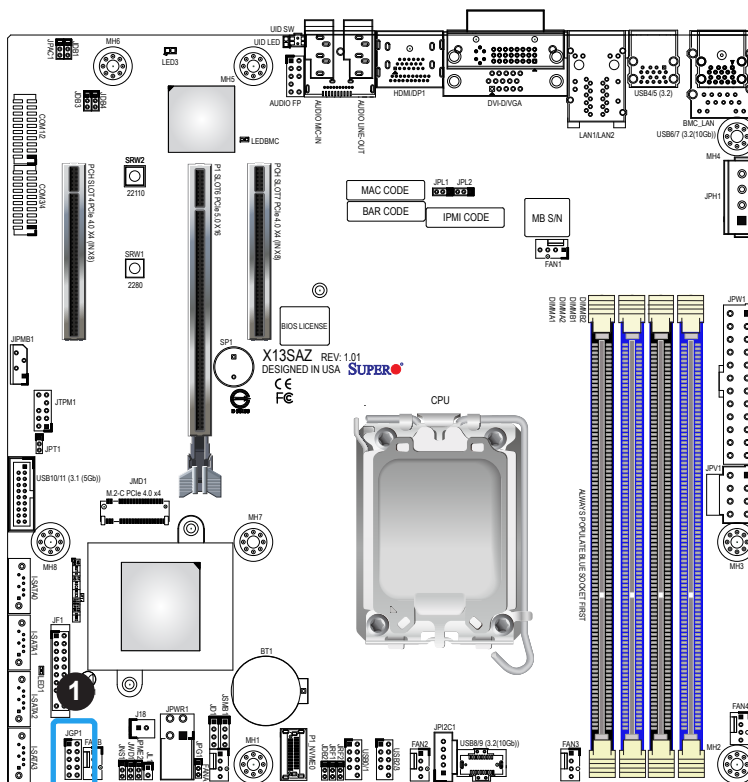

## Extended CMOS Battery Connector

J18 is a power connector that provides additional power to maintain the CMOS data with an external battery. Refer to the table below for pin definitions.


CMOS Battery Connector Pin Definitions	
Pin#	Definition
1	VBAT
2	Ground

### Required Connection

## Internal Speaker/Buzzer

The Internal Speaker/Buzzer (SP1) is used to provide audible indications for various beep codes. Refer to the table below for pin definitions.

Internal Buzzer Pin Definitions		
Pin#	Definition	
1	Pos (+)	Beep In
2	Neg (-)	Alarm Speaker

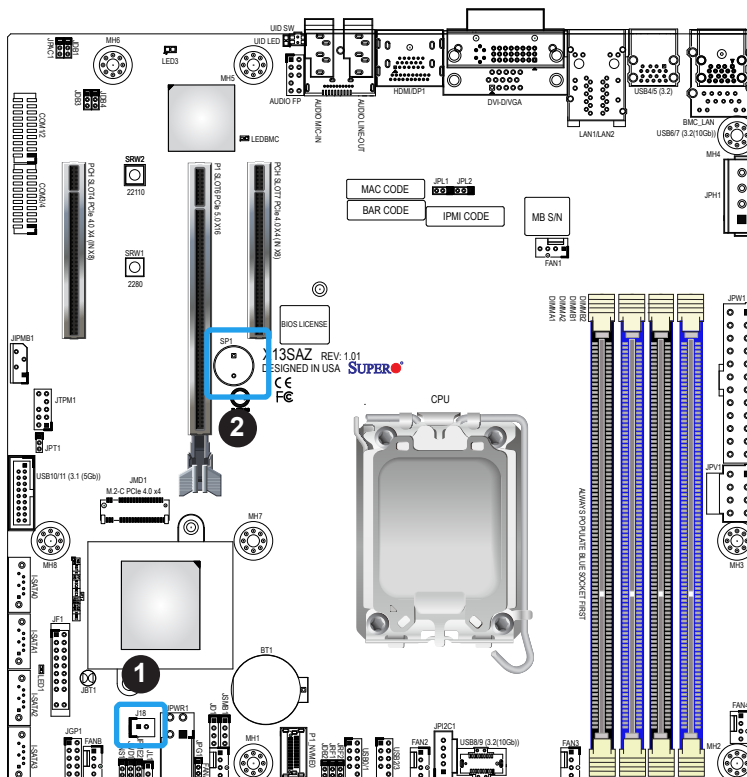

1. Extended CMOS Battery
2. Internal Speaker/Buzzer

### TPM/Port 80 Header

A Trusted Platform Module (TPM)/Port 80 header is located at JTPM1 to provide TPM support and Port 80 connection. Use this header to enhance system performance and data security. Refer to the table below for pin definitions. Please go to the following link for more information on the TPM: <http://www.supermicro.com/manuals/other/TPM.pdf>.


Trusted Platform Module Header Pin Definitions			
Pin#	Definition	Pin#	Definition
1	+3.3 V	2	SPI_CS#
3	RESET#	4	SPI_MISO
5	SPI_CLK	6	GND
7	SPI_MOSI	8	NC
9	+3.3 V Stdbby	10	SPI_IRQ#

### Speaker Header

On the JD1 header, pins 1-4 are for the speaker and pins 3-4 are for the buzzer. Connect a cable to this header to use it as a buzzer.

Speaker Header Pin Definitions	
Pin #	Definition
1-4	Speaker
3-4	Buzzer

1. TPM Header
2. Speaker Header

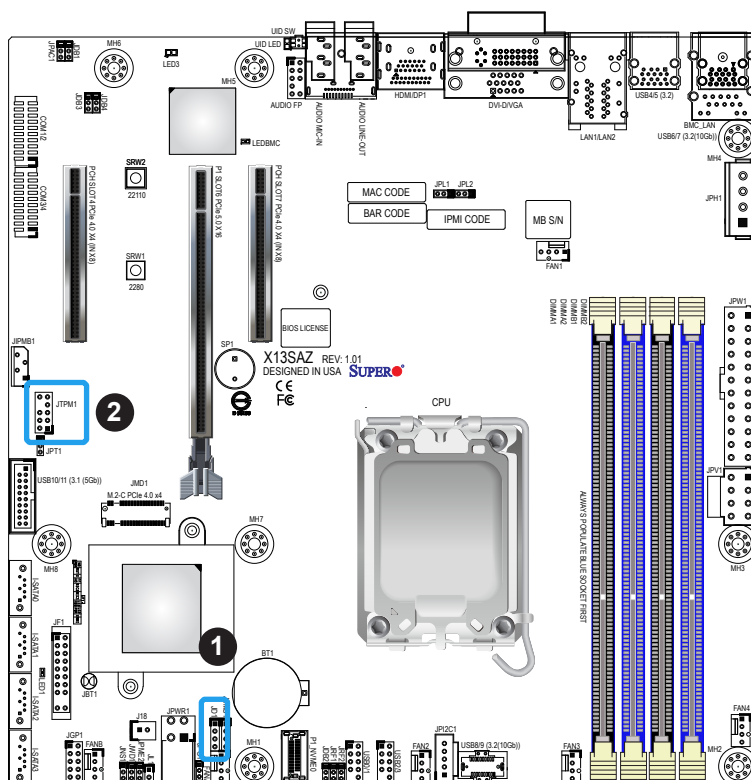

## Power SMB (I<sup>2</sup>C) Header


The Power System Management Bus (I<sup>2</sup>C) connector (JPI<sup>2</sup>C1) monitors the power supply, fan, and system temperatures. Refer to the table below for pin definitions.

Power SMB Header Pin Definitions	
Pin#	Definition
1	Clock
2	Data
3	PMBUS_Alert
4	Ground
5	NC

## 4-pin BMC External I<sup>2</sup>C Header

A System Management Bus header for IPMI 2.0 is located at JIPMB1. Connect the appropriate cable here to use the IPMB I<sup>2</sup>C connection on your system. Refer to the table below for pin definitions.

External I <sup>2</sup> C Header Pin Definitions	
Pin#	Definition
1	Clock
2	GND
3	Data
4	NC

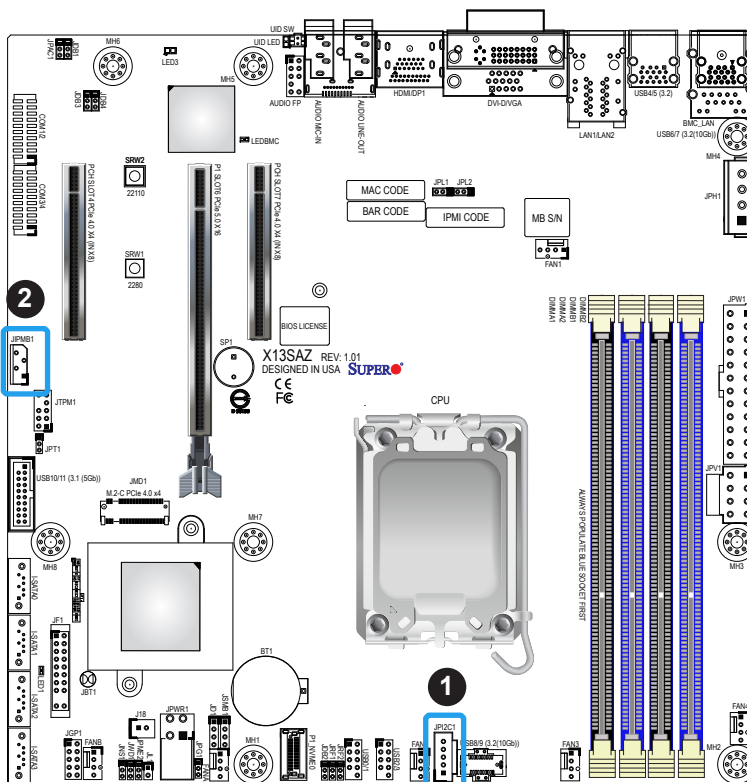


1. Power SMB Header
2. 4-pin BMC External Header

## SATA Ports

The motherboard has four SATA 3.0 ports supported by the R680E/Q670E chipset. SATA ports provide serial-link signal connections, which are faster than the connections of Parallel ATA.

## M.2 Slot


The motherboard has one M.2 slot (JMD1). M.2 was formerly known as Next Generation Form Factor (NGFF) and serves to replace mini PCIe. M.2 allows for a variety of card sizes, increased functionality, and spatial efficiency. JMD1 supports a PCIe 4.0 x4 device in the 2280 and 22110 form factors.

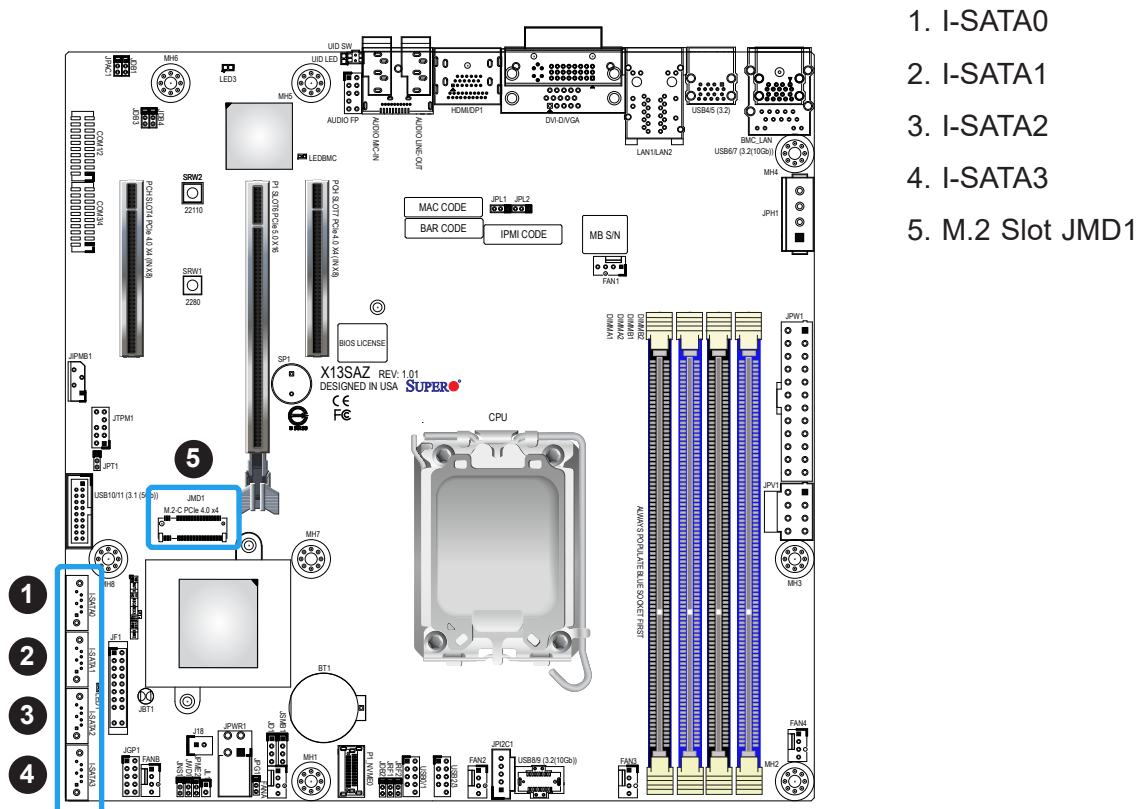

## NVM Express Connector

The motherboard supports a PCIe 4.0 x4 NVMe connection. This connector provides high-speed and low-latency connections directly from the CPU to NVMe Solid State (SSD) drives. This greatly increases SSD data-throughput performance and significantly reduces PCIe latency by simplifying driver/software requirements resulting from direct PCIe interface from the CPU to the NVMe SSD drives.

NVMe Connector Pin Definitions			
Pin#	Signal	Pin#	Signal
A1	NC1	B1	NC3
A2	GND	B2	GND
A3	PERP0	B3	PETP0
A4	PERN0	B4	PETN0
A5	GND	B5	GND
A6	PERP1	B6	PETP1
A7	PERN1	B7	PETN1
A8	GND	B8	GND
A9	SMDAT_VPP	B9	SMBCLK_BMC
A10	SMCLK_VPP	B10	SMBDAT_BMC
A11	GND	B11	GND
A12	REFCLKP	B12	PERST
A13	REFCLKN	B13	RDEN
A14	GND	B14	GND
A15	PERP2	B15	PETP2
A16	PERN2	B16	PETN2
A17	GND	B17	GND
A18	PERP3	B18	PETP3
A19	PERN3	B19	PETN3
A20	GND	B20	GND
A21	NC2	B21	NC4

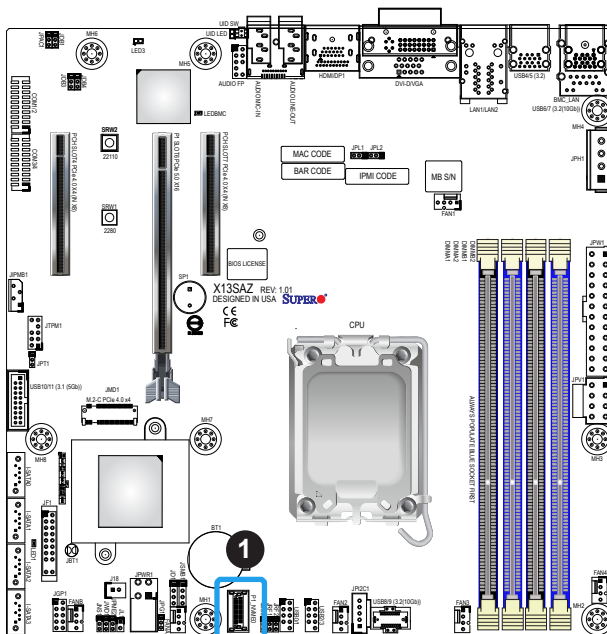


### 1. NVMe Connector

### COM Headers

The motherboard has two COM headers (COM1/2 and COM3/4) that provides serial connections, utilizing Supermicro PN: CBL-CDAT-0604 or CBL-CUSB-0984 (not included). COM1/2 support RS-232/422/485 and COM3/4 support RS-232.

COM Header (COM1/2, COM3/4)			
Pin Definitions			
Pin#	Definition	Pin#	Definition
1	DCDA	2	DSRA
3	RXDA	4	RTSA
5	TXDA	6	CTSA
7	DTRA	8	RIA
9	GND	10	N/A
11	DCDC	12	DSRC
13	RXDC	14	RTSC
15	TXDC	16	CTSC
17	DTRC	18	RIC
19	GND	20	N/A

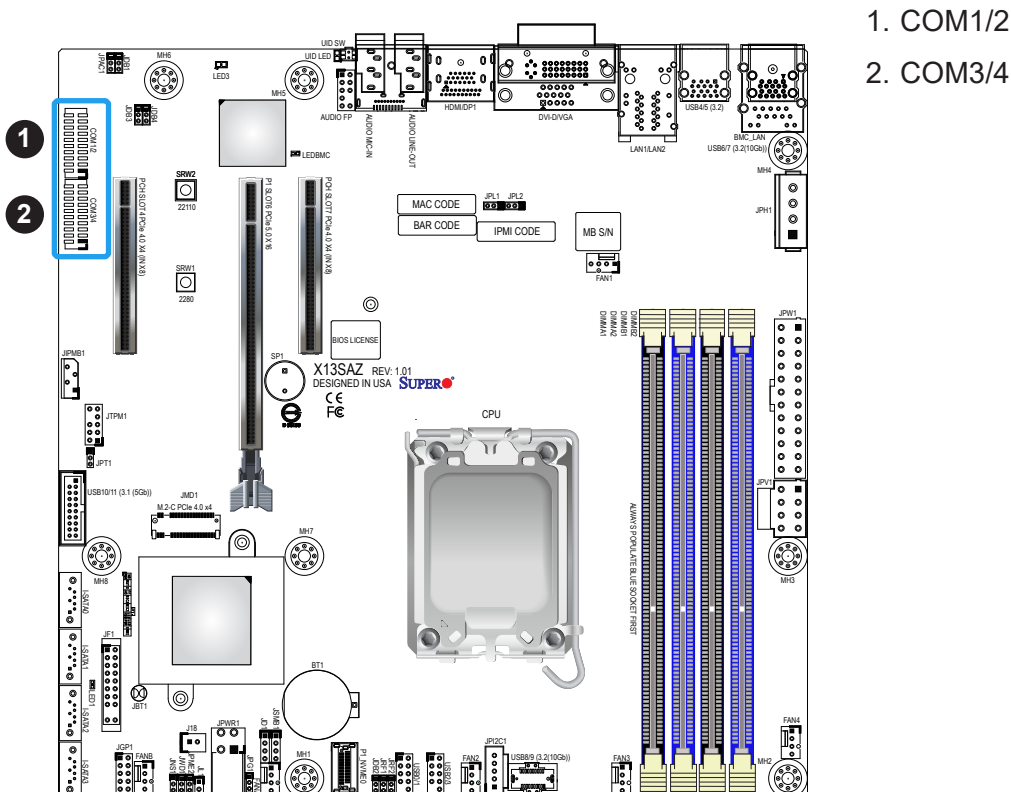

1. COM1/2
2. COM3/4



## Front Panel Audio Header


A 10-pin audio header located at AUDIO FP lets you use the onboard for audio playback. Connect an audio cable to this header to use this feature. Refer to the table below for pin definitions.

Audio Header Pin Definitions			
Pin#	Definition	Pin#	Definition
1	Mic_2_Left	2	Audio_Ground
3	Mic_2_Right	4	Audio_Ground
5	Line_2_Right	6	Mic_2_JD
7	Jack_Detect	8	Key
9	Line_2_left	10	Line_2_JD

## System Management Bus Header

A System Management Bus header for additional slave devices or sensors is located at JSMB1. Refer to the table below for pin definitions.

SMBus Header Pin Definitions	
Pin#	Definition
1	Data
2	Ground
3	Clock

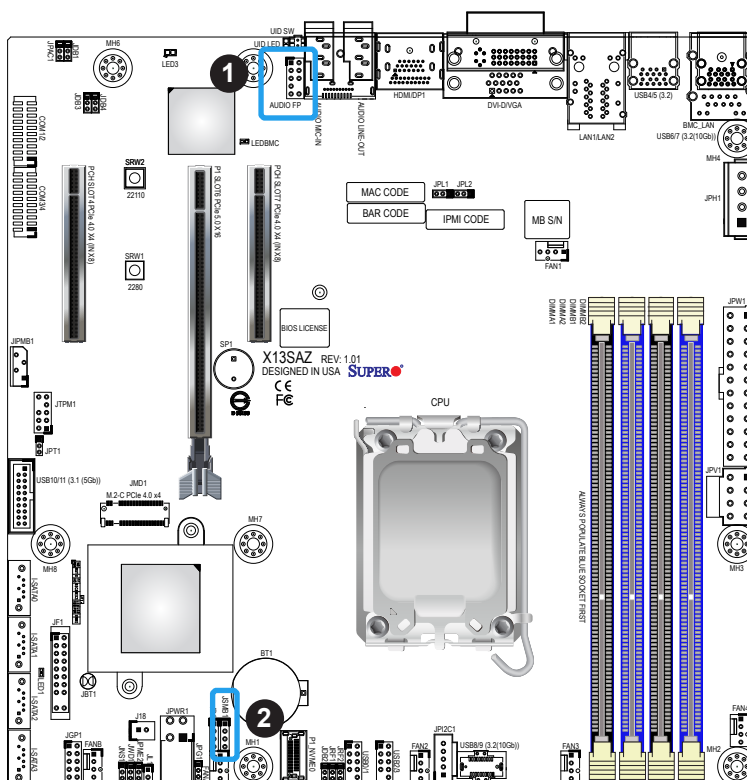


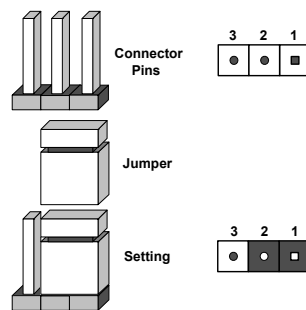
1. Audio Front Panel Header
2. SMBus Header

## 2.8 Jumper Settings

### How Jumpers Work

To modify the operation of the motherboard, jumpers can be used to choose between optional settings. Jumpers create shorts between two pins to change the function of the connector. Pin 1 is identified with a square solder pad on the printed circuit board. See the diagram below for an example of jumping pins 1 and 2. Refer to the motherboard layout page for jumper locations.

 **Note:** On two-pin jumpers, "Closed" means the jumper is on and "Open" means the jumper is off the pins.




### CMOS Clear

JBT1 is used to clear CMOS, which will also clear any passwords. Instead of pins, this jumper consists of contact pads to prevent accidentally clearing the contents of CMOS.

*To Clear CMOS*

1. First power down the system and unplug the power cord(s).
2. Remove the cover of the chassis to access the motherboard.
3. Remove the onboard battery from the motherboard.
4. Short the CMOS pads with a metal object such as a small screwdriver for at least four seconds.
5. Remove the screwdriver (or shorting device).
6. Replace the cover, reconnect the power cord(s), and power on the system.

 **Note:** Clearing CMOS will also clear all passwords.

Do not use the PW\_ON connector to clear CMOS.



## Watchdog Timer


Watchdog (JWD1) is a system monitor that can reboot the system when a software application hangs. Close pins 1–2 to reset the system if an application hangs. Close pins 2–3 to generate a non-maskable interrupt (NMI) signal for the application that hangs. Refer to the table below for jumper settings. The Watchdog must also be enabled in the BIOS.

Watchdog Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Reset (Default)
Pins 2–3	NMI
Open	Disabled

## TPM Enable

Use JPT1 to enable or disable the onboard TPM 2.0. Refer to the table below for jumper settings.

TPM Enable/Disable Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Enabled (Default)
Pins 2–3	Disabled

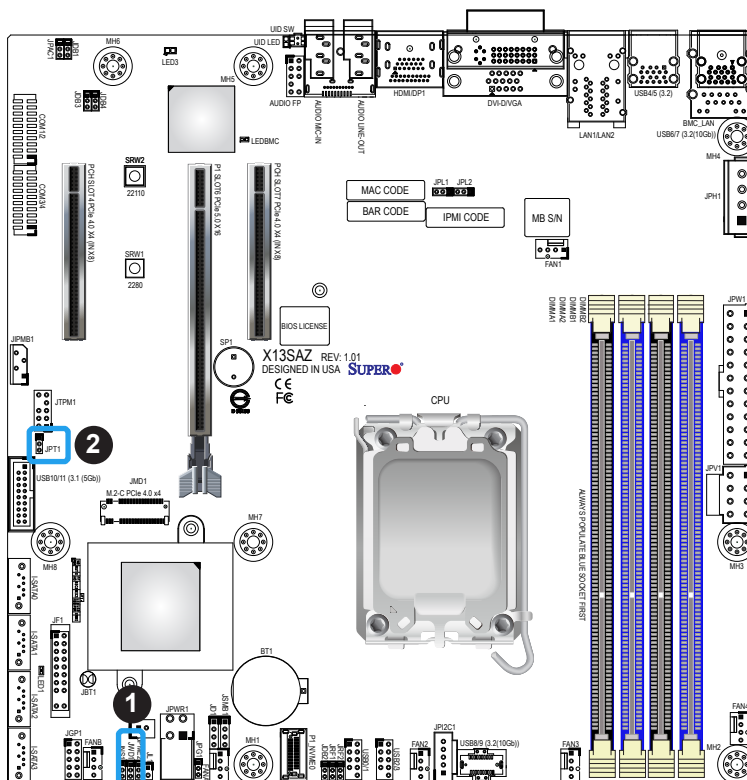

1. Watchdog Timer
2. TPM Enable

### LAN1/LAN2 Enable/Disable


Use jumper JPL1 to enable or disable LAN port 1 and JPL2 to enable or disable LAN port 2. Refer to the table below for jumper settings.

LAN1/LAN2 Enable/Disable Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Enabled (Default)
Pins 2–3	Disabled

### Audio Enable/Disable

JPAC1 allows you to enable or disable the onboard audio support. The default position is on pins 1 and 2 to enable onboard audio connections. Refer to the table below for jumper settings.

Audio Enable/Disable Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Enabled (Default)
Pins 2–3	Disabled

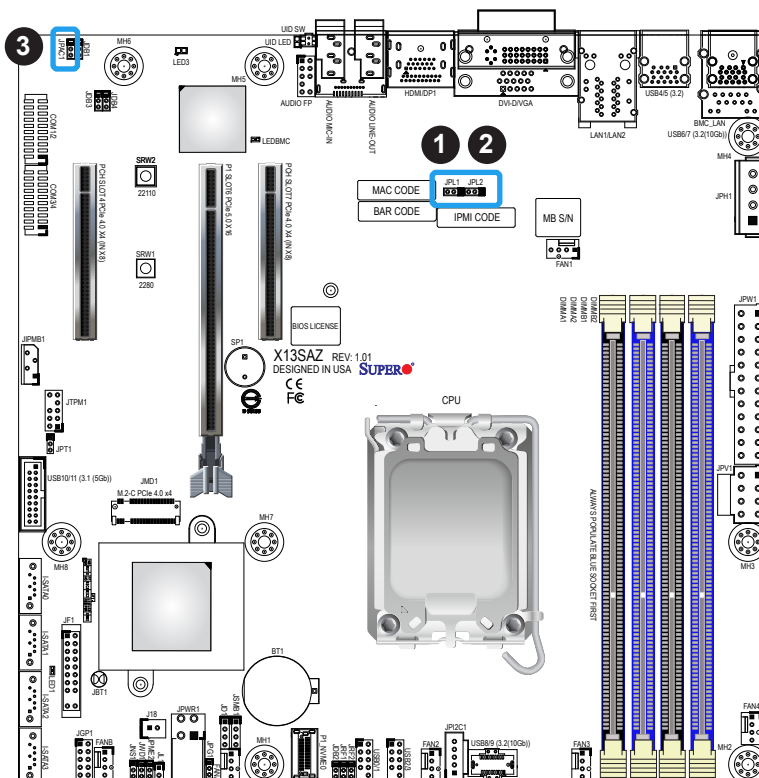

1. LAN1 Enable/Disable
2. LAN2 Enable/Disable
3. Audio Enable/Disable

## NVMe/SATA Mode Select


Use jumper JNS1 to select NVMe or SATA. SATA via OCulink requires and OEM BIOS.

NVMe/SATA Mode Select Jumper Settings	
Jumper Setting	Definition
Pins 1–2	SATA
Pins 2–3	NVMe (Default)

## ME Manufacturing Mode

Close pins 2–3 of jumper JPME2 to bypass SPI flash security and force the system to operate in the manufacturing mode, which allows you to flash the system firmware from a host server for system setting modifications. Refer to the table below for jumper settings.

ME Manufacturing Mode Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Normal (Default)
Pins 2–3	Manufacturing Mode

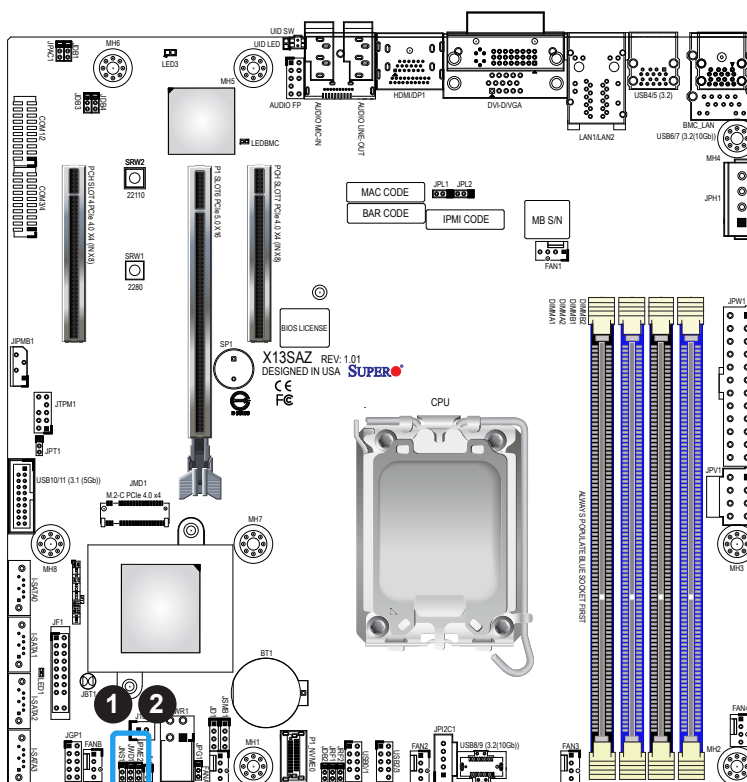

1. NVMe/SATA Mode Select
2. ME Manufacturing Mode

### SLOT6 PCIe Bifurcation


Use JRF1 to adjust the PCIe lane options on Slot 6 expansion slot. The options are x16 and x8x8.

PCIe Bifurcation Jumper Settings		
JRF1	JRF2	PEG
Pins 1–2	Pins 1–2	x16 (Default)
Pins 2–3	Pins 1–2	x8x8

### VGA Enable/Disable

Jumper JPG1 allows you to enable the onboard VGA connector. The default setting is pins 1–2 to enable the connection. Refer to the table below for jumper settings.

VGA Enable/Disable Jumper Settings	
Jumper Setting	Definition
Pins 1–2	Enabled (Default)
Pins 2–3	Disabled

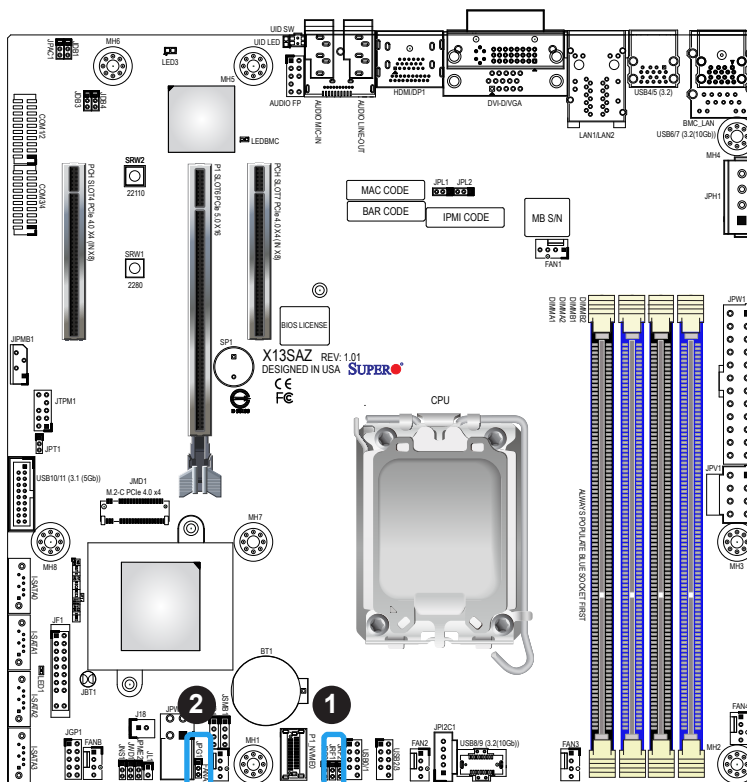

1. JRF1
2. VGA Enable/Disable

## 2.9 LED Indicators

### LAN LEDs

Two LAN ports (LAN 1 and LAN 2) are located on the rear I/O panel of the motherboard. Each Ethernet LAN port has two LEDs. The green LED indicates activity, while the other Link LED may be green, amber, or off to indicate the speed of the connection. Refer to the tables below for more information.

LAN1/2 Activity LED (Right)		
LED State		
Color	Status	Definition
Green	Flashing	Active

LAN1/2 Link LED (Left)	
LED State	
LED Color	Definition
Yellow/Amber	1Gbps

### BMC LAN LEDs


In addition to LAN1 and LAN2, a BMC LAN is also located on the rear I/O panel. The amber LED on the right indicates activity, while the green LED on the left indicates the speed of the connection. Refer to the table below for more information.

BMC LAN LEDs		
	Color/State	Definition
Link (left)	Green: Solid Amber: Solid	100 Mbps 1Gbps
Activity (Right)	Amber: Blinking	Active

### BMC LAN



1. LAN1/LAN2 LEDs
2. BMC LAN LED

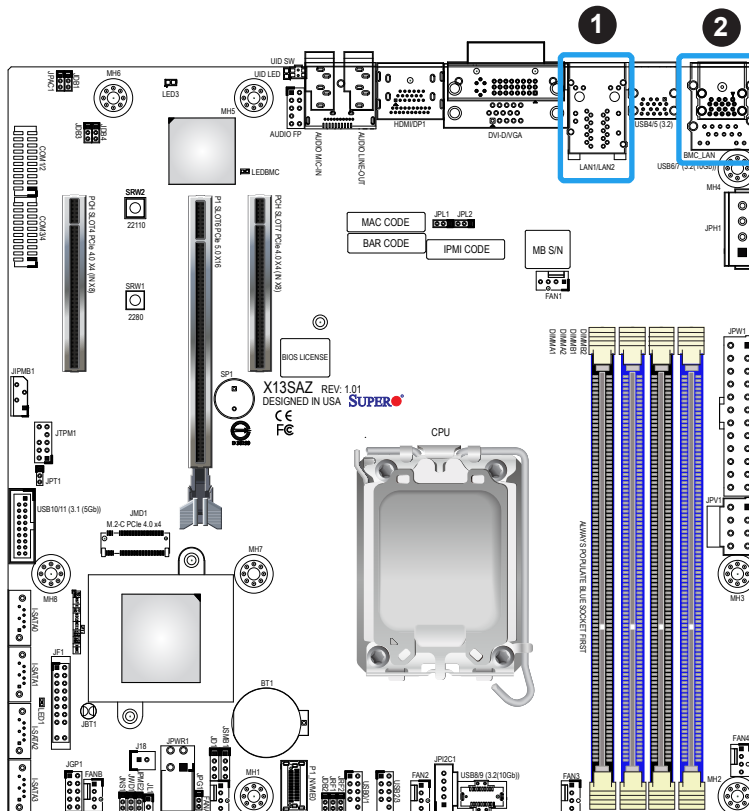

### Onboard Power LED


LED1 is the onboard Power LED. When this LED is on, the system is on. Turn off the system and unplug the power cord before removing or installing components. Refer to the table below for more information.

Onboard Power LED Indicator	
LED Color	Definition
Off	System Off (power cable not connected)
Green	System On

### BMC Heartbeat LED

LEDBMC is the BMC Heartbeat LED. When the LED is blinking green, BMC is working. Refer to the table below for the LED status.

BMC Heartbeat LED	
LED Color	Definition
Green: Blinking	BMC Normal

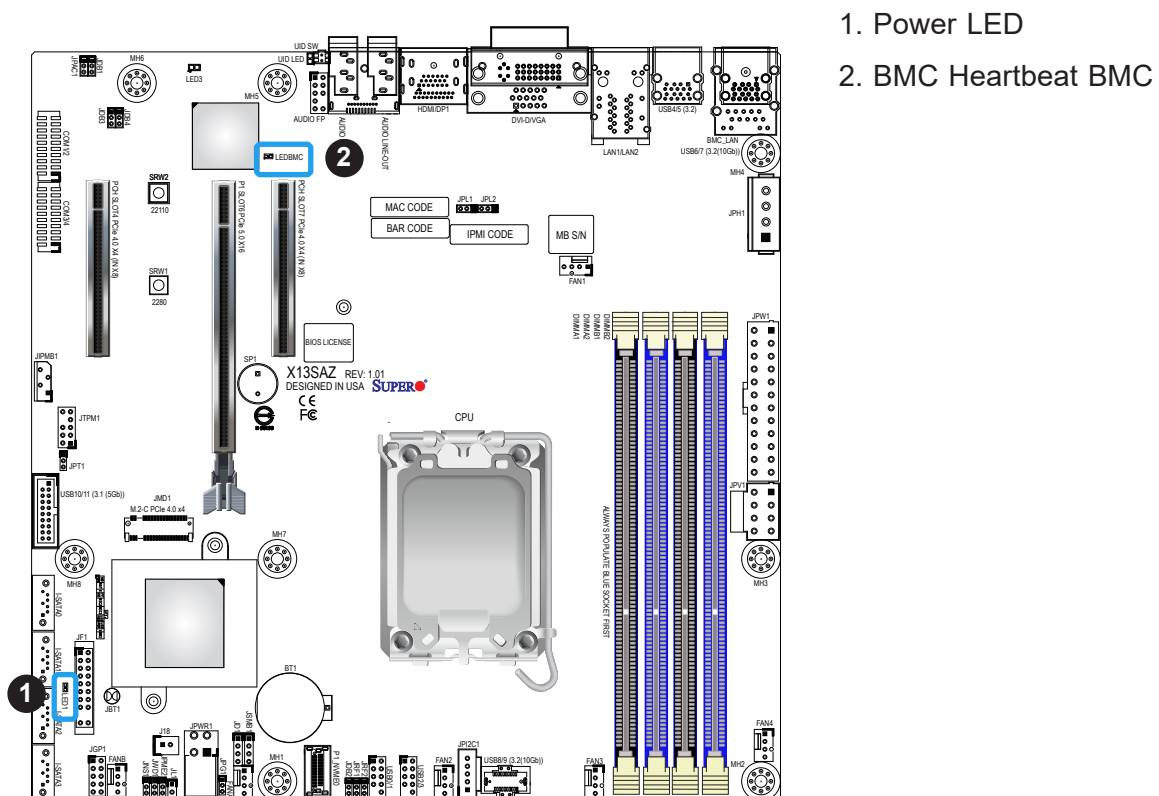


1. Power LED
2. BMC Heartbeat BMC



## BMC Power and Fan LED

LED3 is the BMC Power and Fan LED. When LED3 is solid red, there is a PWR or FAN fail. Refer to the table below for more information.

BMC PWR/FAN LED State	
LED Color	Definition
Soild Red	PWR Fail or FAN Fail

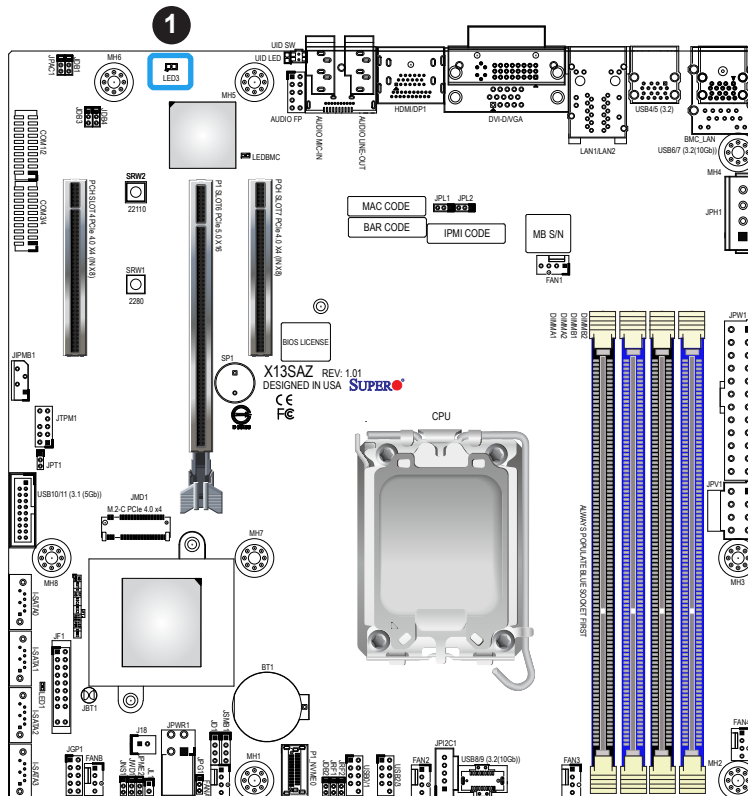

1. BMC Power and Fan LED

# Chapter 3

## Troubleshooting

### 3.1 Troubleshooting Procedures

Use the following procedures to troubleshoot your system. If you have followed all of the procedures below and still need assistance, refer to the 'Technical Support Procedures' and/or 'Returning Merchandise for Service' section(s) in this chapter. Always disconnect the AC power cord before adding, changing or installing any non hot-swap hardware components.

#### Before Power On

1. Make sure that there are no short circuits between the motherboard and chassis.
2. Disconnect all ribbon/wire cables from the motherboard, including those for the keyboard and mouse.
3. Remove all add-on cards.
4. Install the CPU (making sure it is fully seated) and connect the front panel connectors to the motherboard.

#### No Power

1. Make sure that there are no short circuits between the motherboard and the chassis.
2. Make sure that the ATX power connectors are properly connected.
3. Check that the 115V/230 V switch, if available, on the power supply is properly set.
4. Turn the power switch on and off to test the system, if applicable.
5. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.

## No Video

1. If the power is on, but you have no video, remove all add-on cards and cables.
2. Use the speaker to determine if any beep codes are present. Refer to Appendix A for details on beep codes.
3. Remove all memory modules and turn on the system (if the alarm is on, check the specs of memory modules, reset the memory or try a different one).

## System Boot Failure

If the system does not display Power-On-Self-Test (POST) or does not respond after the power is turned on, check the following:

1. Check for any error beep from the motherboard speaker.
  - If there is no error beep, try to turn on the system without DIMM modules installed. If there is still no error beep, replace the motherboard.
  - If there are error beeps, clear the CMOS settings by unplugging the power cord and contacting both pads on the CMOS clear jumper (JBT1). Refer to Section 2-8 in Chapter 2.
2. Remove all components from the motherboard, especially the DIMM modules. Make sure that system power is on and that memory error beeps are activated.
3. Turn on the system with only one DIMM module installed. If the system boots, check for bad DIMM modules or slots by following the Memory Errors Troubleshooting procedure in this chapter.

## Memory Errors

When a no-memory beep code is issued by the system, check the following:

1. Make sure that the memory modules are compatible with the system and are properly installed. See Chapter 2 for installation instructions. (For memory compatibility, refer to the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.)
2. Check if different speeds of DIMMs have been installed. It is strongly recommended that you use the same RAM type and speed for all DIMMs in the system.
3. Make sure that you are using the correct type of ECC DDR5 modules recommended by the manufacturer.
4. Check for bad DIMM modules or slots by swapping a single module among all memory slots and check the results.

## Losing the System's Setup Configuration

1. Make sure that you are using a high-quality power supply. A poor-quality power supply may cause the system to lose the CMOS setup information. Refer to Chapter 2 for details on recommended power supplies.
2. The battery on your motherboard may be old. Check to verify that it still supplies approximately 3 VDC. If it does not, replace it with a new one.
3. If the above steps do not fix the setup configuration problem, contact your vendor for repairs.

## When the System Becomes Unstable

### **A. If the system becomes unstable during or after OS installation, check the following:**

1. CPU/BIOS support: Make sure that your CPU is supported and that you have the latest BIOS installed in your system.
2. Memory support: Make sure that the memory modules are supported by testing the modules using memtest86 or a similar utility.



**Note:** Click on the "Tested Memory List" link on the motherboard's product page to see a list of supported memory.

3. HDD support: Make sure that all hard disk drives (HDDs) work properly. Replace the bad HDDs with good ones.
4. System cooling: Check the system cooling to make sure that all heatsink fans and CPU/system fans, etc., work properly. Also check the front panel Overheat LED and make sure that it is not on.
5. Adequate power supply: Make sure that the power supply provides adequate power to the system. Make sure that all power connectors are connected. Please refer to our website for more information on the minimum power requirements.
6. Proper software support: Make sure that the correct drivers are used.

### **B. If the system becomes unstable before or during OS installation, check the following:**

1. Source of installation: Make sure that the devices used for installation are working properly, including boot devices such as USB flash or media drives.
2. Cable connection: Check to make sure that all cables are connected and working properly.

3. Use the minimum configuration for troubleshooting: Remove all unnecessary components (starting with add-on cards first), and use the minimum configuration (but with the CPU and a memory module installed) to identify the trouble areas. Refer to the steps listed in Section A above for proper troubleshooting procedures.
4. Identify bad components by isolating them: If necessary, remove a component in question from the chassis, and test it in isolation to make sure that it works properly. Replace a bad component with a good one.
5. Check and change one component at a time instead of changing several items at the same time. This will help isolate and identify the problem.
6. To find out if a component is good, swap this component with a new one to see if the system will work properly. If so, then the old component is bad. You can also install the component in question in another system. If the new system works, the component is good and the old system has problems.

## 3.2 Technical Support Procedures

Before contacting Technical Support, please take the following steps. Also, please note that as a motherboard manufacturer, Supermicro also sells motherboards through its channels, so it is best to first check with your distributor or reseller for troubleshooting services. They should know of any possible problems with the specific system configuration that was sold to you.

1. Please go through the Troubleshooting Procedures and Frequently Asked Questions (FAQ) sections in this chapter or see the FAQs on our website (<http://www.supermicro.com/FAQ/index.php>) before contacting Technical Support.
2. BIOS upgrades can be downloaded from our website ([http://www.supermicro.com/ResourceApps/BIOS\\_IPMI\\_Intel.html](http://www.supermicro.com/ResourceApps/BIOS_IPMI_Intel.html)).
3. If you still cannot resolve the problem, include the following information when contacting Supermicro for technical support:
  - Motherboard model and PCB revision number
  - BIOS release date/version (this can be seen on the initial display when your system first boots up).
  - System configuration
4. An example of a Technical Support form is on our website at <http://www.supermicro.com/RmaForm/>.
5. Distributors: For immediate assistance, please have your account number ready when placing a call to our Technical Support department. We can be reached by email at [support@supermicro.com](mailto:support@supermicro.com).

### 3.3 Frequently Asked Questions

**Question: What type of memory does my motherboard support?**

**Answer:** The motherboard supports 128 GB of DDR5 ECC/Non-ECC UDIMM memory with speeds of up to 4000 MT/s in four memory slots. To enhance memory performance, do not mix memory modules of different speeds and sizes. Please follow all memory installation instructions given on Section 2-4 in Chapter 2.

**Question: How do I update my BIOS?**

**Answer:** It is recommended that you do not upgrade your BIOS if you are not experiencing any problems with your system. Updated BIOS files are located on our website at [http://www.supermicro.com/ResourceApps/BIOS\\_IPMI\\_Intel.html](http://www.supermicro.com/ResourceApps/BIOS_IPMI_Intel.html). Please check our BIOS warning message and the information on how to update your BIOS on our website. Select your motherboard model and download the BIOS file to your computer. Also, check the current BIOS revision to make sure that it is newer than your BIOS before downloading. Please unzip the BIOS file onto a bootable USB device. Run the batch file using the format FLASH.BAT filename.rom from your bootable USB device to flash the BIOS. Then, your system will automatically reboot.

**Warning:** Do not shut down or reset the system while updating the BIOS to prevent possible system boot failure!



**Note:** The SPI BIOS chip used on this motherboard cannot be removed. Send your motherboard back to our RMA Department at Supermicro for repair. For BIOS Recovery instructions, please refer to the AMI BIOS Recovery Instructions posted at <http://www.supermicro.com/support/manuals/>.

## 3.4 Battery Removal and Installation

### Battery Removal

To remove the onboard battery, follow the steps below:

1. Power off your system and unplug your power cable.
2. Locate the onboard battery as shown below.
3. Using a tool such as a pen or a small screwdriver, push the battery lock outwards to unlock it. Once unlocked, the battery will pop out from the holder.
4. Remove the battery.

### Proper Battery Disposal


Please handle used batteries carefully. Do not damage the battery in any way; a damaged battery may release hazardous materials into the environment. Do not discard a used battery in the garbage or a public landfill. Please comply with the regulations set up by your local hazardous waste management agency to dispose of your used battery properly.

### Battery Installation

1. To install an onboard battery, follow steps 1 and 2 above and continue below:
2. Identify the battery's polarity. The positive (+) side should be facing up.
3. Insert the battery into the battery holder and push it down until you hear a click to ensure that the battery is securely locked.



**Important:** When replacing a battery, be sure to only replace it with the same type.

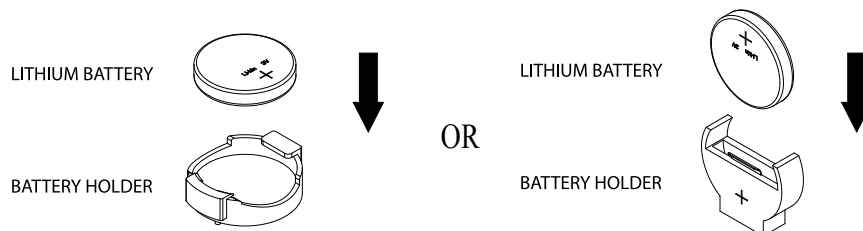



### 3.5 Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the motherboard to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete. For faster service, you can also request a RMA authorization online (<http://www.supermicro.com/RmaForm/>).

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

## Chapter 4

# UEFI BIOS

### 4.1 Introduction

This chapter describes the AMIBIOS™ Setup utility for the motherboard. The BIOS is stored on a chip and can be easily upgraded using a flash program.



**Note:** Due to periodic changes to the BIOS, some settings may have been added or deleted and might not yet be recorded in this manual. Please refer to the Manual Download area of our website for any changes to the BIOS that may not be reflected in this manual.

#### Starting the Setup Utility

To enter the BIOS Setup Utility, hit the <Delete> key while the system is booting-up. (In most cases, the <Delete> key is used to invoke the BIOS setup screen. There are a few cases when other keys are used, such as <F1>, <F2>, etc.) Each main BIOS menu option is described in this manual.

The Main BIOS screen has two main frames. The left frame displays all the options that can be configured. “Grayed-out” options cannot be configured. The right frame displays the key legend. Above the key legend is an area reserved for a text message. When an option is selected in the left frame, it is highlighted in white. Often a text message will accompany it. (Note that the BIOS has default text messages built in. We retain the option to include, omit, or change any of these text messages.) Settings printed in **Bold** are the default values.

A " ►" indicates a submenu. Highlighting such an item and pressing the <Enter> key will open the list of settings within that submenu.

The BIOS setup utility uses a key-based navigation system called hot keys. Most of these hot keys (<F1>, <F2>, <F3>, <F4>, <Enter>, <ESC>, <Arrow> keys, etc.) can be used at any time during the setup navigation process.


## 4.2 Main Setup

You will see the Main setup screen when you first enter the AMI BIOS setup utility. You can always return to the Main setup screen by selecting the Main tab on the top of the screen. The Main BIOS setup screen is shown below and the following items will be displayed:



### System Date/System Time

Use this option to change the system date and time. Highlight *System Date* or *System Time* using the arrow keys. Enter new values using the keyboard. Press the <Tab> key or the arrow keys to move between fields. The date must be entered in MM/DD/YYYY format. The time is entered in HH:MM:SS format.

 **Note:** The time is in the 24-hour format. For example, 5:30 P.M. appears as 17:30:00. The date's default value is the BIOS build date after RTC reset.

### Supermicro X13SAZ-F

#### BIOS Version

This feature displays the version of the BIOS ROM used in the system.

#### Build Date

This feature displays the date when the version of the BIOS ROM used in the system was built.


## **Memory Information**

### **Total Memory**

This feature displays the total size of memory available in the system.

## 4.3 Advanced

Use the arrow keys to select the Advanced menu and press <Enter> to access the menu features.

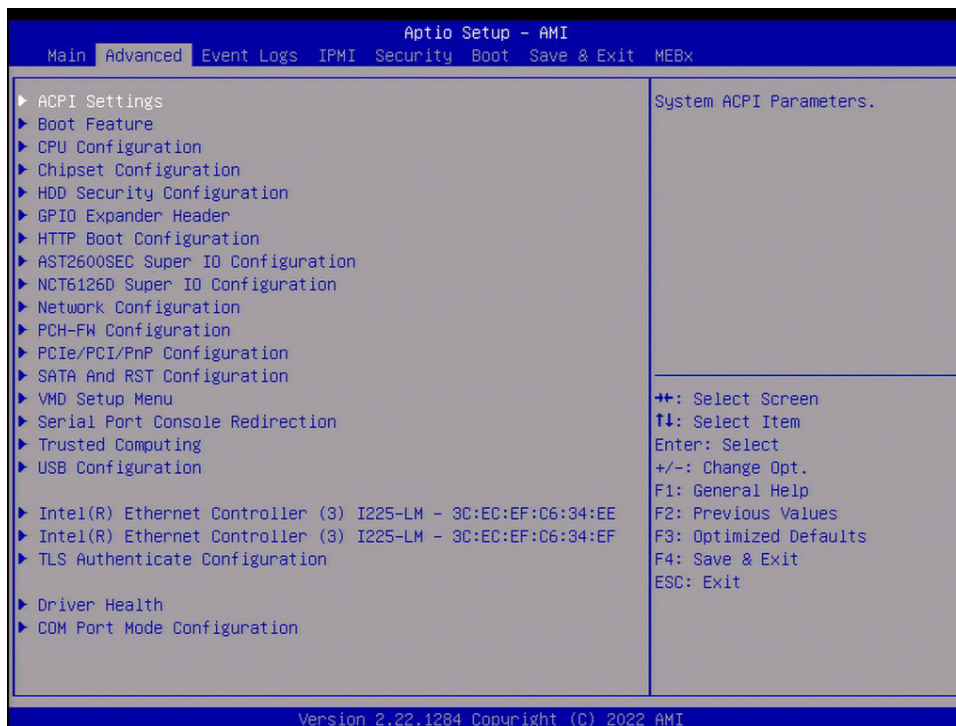

**Warning:** Take caution when changing the Advanced settings. An incorrect value, a very high DRAM frequency, or an incorrect DRAM timing setting may make the system unstable. When this occurs, revert to default manufacturer settings.

### ▶ ACPI Settings

#### ACPI Sleep State

Use this feature to select the ACPI Sleep State that the system will enter into when the suspend button is activated. The options are Suspend Disabled and **S3 (Suspend to RAM)**.

#### WHEA Support

Select Enabled to support the Windows Hardware Error Architecture (WHEA) platform and provide a common infrastructure for the system to handle hardware errors within the Windows OS environment to reduce system crashes and to enhance system recovery and health monitoring. The options are Disabled and **Enabled**.

### High Precision Event Timer

Select Enabled to activate the High Precision Event Timer (HPET) that produces periodic interrupts at a much higher frequency than a Real-time Clock (RTC) does in synchronizing multimedia streams, providing smooth playback and reducing the dependency on other timestamp calculation devices, such as an x86 RDTSC Instruction embedded in the CPU. The High Performance Event Timer is used to replace the 8254 Programmable Interval Timer. The options are Disabled and **Enabled**.

### Native PCIe Enable

Enable this feature to grant control of PCIe Native hot plug, PCIe Power Management Events, and PCIe Capability Structure Control. The options are Disabled and **Enabled**.

### Native ASPM

Select Enabled for the operating system to control the ASPM, or Disabled for the BIOS to control the ASPM. The options are Auto, Enabled, and **Disabled**.

## ► Boot Feature

### Fast Boot

Enable this feature to reduce the time the computer takes to boot up. The computer will boot with a minimal set of required devices. This feature does not have an effect on BBS boot options in the Boot tab. The options are **Disabled** and Enabled.

### Quiet Boot

Use this feature to select the screen display between the POST messages and the OEM logo upon boot up. Select Disabled to display the POST messages. Select Enabled to display the OEM logo instead of the normal POST messages. The options are Disabled and **Enabled**.

### Bootup NumLock State

Use this feature to set the power on state for the <Numlock> key. The options are **On** and Off.

### Wait For "F1" If Error

Use this feature to force the system to wait until the "F1" key is pressed if an error occurs. The options are Disabled and **Enabled**.

### Re-try Boot

If this feature is enabled, the BIOS will automatically reboot the system from a specified boot device after its initial boot failure. The options are **Disabled** and EFI Boot.

## Power Configuration

### Watch Dog Function

If enabled, the Watch Dog Timer will allow the system to reset or generate NMI based on jumper settings when it is expired for more than five minutes. The options are **Disabled** and Enabled.

### AC Loss Power Depend On

Use this feature to set the power state after a power outage. Select Stay Off for the system power to remain off after a power loss. Select Power On for the system power to be turned on after a power loss. Select Last State to allow the system to resume its last power state before a power loss. The options are Stay Off, Power On, and **Last State**.

### Power Button Function

This feature controls how the system shuts down when the power button is pressed. Select 4 Seconds Override to power off the system after pressing and holding the power button for four seconds or longer. Select Instant Off to instantly power off the system as soon as the user presses the power button. The options are **Instant Off** and 4 Seconds Override.

### DeepSx Power Policies

Use this feature to configure the Advanced Configuration and Power Interface (ACPI) settings for the system. Enable S4 to use Hibernation mode (Suspend to Disk) so that all data stored in the main memory can be saved in a non-volatile memory area such as in a hard drive and then power down the system. Enable S5 to power off the whole system except the power supply unit (PSU) and keep the power button alive so that you can wake up the system by using a USB keyboard or mouse. The options are **Disabled**, Enabled In S4-S5, and Enabled in S5.

## ► CPU Configuration

The following CPU information will display:

- CPU Signature
- Microcode Patch
- Max CPU Speed
- Min CPU Speed
- CPU Speed
- Number of Performance-cores
- Number of Efficient-cores

- Hyper Threading Technology
- VMX
- SMX/TXT
- 64-bit
- EIST Technology
- CPU C3 state
- CPU C6 state
- CPU C7 state
- CPU C8 state
- CPU C9 state
- CPU C10 state
- Performance L1 Data Cache
- Performance L1 Instruction Cache
- Performance L2 Cache
- Performance L3 Cache
- Performance L4 Cache
- Efficient L1 Data Cache
- Efficient L1 Instruction Cache
- Efficient L2 Cache
- Efficient L3 Cache
- Efficient L4 Cache

### **C6DRAM**

Use this feature to enable or disable the moving of DRAM contents to PRM memory when the CPU is in the C6 state. The options are Disabled and **Enabled**.



**Hardware Prefetcher (Available when supported by the CPU)**

If set to Enable, the hardware prefetcher will prefetch streams of data and instructions from the main memory to the L2 cache to improve CPU performance. The options are Disabled and **Enabled**.

**Adjacent Cache Prefetch (Available when supported by the CPU)**

The CPU prefetches the cache line for 64 bytes if this feature is set to Disabled. The CPU prefetches both cache lines for 128 bytes as comprised if this feature is set to Enable. The options are Disabled and **Enabled**.

**Intel (VMX) Virtualization Technology**

Use this feature to enable the Vanderpool Technology. This technology allows the system to run several operating systems simultaneously. The options are Disabled and **Enabled**.

**Active Performance-cores**

This feature determines how many processor cores will be activated for each processor package. When all is selected, all cores in the processor will be activated. The options are **All**, 5, 4, 3, 2, and 1.

**Active Efficient-cores**

This feature determines how many efficient cores will be activated for each processor package. When all is selected, all cores in the processor will be activated. The options are **All**, 7, 6, 5, 4, 3, 2, 1, and 0.

**Hyper-Threading (Available when supported by the CPU)**

Select Enable to support Intel Hyper-Threading Technology to enhance CPU performance. The options are Disabled and **Enabled**.

**AES**

Select Enabled for Intel CPU Advanced Encryption Standard (AES) instructions support to enhance data integrity. The options are Disabled and **Enabled**.

**Boot Performance Mode**

This feature allows you to select the performance state that the BIOS will set before the operating system handoff. The options are **Max Non-Turbo Performance** and Turbo Performance.

**Intel® SpeedStep™**

Intel SpeedStep Technology allows the system to automatically adjust processor voltage and core frequency to reduce power consumption and heat dissipation. The options are Disabled and **Enabled**.

### **Intel® Speed Shift Technology**

Use this feature to enable or disable Intel Speed Shift Technology support. When this feature is enabled, the Collaborative Processor Performance Control (CPPC) version 2 interface will be available to control CPU P-States. The options are Disabled and **Enabled**.

### **Turbo Mode**

Select Enable for processor cores to run faster than the frequency specified by the manufacturer. The options are Disabled and **Enabled**.

### **Power Limit 1 Override**

Select Enabled to support average power limit (PL1) override. The options are **Disabled** and Enabled.

### **Power Limit 2 Override**

Select Enabled to support rapid power limit (PL2) override. The options are Disabled and **Enabled**.

### **Power Limit 2**

Use this feature to configure the value for Power Limit 2. The value is in milliwatts and the step size is 125mW. Use the number keys on your keyboard to enter the value. Enter 0 to use the manufacture default setting. If the value is 0, the BIOS will set PL2 as 1.25\* TDP.

### **C-States**

Use this feature to enable the C-State of the CPU. The options are Disabled and **Enabled**.

### **Enhanced C-states**

Use this feature to enable the enhanced C-State of the CPU. The options are Disabled and **Enabled**.

### **C-State Auto Demotion**

Use this feature to prevent unnecessary excursions into the C-states to improve latency. The options are Disabled and **C1**.

### **C-State Un-Demotion**

This feature allows you to enable or disable the un-demotion of C-State. The options are Disabled and **C1**.

### **Package C-State Demotion**

Use this feature to enable or disable the Package C-State demotion. The options are Disabled and **Enabled**.

### **Package C-State Un-Demotion**

Use this feature to enable or disable the Package C-State un-demotion. The options are Disabled and **Enabled**.

### **C-State Pre-Wake**

This feature allows you to enable or disable the C-State Pre-Wake. The options are Disabled and **Enabled**.

### **Package C-State Limit**

Use this feature to set the Package C-State limit. The options are C0/C1, C2, C3, C6, C7, C7s, C8, C9, C10, Cpu Default, and **Auto**.

### **MonitorMWait**

Select Enabled to enable the Monitor/Mwait instructions. The Monitor instructions monitors a region of memory for writes, and MWait instructions instruct the CPU to stop until the monitored region begins to write. The options are Disabled and **Enabled**.

## **► Chipset Configuration**

**Warning:** Setting the wrong values in the following features may cause the system to malfunction.

### **► System Agent (SA) Configuration**

The following information will display:

- VT-d: Supported

### **► Memory Configuration**

#### **Memory Configuration**

- Memory RC Version
- Memory Frequency
- Memory Timing (tCL-tRCD-tRP-tRAS)
- DIMMA1
- DIMMA2
- DIMMB1
- DIMMB2

#### **Maximum Memory Frequency**

Use this feature to set the maximum memory frequency for onboard memory modules. The options are **Auto**, 1067, 1333, 1400, 1600, 1800, 1867, 2000, 2133, 2200, 2400, 2600, 2667, 2800, 2933, 3000, 3200, 3467, 3600, 3733, 4000, 4200, 4267, and 4400.

### **Max TOLUD**

This feature sets the maximum TOLUD value, which specifies the "Top of Low Usable DRAM" memory space to be used by internal graphics devices, GTT Stolen Memory, and TSEG, respectively, if these devices are enabled. The options are **Dynamic**, 1 GB, 1.25 GB, 1.5 GB, 1.75 GB, 2 GB, 2.25 GB, 2.5 GB, 2.75 GB, 3 GB, 3.25 GB, and 3.5 GB.

### **Memory Scrambler**

Use this feature to enable or disable memory scrambler support. The options are Disabled and **Enabled**.

### **Force ColdReset**

Use this feature to enable or disable a cold boot during a MRC execution. The options are Enabled and **Disabled**.

### **Force Single Rank**

Select enabled to use only Rank 0 in each DIMM. The options are **Disabled** and Enabled.

### **Memory Remap**

Use this feature to enable or disable memory remap above 4GB. The options are **Enabled** and Disabled.

### **MRC Fast Boot**

Use this feature to enable or disable fast path through the memory reference code. The options are Disabled and **Enabled**.

### **Total Memory Encryption**

Use this feature to configure Total Memory Encryption (TME) to protect DRAM data from physical attacks. The options are **Disabled** and Enabled.

## **► Graphics Configuration**

### **Graphics Configuration**

#### **IGFX GOP Version**

#### **Graphics Turbo IMON Current**

Use this feature to set the graphics turbo IMON value. The default is **31**.

#### **Skip Scanning of External Gfx Card**

If this feature is enabled, the system will not scan for an external graphics card on PEG and PCIe slots. The options are **Disabled** and Enabled.

**Primary Display**

Use this feature to select the primary video display. The options are **Auto**, IGFX, PEG Slot, and PCH PCI.

**Internal Graphics**

Select Auto to keep an internal graphics device installed on an expansion slot supported by the CPU to be automatically enabled. The options are **Auto**, Disabled, and Enabled.

**GTT Size**

Use this feature to set the memory size to be used by the graphics translation table (GTT). The options are 2MB, 4MB, and **8MB**.

**Aperture Size**

Use this feature to set the Aperture size, which is the size of system memory reserved by the BIOS for graphics device use. The options are 128MB, **256MB**, 512MB, 1024MB, and 2048MB.

**DVMT Pre-Allocated**

Dynamic Video Memory Technology (DVMT) allows dynamic allocation of system memory to be used for video devices to ensure best use of available system memory based on the DVMT 5.0 platform. The options are 0M, 32M, 64M, 96M, 128M, 160M, 4M, 8M, 12M, 16M, 20M, 24M, 28M, 32M/F7, 36M, 40M, 44M, 48M, 52M, 56M, and **60M**.

**PM Support**

Enable this feature to activate Power Management BIOS support. The options are **Enabled** and Disabled.

**PAVP Enable**

Protected Audio Video Path (PAVP) decodes Intel integrated graphics encrypted video. The options are **Enabled** and Disabled.

**Cdynmax Clamping Enable**

Enable this feature to activate Cdynmax Clamping. The options are Enabled and **Disabled**.

**Graphics Clock Frequency**

Use this feature to set the internal graphics clock frequency. The options are 192 Mhz, 312 Mhz, 324 Mhz, 552 Mhz, 648 MHZ, and **Max CdClock freq based on Reference Clk**.

## ► DMI/OPI Configuration

The following DMI information will display:

- DMI: X8 Gen4

### **DMI Gen3 ASPM**

Use this feature to set the ASPM (Active State Power Management) state on the SA (System Agent) side of the DMI Link. The options are Disabled, Auto, ASPM L0s, **ASPM L1**, and ASPM L0sL1.

## ► PEG Configuration

### **M.2-C PCIe 4.0 x4**

#### **Enable Root Port**

Use this feature to enable or disable the PCI Express Graphics (PEG) device in the port specified by the user. The options are Disabled and **Enabled**.

#### **Max Link Speed**

Use this feature to select PCIe support for the device installed in the M.2 slot. The options are **Auto**, Gen1, Gen2, Gen3, and Gen4.

### **ASPM**

Use this feature to activate the Active State Power Management (ASPM) level for a PCIe device. Select Auto for the system BIOS to automatically set the ASPM level based on the system configuration. Select Disabled to disable ASPM support. The options are Disabled, L0s, **L1**, and L0sL1.

### **L1 Substates**

Use this feature to set the PCI Express L1 Substates. The options are Disabled, L1.1, and **L1.1 & L1.2**.

### **P1 SLOT6 PCIe 5.0 X16**

#### **Enable Root Port**

Use this feature to enable or disable the PCI Express Graphics (PEG) device in the port specified by the user. The options are Disabled and **Enabled**.

#### **Max Link Speed**

Use this feature to select PCIe support for the device installed on SLOT6. The options are **Auto**, Gen1, Gen2, Gen3, Gen4, and Gen5.

## ASPM

Use this feature to activate the Active State Power Management (ASPM) level for a PCIe device. Select Auto for the system BIOS to automatically set the ASPM level based on the system configuration. Select Disabled to disable ASPM support. The options are Disabled, L0s, **L1**, and L0sL1.

## L1 Substates

Use this feature to set the PCI Express L1 Substates. The options are Disabled, L1.1, and **L1.1 & L1.2**.

## ▶GT - Power Management Control

### RC6 (Render Standby)

Use this feature to enable render standby support. The options are Disabled and **Enabled**.

### Maximum GT frequency

Use this feature to define the Maximum GT frequency. Choose between 33MHz (RPN) and 1200Mhz (RP0). Any value beyond this range will be clipped to its min/max supported by the CPU. The options are **Default Max Frequency**, 100Mhz, 150Mhz, 200Mhz, 250Mhz, 300Mhz, 350Mhz, 400Mhz, 450Mhz, 500Mhz, 550Mhz, 600Mhz, 650Mhz, 700Mhz, 750Mhz, 800Mhz, 850Mhz, 900Mhz, 950Mhz, 1000Mhz, 1050Mhz, 1100Mhz, 1150Mhz, and 1200Mhz.

### Disable Turbo GT frequency

Use this feature to disable Turbo GT frequency. If set to Enabled, Turbo GT frequency becomes disabled. If set to Disabled, GT frequency limiters will be removed. The options are Enabled and **Disabled**.

## VT-d

Select Enabled to activate Intel Virtualization Technology support for Direct I/O VT-d by reporting the I/O device assignments to VMM through the DMAR ACPI Tables. This feature offers fully-protected I/O resource-sharing across the Intel platforms, providing the user with greater reliability, security and availability in networking and data-sharing. The options are **Enabled** and Disabled.

## GNA Device (B0:D8:F0)

Use this feature to enable SA GNA device. The options are Enabled and **Disabled**.

## ► PCH-IO Configuration

### PCH-IO Configuration

- PCH SKU Name
- Stepping

## ► PCI Express Configuration

- P1\_NVME0
- PCH SLOT7 PCIe 4.0 X4(IN X8)
- PCH SLOT4 PCIe 4.0 X4(IN X8)

### ASPM

Use this feature to activate the Active State Power Management (ASPM) level for a PCIe device. Select Auto for the system BIOS to automatically set the ASPM level based on the system configuration. Select Disabled to disable ASPM support. The options are Disabled, **L1**, and Auto.

### L1 Substates

Use this feature to set the PCI Express L1 Substates. The options are Disabled, L1.1, and **L1.1 & L1.2**.

### PCIe Speed

Use this feature to select the PCI Express port speed. The options are **Auto**, Gen1, Gen2, Gen3, and Gen4.

### Peer Memory Write Enable

Use this feature to enable or disable Peer Memory Write. The options are **Disabled** and Enabled.

## ► HDD Security Configuration

### HDD Security Configuration

The following HDD information will display:

**Px:**

**Security Supported**

**Security Enabled**



**Security Locked**

**Security Frozen**

**HDD User Pwd Status**

**HDD Master Pwd Status**

**Set User Password**

Press Enter to create a new, or change an existing HDD password.

## ▶ **GPIO Expander Header**

**GPIO Expander Header**

**GPIO Expander Header Control**

Use this feature to enable or disable the GPIO expander header control. The options are **Disabled** and **Enabled**.

## ▶ **HTTP Boot Configuration**

**HTTP BOOT Configuration**

**HTTP Boot Policy**

Use this feature to select the HTTP boot policy. The options are Apply to all LANs, **Apply to each LAN**, and Boot Priority #1 instantly.

**HTTP Boot Checks Hostname**

Use this feature to check if the hostname of the TLS certificate matches the hostname provided by the remote server. The options are **Enabled** and **Disabled** (WARNING: Security Risk!!).

**Priority of HTTP Boot**

**Instance of Priority 1:**

Enter a value to set the rank target port. The default is **1**.

**Select IPv4 or IPv6**

Use this feature to select the targeted LAN port to boot from. The options are **IPv4** and **IPv6**.

**Boot Description**

Highlight the feature and press <Enter> to create a description.

**Boot URI**

Highlight the feature and press <Enter> to create a boot URI.

### **Instance of Priority 2:**

Enter a value to set the rank target port. The default is **0**.

## **▶AST2600SEC Super IO Configuration**

The following Super IO information will display:

- Super IO Chip AST2600SEC

## **▶SOL Configuration**

### **SOL**

Use this feature to SOL. The options are Disabled and **Enabled**.

### **Device Settings**

Reset Required.

## **▶NCT6126D Super IO Configuration**

The following Super IO information will display:

- Super IO Chip NCT6126D

## **▶Serial Port 1 Configuration**

### **Serial Port 1**

Use this feature to enable or disable serial port 1. The options are Disabled and **Enabled**.

### **Device Settings**

The I/O and IRQ address for serial port 1 is IO=3F8h; IRQ=4;.

## **▶Serial Port 2 Configuration**

### **Serial Port 2**

Use this feature to enable or disable serial port 2. The options are Disabled and **Enabled**.

### **Device Settings**

The I/O and IRQ address for serial port 2 is IO=3E8h; IRQ=6;.

## **▶Serial Port 3 Configuration**

### **Serial Port 3**

Use this feature to enable or disable serial port 3. The options are Disabled and **Enabled**.

### Device Settings

The I/O and IRQ address for serial port 3 is IO=2E8h; IRQ=7;.

### ► Serial Port 4 Configuration

#### Serial Port 4

Use this feature to enable or disable serial port 4. The options are Disabled and **Enabled**.

### Device Settings

The I/O and IRQ address for serial port 4 is IO=220h; IRQ=11;.

### ► Network Configuration

#### Network Stack

Select Enabled to enable Preboot Execution Environment (PXE) or Unified Extensible Firmware Interface (UEFI) for network stack support. The options are Disabled and **Enabled**.

#### IPv4 PXE Support

Select Enabled to enable IPv4 PXE boot support. The options are Disabled and **Enabled**.

#### IPv4 HTTP Support

Select Enabled to enable IPv4 HTTP boot support. The options are **Disabled** and Enabled.

#### IPv6 PXE Support

Select Enabled to enable IPv6 PXE boot support. The options are Disabled and **Enabled**.

#### IPv6 HTTP Support

Select Enabled to enable IPv6 HTTP boot support. The options are **Disabled** and Enabled.

#### PXE Boot Wait Time

Use this option to specify the wait time to press the ESC key to abort the PXE boot. Press "+" or "-" on your keyboard to change the value. The default setting is **0**.

#### Media Detect Count

Use this option to specify the number of times media will be checked. Press "+" or "-" on your keyboard to change the value. The default setting is **1**.

### ► MAC:XXXXXXXXXXXX-IPv4 Network Configuration ► MAC:XXXXXXXXXXXX-IPv4 Network Configuration

#### Configured

Use this feature to specify whether the network address is configured successfully or not. The options are **Disabled** and Enabled.

### **Save Changes And Exit**

Use this feature to save changes and exit.

- ▶ **MAC:XXXXXXXXXXXX-IPv6 Network Configuration**
- ▶ **MAC:XXXXXXXXXXXX-IPv6 Network Configuration**

### ▶ **Enter Configuration Menu**

**Interface Name**

**Interface Type**

**MAC address**

**Host addresses**

**Route Table**

**Gateway addresses**

**DNS addresses**

**Interface ID**

This feature shows the interface ID for the specified network device.

**DAD Transmit Count**

This feature sends Neighbor Solicitation messages while performing a Duplicate Address Detection (DAD) to make sure there is no IP address duplication. A value of zero means a DAD has not been performed.

**Policy**

Use this feature to select an automatic or manual policy. The options are **Automatic** and **Manual**.

**Save Changes And Exit**

When you have completed the changes for this section, select this option to save all changes made and exit.

### ▶ **PCH-FW Configuration**

**ME Firmware Version: 16.0.15.1735**

**ME Firmware Mode: Normal Mode**

**ME Firmware SKU: Corporate SKU**

### **ME FW Image Re-Flash**

Use this feature to update the Management Engine firmware. The options are **Disabled** and Enabled.

### **TPM Device Selection**

Use this feature to select dTPM or PTT for the TPM device. dTPM is discrete Trusted Platform Module and PTT is Platform Trusted Technology. The options are **dTPM** and PTT.

## **▶ AMT Configuration**

### **USB Provisioning of AMT**

Use this feature to enable or disable USB provisioning. The options are **Disabled** and Enabled.

### **MAC Pass Through**

Use this feature to enable or disable the MAC Pass Through function. The options are **Disabled** and Enabled.

### **Activate Remote Assistance Process**

Use this feature to activate Remote Assistance. Enabling this feature will also trigger the Client Initiated Remote Access (CIRA) boot. The options are **Disabled** and Enabled.

### **Unconfigure ME**

Use this feature to unconfigure ME with resetting the MEBx password to default on next boot. The options are **Disabled** and Enabled.

## **▶ ASF Configuration**

### **PET Progress**

Use this feature to enable or disable PET Events Progress to receive PET Events alerts. The options are Disabled and **Enabled**.

### **WatchDog**

Select Enabled to allow AMT to reset or power down the system if the operating system or BIOS hangs or crashes. The options are **Disabled** and Enabled.

### **OS Timer / BIOS Timer**

These options appear if Watch Dog (above) is enabled. This is a timed delay in seconds, before a system power down or reset after a BIOS or operating system failure is detected. Enter the value in seconds.

### **ASF Sensors Table**

Enable this feature for the ASF Sensor Table to be added into the ASF! ACPI table. The options are **Disabled** and Enabled.

### ▶ **Secure Erase Configuration**

#### **Secure Erase mode**

Select Real to securely erase a solid state drive. The options are **Simulated** and Real.

#### **Force Secure Erase**

Select Enabled to force a secure erase of the solid state drive on the next boot. The options are **Disabled** and Enabled.

### ▶ **One Click Recovery (OCR) Configuration**

#### **OCR Https Boot**

Use this feature to enable or disable One Click Recovery Https Boot. One Click Recovery is a recovery process that lets you restore your computer to its last known good state with a single command. The options are Disabled and **Enabled**.

#### **OCR PBA Boot**

Use this feature to enable or disable One Click Recovery PBA Boot. The options are Disabled and **Enabled**.

#### **OCR Windows Recovery Boot**

Use this feature to enable or disable One Click Recovery Windows Boot. The options are Disabled and **Enabled**.

#### **OCR Disable Secure Boot**

Use this feature to allow CSME to request Secure Boot to be disabled for One Click Recovery. The options are Disabled and **Enabled**.

### ▶ **PCIe/PCI/PnP Configuration**

#### **Option ROM execution**

##### **Video**

Use this feature to select the execution of the video OpROM. The options are Do not launch and **EFI**.

**PCI PERR/SERR Support**

Use this feature to enable or disable the runtime event for PCI errors. The options are **Disabled** and Enabled.

**Above 4G MMIO BIOS Assignment (Available if the system supports 64-bit PCI decoding)**

Select Enabled to decode a PCI device that supports 64-bit in the space above 4G Address. The options are Disabled and **Enabled**.

**SR-IOV Support**

Use this feature to enable or disable Single Root IO Virtualization Support. The options are **Disabled** and Enabled.

**BME DMA Mitigation**

Enable this feature to help block DMA attacks. The options are **Disabled** and Enabled.

**Onboard Video Option ROM**

Enable this feature to select which onboard video firmware type to be loaded. The options are Disabled and **EFI**.

**NVMe Firmware Source**

The feature determines which type of NVMe firmware should be used in your system. The options are **Vendor Defined Firmware** and AMI Native Support.

**Consistent Device Name Support**

This feature controls the device naming for network devices and slots. The options are **Disabled** and Enabled.

**PCIe/PCI/PnP Configuration****PCH SLOT4 PCIe 3.0 X4(IN X8) OPROM**

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are Disabled and **EFI**.

**M.2-C PCIe 4.0 x4 OPROM**

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are Disabled and **EFI**.

**P1 SLOT6 PCIe 5.0 X16 OPROM**

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are Disabled and **EFI**.

**PCH SLOT7 PCIe 4.0 X4(IN X8) OPROM**

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are Disabled and **EFI**.

### **P1\_NVME0 OPROM**

Use this feature to select which firmware type to be loaded for the add-on card in this slot. The options are Disabled and **EFI**.

### **Onboard LAN Option ROM**

Use this feature to select which firmware function to be loaded for LAN 1 used for system boot. The options are Disabled and **EFI**.

## **► SATA And RST Configuration**

### **SATA Controller(s)**

Use this feature to enable or disable the onboard SATA controller supported by the Intel PCH chip. The options are **Enabled** and Disabled.

### **Storage Option ROM/UEFI Driver**

Select UEFI to load the EFI driver for system boot. Select Legacy to load a legacy driver for system boot. The options are Do not Launch and **EFI**.

### **Aggressive LPM Support**

When this feature is set to Enabled, the SATA AHCI controller manages the power usage of the SATA link. The controller will put the link in a low power mode during extended periods of I/O inactivity and will return the link to an active state when I/O activity resumes. The options are Disabled and **Enabled**.

### **I-SATA0 - I-SATA3**

This feature displays the information detected on the installed SATA drive on the particular SATA port.

- Software Preserve Support

### **Hot Plug**

Set this feature to Enable for hot plug support, which allows you to replace a SATA drive without shutting down the system. The options are Disabled and **Enabled**.

### **Spin Up Device**

Set this feature to enable or disable the PCH to initialize the device. The options are **Disabled** and Enabled.

### **SATA Device Type**

Use this feature to specify if the SATA port should be connected to a Solid State Drive or a Hard Disk Drive. The options are **Hard Disk Drive** and Solid State Drive.



---

## ► VMD Setup Menu

### VMD Configuration

#### Enable VMD Controller

Use this feature to enable or disable the VMD controller. The options are **Disabled** and **Enabled**.

*\*If the feature above is set to Enabled, the following feature is available for configuration:*

#### Enable VMD Global Mapping

Use this feature to enable or disable VMD global mapping. The options are **Disabled** and **Enabled**.

## ► Serial Port Console Redirection

### COM1/2/3/4/SOL Console Redirection

Select **Enabled** to enable console redirection support for a serial port. The options are **Enabled** and **Disabled**.

*\*If the feature above is set to Enabled, the following features are available for configuration:*

#### ► COM1/2/3/4/SOL Console Redirection Settings

Use this feature to specify how the host computer will exchange data with the client computer, which is the remote computer.

##### COM1/2/3/4 Terminal Type

This feature allows you to select the target terminal emulation type for Console Redirection. Select **VT100** to use the ASCII Character set. Select **VT100+** to add color and function key support. Select **ANSI** to use the Extended ASCII Character Set. Select **VT-UTF8** to use UTF8 encoding to map Unicode characters into one or more bytes. The options are **VT100**, **VT100+**, **VT-UTF8**, and **ANSI**.

##### COM1/2/3/4 Bits Per Second

Use this feature to set the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 38400, 57600, and **115200** (bits per second).

##### COM1/2/3/4/5/6 Data Bits

Use this feature to set the data transmission size for Console Redirection. The options are 7 Bits and **8 Bits**.

### **COM1/2/3/4 Parity**

A parity bit can be sent along with regular data bits to detect data transmission errors. Select Even if the parity bit is set to 0, and the number of 1's in data bits is even. Select Odd if the parity bit is set to 0, and the number of 1's in data bits is odd. Select None if you do not want to send a parity bit with your data bits in transmission. Select Mark to add a mark as a parity bit to be sent along with the data bits. Select Space to add a Space as a parity bit to be sent with your data bits. The options are **None**, Even, Odd, Mark, and Space.

### **COM1/2/3/4 Stop Bits**

A stop bit indicates the end of a serial data packet. Select 1 Stop Bit for standard serial data communication. Select 2 Stop Bits if slower devices are used. The options are **1** and **2**.

### **COM1/2/3/4 Flow Control**

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None** and Hardware RTS/CTS.

### **COM1/2/3/4 VT-UTF8 Combo Key Support**

Select Enabled to enable VT-UTF8 Combination Key support for ANSI/VT100 terminals. The options are Disabled and **Enabled**.

### **COM1/2/3/4 Recorder Mode**

Select Enabled to capture the data displayed on a terminal and send it as text messages to a remote server. The options are **Disabled** and Enabled.

### **COM1/2/3/4 Resolution 100x31**

Select Enabled for extended-terminal resolution support. The options are Disabled and **Enabled**.

### **COM1/2/3/4 Putty KeyPad**

This feature selects the settings for Function Keys and KeyPad used for Putty, which is a terminal emulator designed for the Windows OS. The options are **VT100**, LINUX, XTERMR6, SC0, ESCN, and VT400.

### **COM1/2/3/4 Redirection After BIOS POST**

Use this feature to enable or disable legacy console redirection after BIOS POST. When set to Bootloader, legacy console redirection is disabled before booting the OS. When set to Always Enable, legacy console redirection remains enabled when booting the OS. The options are **Always Enable** and Bootloader.

### **AMT SOL Console Redirection**

Select Enabled to enable console redirection support for the specified serial port. The options are **Disabled** and Enabled.

---

*\*If the feature above is set to Enabled, the following features are available for configuration:*

## ▶ AMT SOL Console Redirection Settings

### AMT SOL Terminal Type

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII Character set. Select VT100+ to add color and function key support. Select ANSI to use the Extended ASCII Character Set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, **VT100+**, VT-UTF8, and ANSI.

### AMT SOL Bits per second

Use this feature to set the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 38400, 57600, and **115200** (bits per second).

### AMT SOL Data Bits

Use this feature to set the data transmission size for Console Redirection. The options are 7 Bits and **8 Bits**.

### AMT SOL Parity

A parity bit can be sent along with regular data bits to detect data transmission errors. Select Even if the parity bit is set to 0, and the number of 1's in data bits is even. Select Odd if the parity bit is set to 0, and the number of 1's in data bits is odd. Select None if you do not want to send a parity bit with your data bits in transmission. Select Mark to add a mark as a parity bit to be sent along with the data bits. Select Space to add a Space as a parity bit to be sent with your data bits. The options are **None**, Even, Odd, Mark, and Space.

### AMT SOL Stop Bits

A stop bit indicates the end of a serial data packet. Select 1 Stop Bit for standard serial data communication. Select 2 Stop Bits if slower devices are used. The options are **1** and **2**.

### AMT SOL Flow Control

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None** and Hardware RTS/CTS.

### AMT SOL VT-UTF8 Combo Key Support

Select Enabled to enable VT-UTF8 Combination Key support for ANSI/VT100 terminals. The options are Disabled and **Enabled**.

### **AMT SOL Recorder Mode**

Select Enabled to capture the data displayed on a terminal and send it as text messages to a remote server. The options are **Disabled** and Enabled.

### **AMT SOL Resolution 100x31**

Select Enabled for extended-terminal resolution support. The options are Disabled and **Enabled**.

### **AMT SOL Putty KeyPad**

This feature selects Function Keys and KeyPad settings for Putty, which is a terminal emulator designed for the Windows OS. The options are **VT100**, LINUX, XTERMR6, SCO, ESCN, and VT400.

### **AMT SOL Redirection After BIOS POST**

Use this feature to enable or disable legacy Console Redirection after BIOS POST. When set to Bootloader, legacy Console Redirection is disabled before booting the OS. When set to Always Enable, legacy Console Redirection remains enabled when booting the OS. The options are **Always Enable** and Bootloader.

## **Serial Port for Out-Of-Band Management/Windows Emergency Management Services (EMS) Console Redirection**

Select Enabled to use the COM port for EMS Console Redirection. The options are Enabled and **Disabled**.

***\*If the feature above is set to Enabled, the following features are available for configuration:***

### **► Console Redirection Settings**

This feature allows you to specify how the host computer will exchange data with the client computer, which is the remote computer.

### **Out-of-Band Mgmt Port**

The feature selects a serial port in a client server to be used by the Microsoft Windows Emergency Management Services (EMS) to communicate with a remote host server. The options are **COM1**, COM2, COM3, COM4, SOL, and AMT SOL.

### **Terminal Type**

Use this feature to select the target terminal emulation type for Console Redirection. Select VT100 to use the ASCII character set. Select VT100+ to add color and function key support. Select ANSI to use the extended ASCII character set. Select VT-UTF8 to use UTF8 encoding to map Unicode characters into one or more bytes. The options are VT100, VT100+, **VT-UTF8**, and ANSI.

### Bits Per Second

This feature sets the transmission speed for a serial port used in Console Redirection. Make sure that the same speed is used in the host computer and the client computer. A lower transmission speed may be required for long and busy lines. The options are 9600, 19200, 57600, and **115200** (bits per second).

### Flow Control

Use this feature to set the flow control for Console Redirection to prevent data loss caused by buffer overflow. Send a "Stop" signal to stop sending data when the receiving buffer is full. Send a "Start" signal to start sending data when the receiving buffer is empty. The options are **None**, Hardware RTS/CTS, and Software Xon/Xoff.

### Data Bits, Parity, Stop Bits

## ► Trusted Computing

The motherboard supports TPM 1.2 and 2.0. The following Trusted Platform Module (TPM) information displays if a TPM 2.0 module is detected:

- Vendor
- Firmware Version

### Security Device Support

If this feature and the TPM jumper on the motherboard are both set to Enabled, onboard security devices will be enabled for Trusted Platform Module (TPM) support to enhance data integrity and network security. Please reboot the system for a change on this setting to take effect. The options are Disabled and **Enabled**.

- Active PCR Banks
- Available PCR Banks

***\*If the feature above is set to Enabled, the next five features are available for configuration:***

### SHA256 PCR Bank

Use this feature to disable or enable the SHA256 Platform Configuration Register (PCR) bank for the installed TPM device. The options are Disabled and **Enabled**.

### Pending Operation

Use this feature to schedule a TPM-related operation to be performed by a security device for system data integrity. Your system will reboot to carry out a pending TPM operation. The options are **None** and TPM Clear.

### **Platform Hierarchy**

Use this feature to disable or enable platform hierarchy for platform protection. The options are Disabled and **Enabled**.

### **Storage Hierarchy**

Use this feature to disable or enable storage hierarchy for cryptographic protection. The options are Disabled and **Enabled**.

### **Endorsement Hierarchy**

Use this feature to disable or enable endorsement hierarchy for privacy control. The options are Disabled and **Enabled**.

### **PH Randomization**

Use this feature to disable or enable Platform Hierarchy (PH) Randomization. The options are **Disabled** and Enabled.

### **Disable Block Sid**

Use this feature to disable or enable Block SID. The options are Enabled and **Disabled**.

### **Intel Trusted Execution Technology**

Intel Trusted Execution Technology (TXT) helps protect against software-based attacks and ensures protection, confidentiality, and integrity of data stored or created on the system. Use this feature to enable or disable TXT Support. The options are **Disabled** and Enabled.

## **►USB Configuration**

### **USB Configuration**

#### **USB Module Version**

#### **USB Controllers**

#### **USB Devices**

#### **XHCI Hand-off**

This is a work-around solution for operating systems that do not support Extensible Host Controller Interface (XHCI) hand-off. The XHCI ownership change should be claimed by the XHCI driver. The settings are **Enabled** and Disabled.

#### **USB Mass Storage Driver Support**

Select Enabled for USB mass storage device support. The options are Disabled and **Enabled**.

#### **USB S5 Wakeup Support**

Use this feature to enable or disable USB S5 Wakeup support. The options are Disabled and **Enabled**.

**▶ Intel(R) Ethernet Controller (3) I225-LM - xx:xx:xx:xx:xx:xx****UEFI Driver****Device Name****PCI Device ID****Link Status****MAC Address****▶ Intel(R) Ethernet Connection (3) I225-LM - xx:xx:xx:xx:xx:xx****UEFI Driver****Device Name****PCI Device ID****Link Status****MAC Address****▶ TLS Authentication Configuration**

This submenu allows you to configure Transport Layer Security (TLS) settings.

**▶ Server CA Configuration****▶ Enroll Certification****Enroll Certification Using File**

Use this feature to enroll certification from a file.

**Certification GUID**

Use this feature to input the certification GUID.

**Commit Changes and Exit**

Use this feature to save all changes and exit TLS settings.

**Discard Changes and Exit**

Use this feature to discard all changes and exit TLS settings.

### ▶ Delete Certification

Use this feature to delete certification.

### ▶ Driver Health

This feature provides the health status for the network drivers and controllers.

#### ▶ Intel(R) Gigabit 0.9.02

Controller 6BE30498 Child 0

Intel(R) Ethernet Controller (3) I225-LM

#### ▶ Intel(R) Gigabit 0.9.02

Controller 6BE2FA98 Child 0

Intel(R) Ethernet Controller (3) I225-LM

### ▶ COM Port Mode Configuration

#### COM1/COM2 Mode Selection

##### COM1 Mode

Use this feature to select the COM1 mode. The settings are **RS-232**, RS-485/422 Full Duplex, and RS-485 Half Duplex.

##### COM2 Mode

Use this feature to select the COM2 mode. The settings are **RS-232**, RS-485/422 Full Duplex, and RS-485 Half Duplex.



## 4.4 Event Logs

Use this menu to configure Event Log settings.



### ► Change SMBIOS Event Log Settings

#### Enabling/Disabling Options

##### SMBIOS Event Log

Change this feature to enable or disable all features of the SMBIOS Event Logging during system boot. The options are Disabled and **Enabled**.

#### Erasing Settings

##### Erase Event Log

If No is selected, data stored in the event log will not be erased. Select Yes, Next Reset, data in the event log will be erased upon next system reboot. Select Yes, Every Reset, data in the event log will be erased upon every system reboot. The options are **No**, Yes, Next reset, and Yes, Every reset.

##### When Log is Full

Select Erase Immediately for all messages to be automatically erased from the event log when the event log memory is full. The options are **Do Nothing** and Erase Immediately.

## **SMBIOS Event Log Standard Settings**

### **Log System Boot Event**

This option toggles the System Boot Event logging to enabled or disabled. The options are **Disabled** and Enabled.

### **MECI**

The Multiple Event Count Increment (MECI) counter counts the number of occurrences that a duplicate event must happen before the MECI counter is incremented. This is a numeric value. The default value is **1**.

### **METW**


The Multiple Event Time Window (METW) defines the number of minutes that must pass between duplicate log events before MECI is incremented. This is in minutes, from 0 to 99. The default value is **60**.

### **►View SMBIOS Event Log**

Select this submenu and press enter to see the contents of the SMBIOS event log. The following categories will be displayed: Date/Time/Error Codes/Severity.

## 4.5 IPMI

Use this menu to configure Intelligent Platform Management Interface (IPMI) settings.

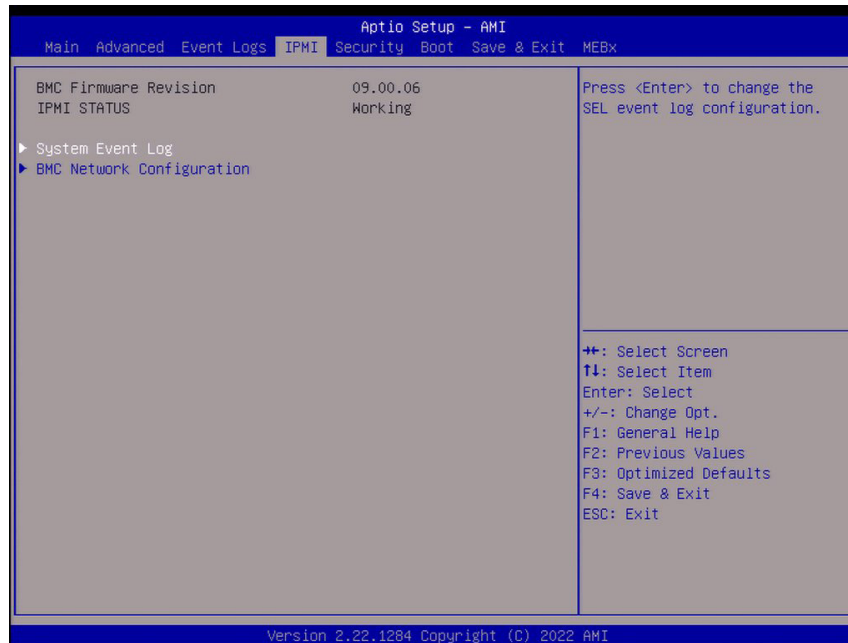

### BMC Firmware Revision

This feature displays the IPMI firmware revision used in your system.

### IPMI STATUS

This feature displays the status of the IPMI firmware installed in your system.

## ▶ System Event Log

### Enabling/Disabling Options

#### SEL Components

Select Enabled for all system event logging at boot up. The options are Disabled and **Enabled**.

#### Erasing Settings

##### Erase SEL

Select Yes, On next reset to erase all system event logs upon next system reboot. Select Yes, On every reset to erase all system event logs upon each system reboot. Select No to keep all system event logs after each system reboot. The options are **No**, Yes, On next reset, and Yes, On every reset.

### When SEL is Full

This feature allows you to decide what the BIOS should do when the system event log is full. Select Erase Immediately to erase all events in the log when the system event log is full. The options are **Do Nothing** and Erase Immediately.



**Note:** All values changed here do not take effect until the computer is restarted.

## ► BMC Network Configuration

### BMC Network Configuration

#### Update BMC LAN Configuration

Select Yes for the BIOS to implement all IP/MAC address changes at the next system boot. The options are **No** and Yes.

***\*If the feature above is set to Yes, Configuration Address Source, VLAN, and IPv6 Support are available for configuration:***

#### Configure IPv4 Support

#### BMC LAN Selection

#### BMC Network Link Status

#### Configuration Address Source

This feature allows you to select the source of the IP address for this computer. If Static is selected, you need to know the IP address of this computer and enter it to the system manually in the field. If DHCP is selected, the BIOS searches for a Dynamic Host Configuration Protocol (DHCP) server in the network that is attached to and request the next available IP address for this computer. The options are **DHCP** and Static.

***\*If the feature above is set to Static, the following features are available for configuration:***

#### Station IP Address

This feature displays the Station IP address for this computer. The address can be manually entered. This should be in decimal and in dotted quad form (i.e., 192.168.10.253).

#### Subnet Mask

This feature displays the sub-network that this computer belongs to. The address can be manually entered. The value of each three-digit number separated by dots should not exceed 255.

#### Station MAC Address

**Router IP Address**

This feature displays the Gateway IP address for this computer. The address can be manually entered. This should be in decimal and in dotted quad form (i.e., 172.31.0.1).

**VLAN**

Use this feature to enable or disable the IPMI VLAN function. The options are **Disable** and **Enable**.

**VLAN ID**

This feature is enabled if VLAN is enabled. Enter a VLAN ID. The ID range is from 1 to 4094.

**Configure IPv6 Support****IPv6 Address Status****IPv6 Support**


Use this feature to enable IPv6 support. The options are **Enabled** and **Disabled**.

**Configuration Address Source**

Use this feature to configure the LAN channel parameters. The options are **Static** and **DHCP**.

## 4.6 Security

Use this menu to configure the security settings for the system.

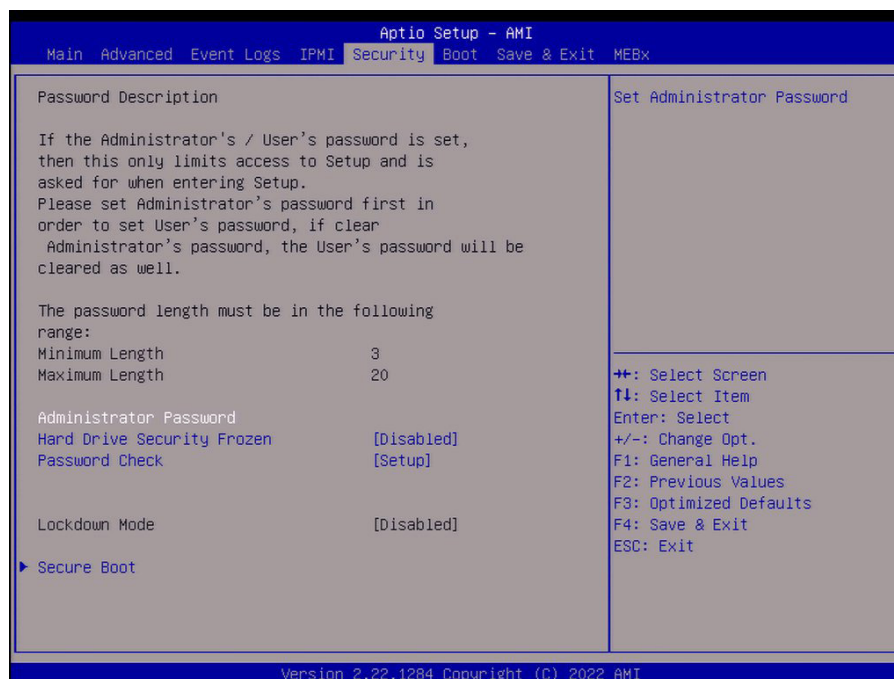

### Administrator Password

Press Enter to create a new, or change an existing, Administrator password.

### ▶ SMCI Security Erase Configuration

This section displays information if a storage device is detected by the system.

- HDD Name
- HDD Serial Number
- Security Mode
- TCG Device Type
- Estimated Time
- Admin Pwd Status

### Security Function

Use this feature to enable or disable the BIOS security frozen command for SATA and NVMe devices. The options are **Disable**, Set Password, Security Erase - Password, Security Erase - PSID, and Security Erase - Without Password.

### **Password**

Use this feature to set a password for the Supermicro HDD Security Function.

### **Hard Drive Security Frozen**

Use this feature to enable or disable the BIOS security frozen command for SATA and NVMe devices. The options are Enabled and **Disabled**.

### **Password Check**

Select Setup for the system to check for a password at Setup. Select Always for the system to check for a password at boot up or upon entering the BIOS Setup utility. The options are **Setup** and Always.

### **▶ Secure Boot**

This section displays the contents of the following secure boot features:

- System Mode
- Secure Boot

### **Secure Boot**

Use this feature to enable secure boot. The options are **Disabled** and Enabled.

### **Secure Boot Mode**

Use this feature to configure Secure Boot variables without authentication. The options are Standard and **Custom**.

### **Enter Audit Mode**

Select this feature to enter the audit mode to configure PK.

### **▶ Key Management**

This submenu allows you to configure the following Key Management settings.

### **▶ Restore Factory Keys**

Force System to User Mode. Install factory default Secure Boot key databases. The options are **Yes** and No.

### **▶ Reset to Setup Mode**

This feature deletes all Secure Boot key databases from NVRAM. The options are **Yes** and No.

## Secure Boot Variable

### ▶ Platform Key (PK)

#### Update

Select Yes to load the new Platform Keys (PK) from the manufacturer's defaults. Select No to load the Platform Keys from a file. The options are Yes and No.

### ▶ Key Exchange Key

#### Update

Select Yes to load the KEK from the manufacturer's defaults. Select No to load the KEK from a file. The options are Yes and No.

#### Append

Select Yes to add the KEK from the manufacturer's defaults list to the existing KEK. Select No to load the KEK from a file. The options are Yes and No.

### ▶ Authorized Signatures

#### Update

Select Yes to load the factory default db. Select No to load the db from an external file. The options are Yes and No.

#### Append

Select Yes to add the database from the manufacturer's defaults to the existing db. Select No to load the db from a file. The options are Yes and No.

### ▶ Forbidden Signatures

#### Update

Select Yes to load the dbx factory default dbx. Select No to load it from an external file. The options are Yes and No.

#### Append

Select Yes to add the dbx from the manufacturer's defaults to the existing dbx. Select No to load the dbx from a file. The options are Yes and No.



### ▶ Authorized TimeStamps

#### Update

Select Yes to load the dbt from the manufacturer's defaults. Select No to load the dbt from a file. The options are Yes and No.

#### Append

Select Yes to add the dbt from the manufacturer's defaults list to the existing dbt. Select No to load the dbt from a file. The options are Yes and No.

### ▶ OsRecovery Signature

#### Update

Select Yes to load a factory default dbr or No to load from a file on an external media.

#### Append

Select Yes to add the dbr from the manufacturer's defaults list to the existing dbr. Select No to load the dbr from a file. The options are Yes and No.

### ▶ Export Secure Boot variables

This feature allows you to copy NVRAM content of Secure boot variables to files in a root folder on a file system device. The options are **Yes** and No.

### ▶ Enroll EFI Image

This feature allows the image to run in Secure Boot Mode. Enroll SHA256 Hash Certificate of the image into the Authorized Signature Database.

#### Device Guard Ready

### ▶ Remove 'UEFI CA' from DB


This feature allows you to decide if all secure boot variables should be saved.

### ▶ Restore DB defaults

Select Yes to restore the DB defaults.

## 4.7 Boot

Use this menu to configure Boot settings.

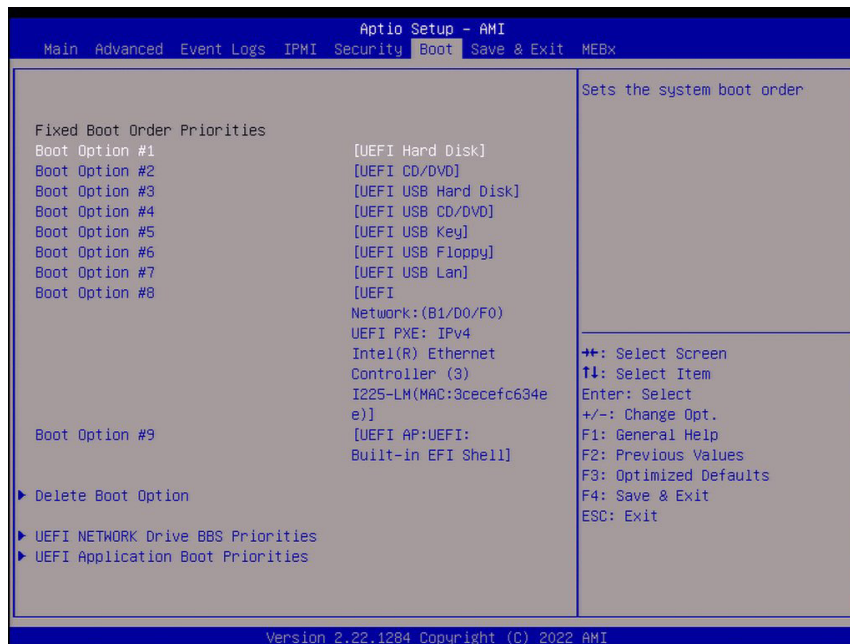

- Boot Option #1
- Boot Option #2
- Boot Option #3
- Boot Option #4
- Boot Option #5
- Boot Option #6
- Boot Option #7
- Boot Option #8
- Boot Option #9

### ► Add New Boot Option

This feature allows you to add a new boot option - to the boot priority features for system boot.

#### Add Boot Option

This feature allows you to specify the name for the new boot option.

### **Path for Boot Option**

Use this feature to enter the path for the new boot option in the format fsx:\path\filename.efi.

### **Boot Option File Path**

This feature allows you to specify the file path for the new boot option.

### **Create**

After the name and the file path for the boot option are set, press <Enter> to create the new boot option in the boot priority list.

### **▶ Delete Boot Option**

This feature allows you to select a boot device to delete from the boot priority list.

### **Delete Boot Option**

Use this feature to remove an EFI boot option from the boot priority list.

### **▶ UEFI Hard Disk Drive BBS Priorities**

This feature sets the system boot order of detected devices.

### **▶ UEFI USB Key Drive BBS Priorities**

This feature sets the system boot order of detected devices.

### **▶ UEFI NETWORK Drive BBS Priorities**

This feature sets the system boot order of detected devices.


### **▶ UEFI Application Boot Priorities**

This feature sets the system boot order of detected devices.

- Boot Option #1

## 4.8 Save & Exit

Use this menu to save settings and exit from the BIOS.

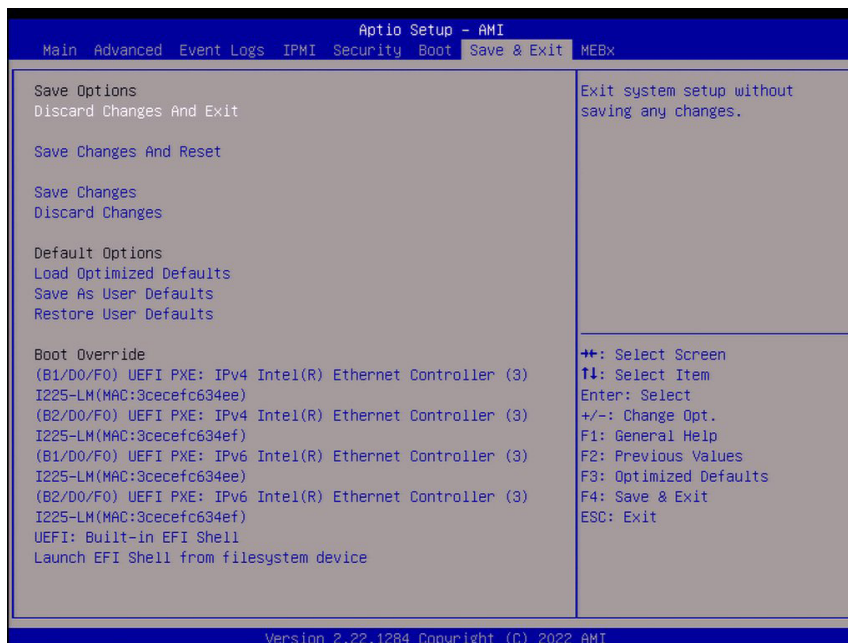

### Save Options

#### Discard Changes and Exit

Select this option to quit the BIOS Setup without making any permanent changes to the system configuration, and reboot the computer. Select Discard Changes and Exit from the Save & Exit menu and press <Enter>.

#### Save Changes and Reset

After completing the system configuration changes, select this option to save the changes you have made. This will not reset (reboot) the system.

#### Save Changes

When you have completed the system configuration changes, select this option to leave the BIOS setup utility and reboot the computer for the new system configuration parameters to take effect. Select Save Changes from the Save & Exit menu and press <Enter>.

#### Discard Changes

Select this option and press <Enter> to discard all the changes and return to the AMI BIOS utility program.

## Default Options

### Load Optimized Default

To set this feature, select Restore Defaults from the Save & Exit menu and press <Enter>. These are factory settings designed for maximum system stability, but not for maximum performance.

### Save As User Defaults

To set this feature, select Save as User Defaults from the Save & Exit menu and press <Enter>. This enables the user to save any changes to the BIOS setup for future use.

### Restore User Defaults

To set this feature, select Restore User Defaults from the Save & Exit menu and press <Enter>. Use this feature to retrieve user-defined settings that were saved previously.

### Boot Override

Listed in this section are other boot options for the system (i.e., Built-in EFI shell). The options may vary on each system. Select an option, press <Enter>, and your system will boot to the selected boot option.

**(B1/D0/F0) UEFI PXE IPv4 Intel(R) Ethernet Controller (3) I225-LM  
(MAC:xxxxxxxxxxxx)**

**(B2/D0/F0) UEFI PXE IPv4 Intel(R) Ethernet Controller (3) I225-LM  
(MAC:xxxxxxxxxxxx)**

**(B1/D0/F0) UEFI PXE IPv6 Intel(R) Ethernet Controller (3) I225-LM  
(MAC:xxxxxxxxxxxx)**

**(B2/D0/F0) UEFI PXE IPv6 Intel(R) Ethernet Controller (3) I225-LM  
(MAC:xxxxxxxxxxxx)**

**UEFI: Built-in EFI Shell**

**Launch EFI Shell from filesystem device**

## 4.9 MEBx

Use this menu to create a password for MEBx.



### Intel(R) ME Password

Use this feature to create a password for the Intel Management Engine BIOS Extension.

# Appendix A

## BIOS Codes

### A.1 BIOS Error POST (Beep) Codes

During the Power-On Self-Test (POST) routines, which are performed each time the system is powered on, errors may occur.

Non-fatal errors are those which, in most cases, allow the system to continue the boot-up process. The error messages normally appear on the screen.

**Fatal errors** are those which will not allow the system to continue the boot-up procedure. If a fatal error occurs, you should consult with your system manufacturer for possible repairs.

These fatal errors are usually communicated through a series of audible beeps. The table shown below lists some common errors and their corresponding beep codes encountered by users.

BIOS Beep (POST) Codes		
Beep Code	Error Message	Description
1 beep	Refresh	Circuits have been reset (Ready to power up)
5 short, 1 long	Memory error	No memory detected in system
5 long, 2 short	Display memory read/write error	Video adapter missing or with faulty memory
1 long continuous	System OH	System overheat condition

## A.2 Additional BIOS POST Codes

The AMI BIOS supplies additional checkpoint codes, which are documented online at <http://www.supermicro.com/support/manuals/> ("AMI BIOS POST Codes User's Guide").

For information on AMI updates, please refer to <http://www.ami.com/products/>.



## Appendix B

### Software

After the hardware has been installed, you can install the Operating System (OS), configure RAID settings and install the drivers.

#### B.1 Microsoft Windows OS Installation

If you will be using RAID, you must configure RAID settings before installing the Windows OS and the RAID driver. Refer to the RAID Configuration User Guides posted on our website at [www.supernmicro.com/support/manuals](http://www.supernmicro.com/support/manuals).

##### *Installing the OS*

1. Create a method to access the MS Windows installation ISO file. That can be a USB flash or media drive.
2. Retrieve the proper RST/RSTe driver. Go to the Supermicro web page for your motherboard and click on "Download the Latest Drivers and Utilities," select the proper driver, and copy it to a USB flash drive.
3. Boot from a bootable device with Windows OS installation. You can see a bootable device list by pressing <F11> during the system startup.


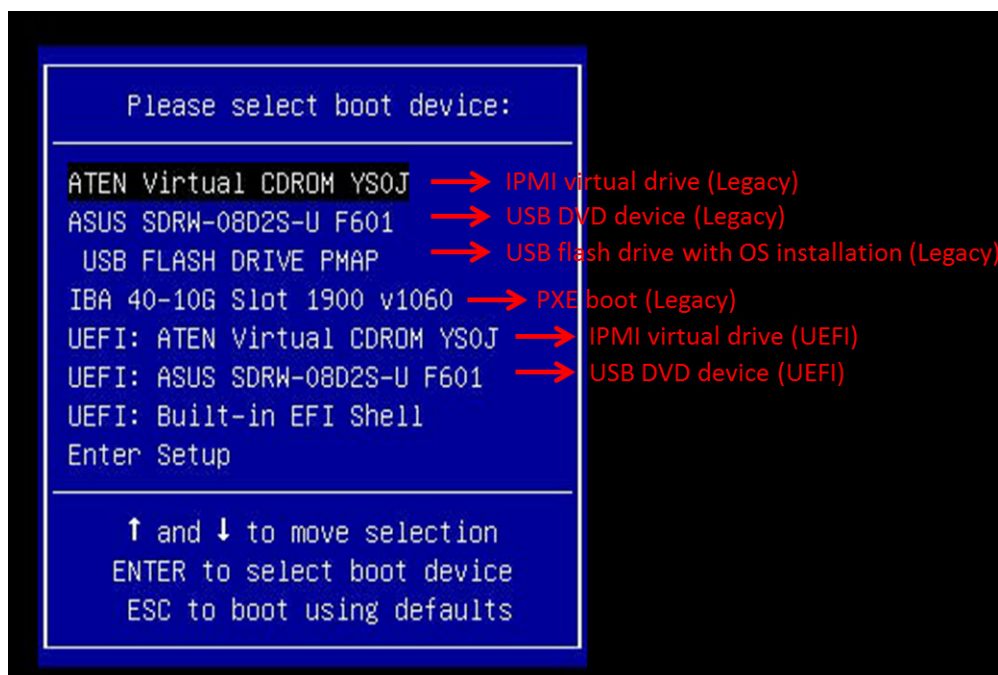


Figure B-1. Select Boot Device

4. During Windows Setup, continue to the dialog where you select the drives on which to install Windows. If the disk you want to use is not listed, click on “Load driver” link at the bottom left corner.

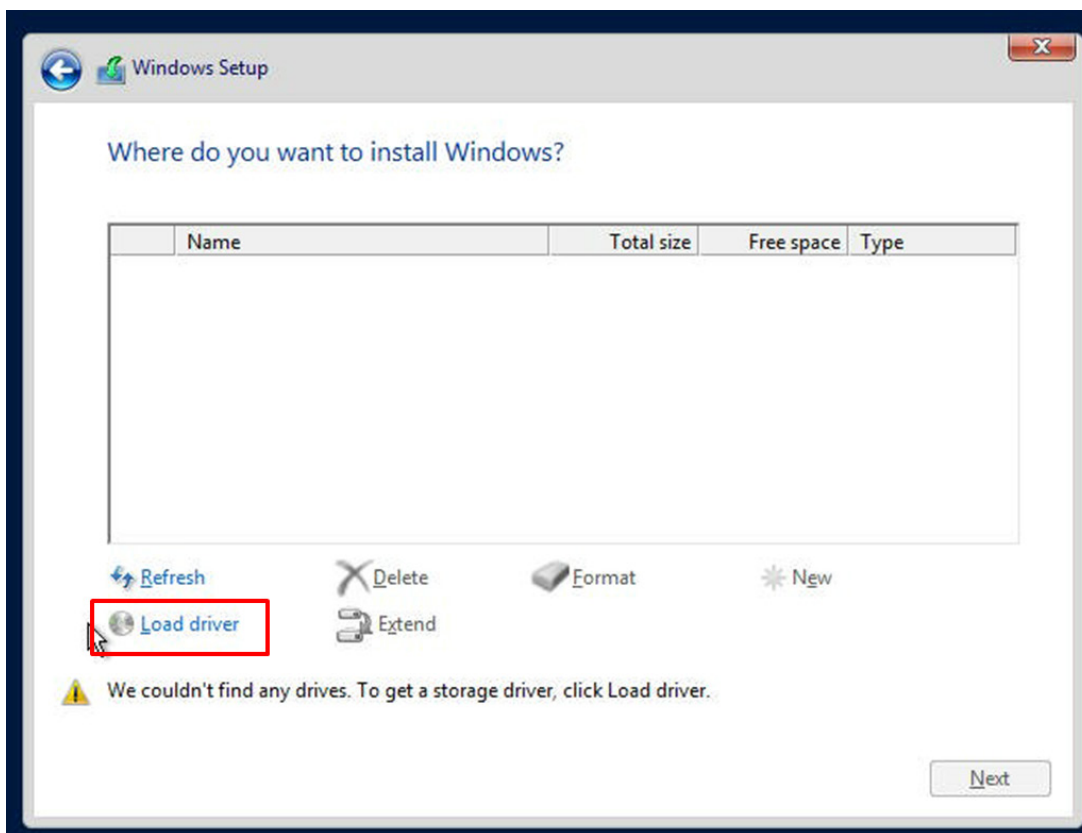

**Figure B-2. Load Driver Link**

To load the driver, browse the USB flash drive for the proper driver files.

- For RAID, choose the SATA/sSATA RAID driver indicated then choose the storage drive on which you want to install it.
  - For non-RAID, choose the SATA/sSATA AHCI driver indicated then choose the storage drive on which you want to install it.
5. Once all devices are specified, continue with the installation.
  6. After the Windows OS installation has completed, the system will automatically reboot multiple times.


## B.2 Driver Installation

The Supermicro website contains drivers and utilities for your system at <https://www.supermicro.com/wdl/driver>. Some of these must be installed, such as the chipset driver.

After accessing the website, go into the CDR\_Images (in the parent directory of the above link) and locate the ISO file for your motherboard. Download this file to a USB flash or media drive. (You may also use a utility to extract the ISO file if preferred.)

Another option is to go to the Supermicro website at <http://www.supermicro.com/products/>. Find the product page for your motherboard, and "Download the Latest Drivers and Utilities."

Insert the flash drive or disk and the screenshot shown below should appear.

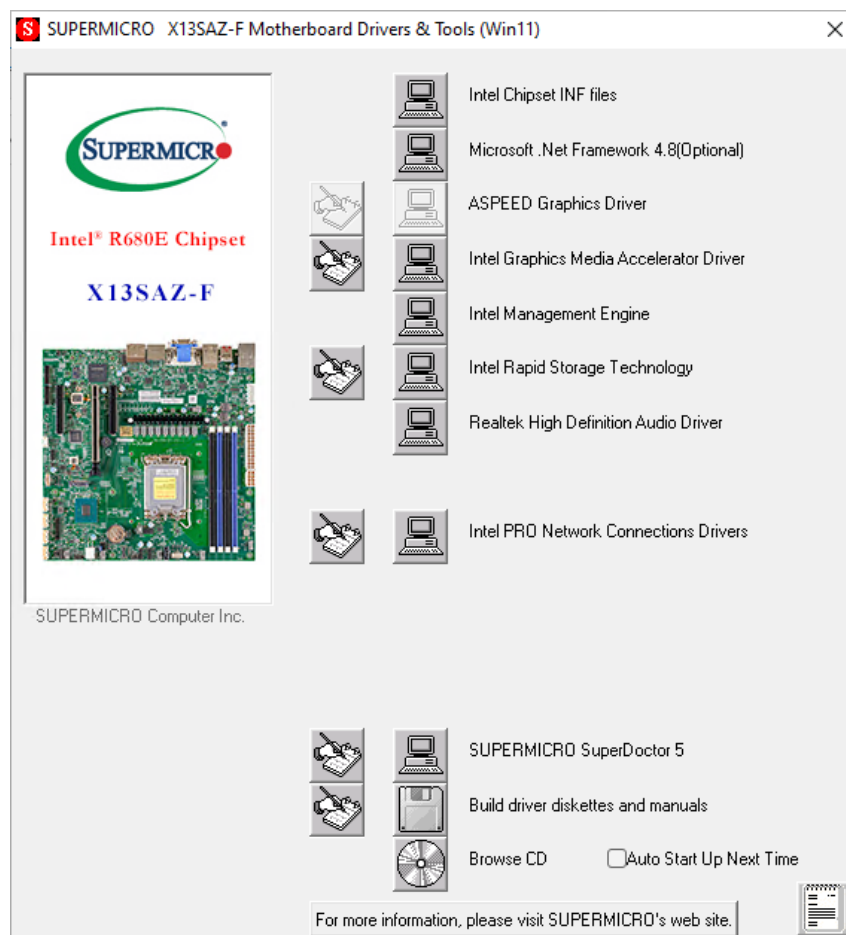

**Figure B-3. Driver & Tool Installation Screen**

**Note:** Click the icons showing a hand writing on paper to view the readme files for each item. Click the computer icons to the right of these items to install each item (from top to bottom) one at a time. **After installing each item, you must reboot the system before moving on to the next item on the list.** The bottom icon with a CD on it allows you to view the entire contents.

## B.3 SuperDoctor® 5

The Supermicro SuperDoctor 5 is a program that functions in a command-line or web-based interface for Windows and Linux operating systems. The program monitors such system health information as CPU temperature, system voltages, system power consumption, fan speed, and provides alerts via email or Simple Network Management Protocol (SNMP).

SuperDoctor 5 comes in local and remote management versions and can be used with Nagios to maximize your system monitoring needs. With SuperDoctor 5 Management Server (SSM Server), you can remotely control power on/off and reset chassis intrusion for multiple systems with SuperDoctor 5. SuperDoctor 5 Management Server monitors HTTP, FTP, and SMTP services to optimize the efficiency of your operation.

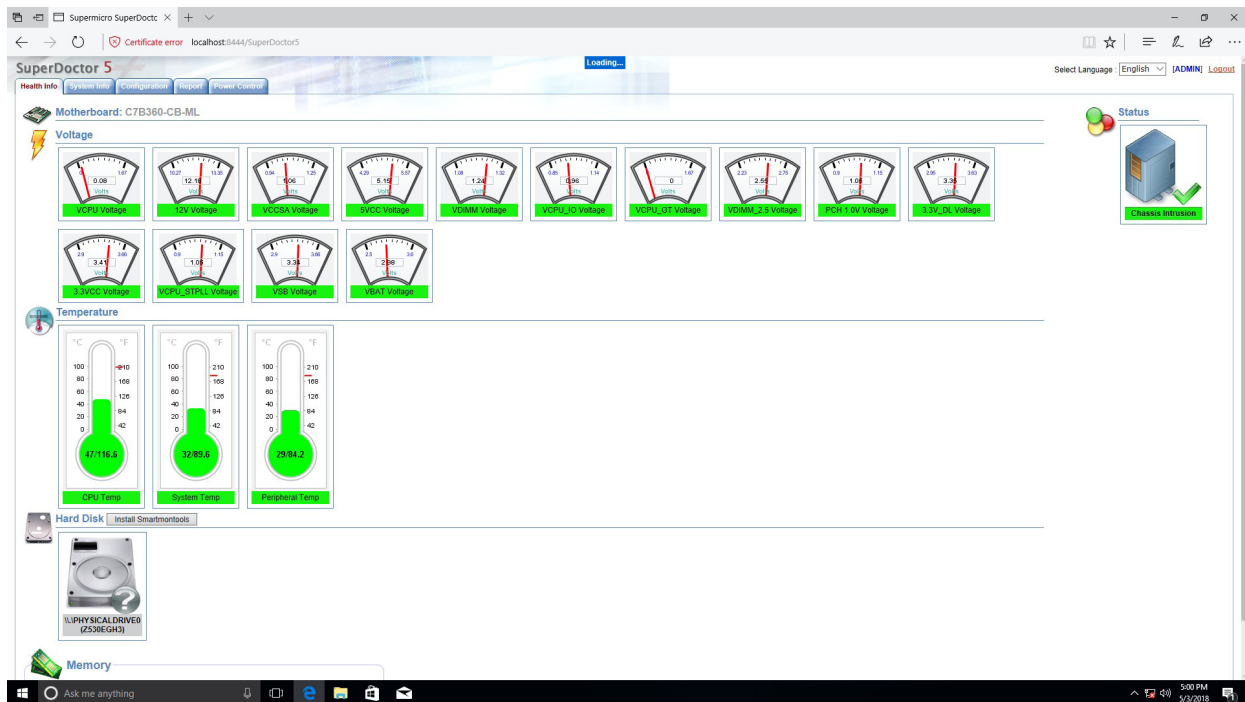


Figure B-4. SuperDoctor 5 Interface Display Screen (Health Information)

## Appendix C

### Standardized Warning Statements

The following statements are industry standard warnings, provided to warn the user of situations which have the potential for bodily injury. Should you have questions or experience difficulty, contact Supermicro's Technical Support department for assistance. Only certified technicians should attempt to install or configure components.

Read this section in its entirety before installing or configuring components.

These warnings may also be found on our website at [http://www.supermicro.com/about/policies/safety\\_information.cfm](http://www.supermicro.com/about/policies/safety_information.cfm).

#### Battery Handling



**Warning!** There is the danger of explosion if the battery is replaced incorrectly. Replace the battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions

#### 電池の取り扱い

電池交換が正しく行われなかった場合、破裂の危険性があります。交換する電池はメーカーが推奨する型、または同等のものを使用下さい。使用済電池は製造元の指示に従って処分して下さい。

#### 警告

電池更換不當會有爆炸危險。請只使用同類電池或製造商推薦的功能相當的電池更換原有電池。請按製造商的說明處理廢舊電池。

#### 警告

電池更換不當會有爆炸危險。請使用製造商建議之相同或功能相當的電池更換原有電池。請按照製造商的說明指示處理廢棄舊電池。

#### Warnung

Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

#### Attention

Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

#### ¡Advertencia!

Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería exclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

#### אזהרה!

קיימת סכנת פיצוץ של הסוללה במידה והוחלפה בדרך לא תקינה. יש להחליף את הסוללה בסוג התואם מחברת יצרן מומלצת. סילוק הסוללות המשומשות יש לבצע לפי הוראות היצרן.

هناك خطر من انفجار في حالة اسبدال البطارية بطريقة غير صحيحة فعلي  
اسبدال البطارية فقط بنفس النع أو ما يعادلها مما أوصت به الشركة المصنعة  
جخلص من البطاريات المسعملة وفقا لعمليات الشركة الصانعة

#### 경고!

배터리가 올바르게 교체되지 않으면 폭발의 위험이 있습니다. 기존 배터리와 동일하거나 제조사에서 권장하는 동등한 종류의 배터리로만 교체해야 합니다. 제조사의 안내에 따라 사용된 배터리를 처리하여 주십시오.

#### Waarschuwing

Er is ontploffingsgevaar indien de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type die door de fabrikant aanbevolen wordt. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften afgevoerd te worden.

## Product Disposal



**Warning!** Ultimate disposal of this product should be handled according to all national laws and regulations.

### 製品の廃棄

この製品を廃棄処分する場合、国の関係する全ての法律・条例に従い処理する必要があります。

### 警告

本产品的废弃处理应根据所有国家的法律和规章进行。

### 警告

本產品的廢棄處理應根據所有國家的法律和規章進行。

### Warnung

Die Entsorgung dieses Produkts sollte gemäß allen Bestimmungen und Gesetzen des Landes erfolgen.

### ¡Advertencia!

Al deshacerse por completo de este producto debe seguir todas las leyes y reglamentos nacionales.

### Attention

La mise au rebut ou le recyclage de ce produit sont généralement soumis à des lois et/ou directives de respect de l'environnement. Renseignez-vous auprès de l'organisme compétent.

סילוק המוצר

אזהרה!

סילוק סופי של מוצר זה חייב להיות בהתאם להנחיות וחוקי המדינה.

عند التخلص النهائي من هذا المنتج ينبغي التعامل معه وفقا لجميع القوانين واللوائح الوطنية

### 경고!

이 제품은 해당 국가의 관련 법규 및 규정에 따라 폐기되어야 합니다.

### Waarschuwing

De uiteindelijke verwijdering van dit product dient te geschieden in overeenstemming met alle nationale wetten en reglementen.

## Appendix D

### UEFI BIOS Recovery

**Warning:** Do not upgrade the BIOS unless your system has a BIOS-related issue. Flashing the wrong BIOS can cause irreparable damage to the system. In no event shall Supermicro be liable for direct, indirect, special, incidental, or consequential damages arising from a BIOS update. If you need to update the BIOS, do not shut down or reset the system while the BIOS is updating to avoid possible boot failure.

#### D.1 Overview

The Unified Extensible Firmware Interface (UEFI) provides a software-based interface between the operating system and the platform firmware in the pre-boot environment. The UEFI specification supports an architecture-independent mechanism that will allow the UEFI OS loader stored in an add-on card to boot the system. The UEFI offers clean, hands-off management to a computer during system boot.

#### D.2 Recovering the UEFI BIOS Image

A UEFI BIOS flash chip consists of a recovery BIOS block and a main BIOS block (a main BIOS image). The recovery block contains critical BIOS codes, including memory detection and recovery codes for the user to flash a healthy BIOS image if the original main BIOS image is corrupted. When the system power is first turned on, the boot block codes execute first. Once this process is completed, the main BIOS code will continue with system initialization and the remaining Power-On Self-Test (POST) routines.



**Note 1:** Follow the BIOS recovery instructions below for BIOS recovery when the main BIOS block crashes.

**Note 2:** When the BIOS recovery block crashes, you will need to follow the procedures to make a Returned Merchandise Authorization (RMA) request. (For a RMA request, please see section 3.5 for more information).




## D.3 Recovering the BIOS Block with a USB Device

This feature allows you to recover the main BIOS image using a USB-attached device without additional utilities used. A USB flash or media drive can be used for this purpose. However, a USB Hard Disk drive cannot be used for BIOS recovery at this time.

The file system supported by the recovery block is FAT (including FAT12, FAT16, and FAT32), which is installed on a bootable or non-bootable USB-attached device. However, the BIOS might need several minutes to locate the SUPER.ROM file if the media size becomes too large due to the huge volumes of folders and files stored in the device.


To perform UEFI BIOS recovery using a USB-attached device, follow the instructions below:

1. Using a different machine, copy the "Super.ROM" binary image file into the disc Root "\\" directory of a USB flash or media drive.

 **Note 1:** If you cannot locate the "Super.ROM" file in your driver disk, visit our website at [www.supermicro.com](http://www.supermicro.com) to download the BIOS package. Extract the BIOS binary image into a USB flash device and rename it "Super.ROM" for the BIOS recovery use.




**Note 2:** Before recovering the main BIOS image, confirm that the "Super.ROM" binary image file you download is the same version or a close version meant for your motherboard.

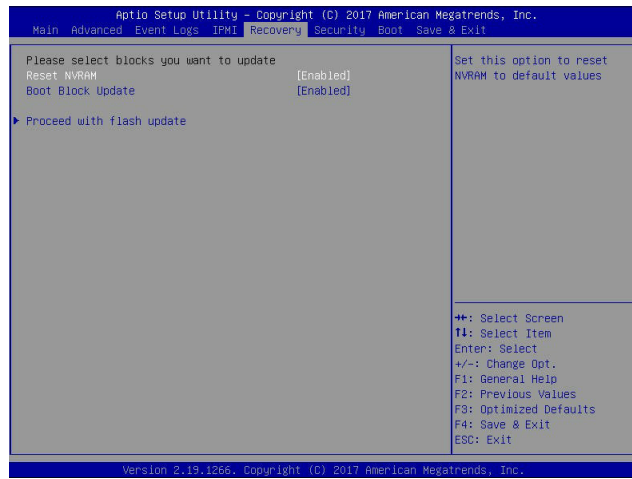


2. Insert the USB device that contains the new BIOS image ("Super.ROM") into your USB port and reset the system until the following screen appears:
3. After locating the new BIOS binary image, the system will enter the BIOS Recovery menu as shown below:

**Note:** At this point, you may decide if you want to start the BIOS recovery. If you decide to proceed with BIOS recovery, follow the procedures below.

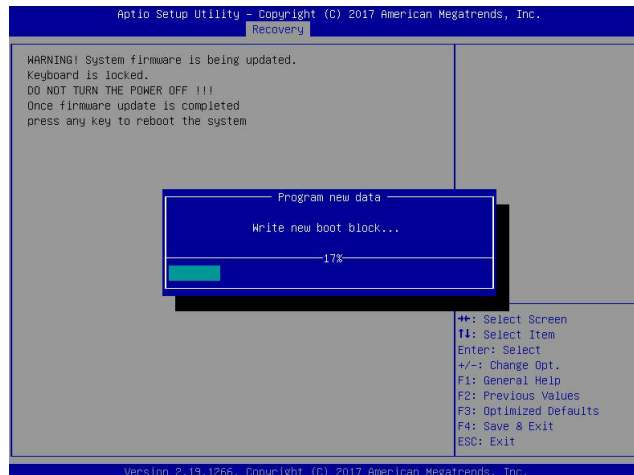


4. When the screen as shown above displays, use the arrow keys to select the item "Proceed with flash update" and press the <Enter> key. You will see the BIOS recovery progress as shown in the screen below:

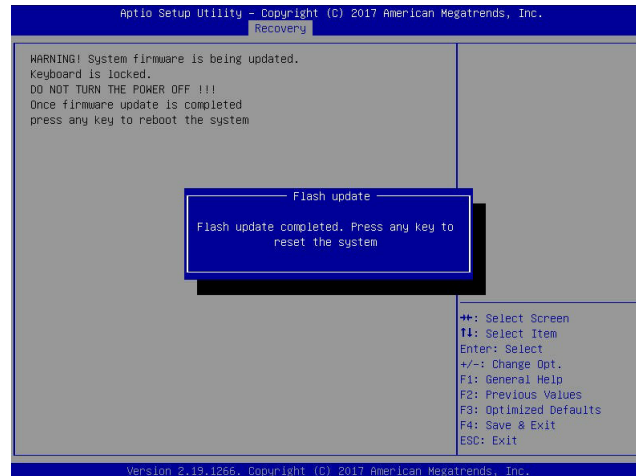

**Note:** Do not interrupt the BIOS flashing process until it has completed.

5. After the BIOS recovery process is completed, press any key to reboot the system.
6. Using a different system, extract the BIOS package into a USB flash drive.
7. Press <Del> during system boot to enter the BIOS Setup utility. From the top of the tool bar, select Boot to enter the submenu. From the submenu list, select Boot Option #1 as shown below. Then, set Boot Option #1 to [UEFI AP:UEFI: Built-in EFI Shell]. Press <F4> to save the settings and exit the BIOS Setup utility.

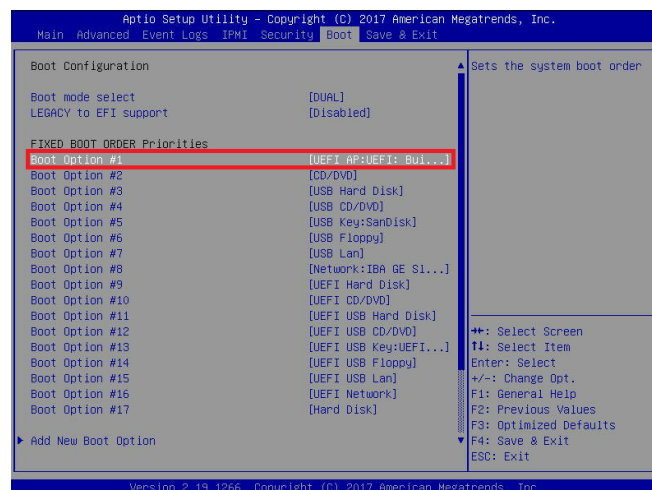

- When the UEFI Shell prompt appears, type `fs#` to change the device directory path. Go to the directory that contains the BIOS package you extracted earlier from Step 6. Enter `flash.nsh BIOSname.###` at the prompt to start the BIOS update process.

```

UEFI Interactive Shell v2.1
EDK II
UEFI v2.50 (American Megatrends, 0x0005000C)
Mapping table
  FS0: Alias(s):HD0F0B:BLK1:
        PciRoot(0x0)/Pci(0x14,0x0)/USB(0x11,0x0)/HD(1,MBR,0x3791072,0x800,0x1
DR359C)
  BLK0: Alias(s):
        PciRoot(0x0)/Pci(0x14,0x0)/USB(0x11,0x0)
Press F8 in 1 seconds to skip startup.nsh or any other key to continue.
Shell> fs#
FS0:\> cd \FUDOS
FS0:\FUDOS> cd SNIPME2_03162017
FS0:\FUDOS\SNIPME2_03162017> flash.nsh X110PU7_314
    
```

```

Done.
[ Access Cmos Port Ex ]
<read>
Index 0x51: 0x18


Done.
*
* Program BIOS and ME (including FDT) regions...
*
-----
|          AMI Firmware Update Utility v5.09.01.1317          |
| Copyright (C)2017 American Megatrends Inc. All Rights Reserved. |
-----
CPUID = 50652

Reading flash ..... done
- ME Data Size checking ..... ok
- FFS checksums ..... ok
- Check RomLayout ..... Ok.
Erasing Boot Block ..... done
Updating Boot Block ..... done
Verifying Boot Block ..... done
_Erasing Main Block ..... 0x00132000 (0x)
    
```

```

- ME Data Size checking . ok
- Secure Flash enabled, recalculate ROM size with signature... Enable.
- Upload the ME image data to BIOS ME module.... done
- Update success for FDR
- Update success for MER
WARNING : System must power-off to have the changes take effect!

Process completed.
Moving FS0:\X12SCV0.A16\fdtx64.efi -> FS0:\X12SCV0.A16\fdt.smc
- [ok]
Moving FS0:\X12SCV0.A16\afuefix64.efi -> FS0:\X12SCV0.A16\afuefi.smc
- [ok]
*****
* Please ignore this 'Shell: Cannot read from file - Device Error'
* warning message due to it does not impact flashing process.
*
*****
Deleting 'FS0:\Startup.nsh'
Delete successful.
Deleting 'FS0:\a.nsh'
Delete successful.
*****
*
* Please press any key to reset system...
*
*****
-
    
```

 **Note:** Do not interrupt this process until the BIOS flashing is complete.

- The screen below indicates that the BIOS update process is complete. When you see the screen below, unplug the AC power cable from the power supply, clear CMOS, and plug the AC power cable in the power supply again to power on the system.
- Press `<Del>` to enter the BIOS Setup utility.
- Press `<F3>` to load the default settings.
- After loading the default settings, press `<F4>` to save the settings and exit the BIOS Setup utility.